

VISSONIC

VLI Series Digital Infrared Language Distribution System User Manual V3.3



VISSONIC ELECTRONICS LIMITED

Meanings of Signs

Safety Precautions

There are signs in both the user manual and the equipments to indicate the hidden risk to your and others' personal safety and property. These signs are used to help you to operate the equipments safely and correctly, whose meanings are illustrated as bellow. Please be sure that you understand all of them before you start to operate the equipments.

	<p>This is to remind the user that all the operation should be done following the instructions mentioned in the manual, or, death and body injure may happen due to wrong operation.</p>
	<p>This is to remind the user that the dangerous internal voltage that has not been grounded may cause electricity shock.</p>
	<p>Warning: in order to avoid electrical shock, please do not open the chassis, nor put unnecessary parts inside the chassis. Please contact the qualified personnel for after service.</p>
	<p>CE Certification: means this product has already met the designated standards by the EU, and the user can use it safely.</p>
	<p>SGS Certification: this means this products has passed the test of the general quality test by the biggest surveyor in Swiss.</p>
	<p>This product has been certified by ISO9001 International Quality Organization (German Rhine TUV)</p>

General Information Indication

	<p>This is to list some content which may cause unsuccessful operation or setting and some information that should be noticed.</p>
	<p>This is to indicate the page where related theme or material can be found.</p>

Important Precautions



Warning

To ensure the proper function of the equipment and the safety of the user, please following the under mentioned instructions during installation, use and maintenance:

Installation Instructions

- Please do not use the equipment in the following environment: shaking, dusty, oily, smoky, conducting dusty, filled of corrosive gas and flammable gas. Also, please don't expose the equipment to high temperature, condensing, wind, rain. Electrical shocking, fire and wrong operation can also damage the product.
- When screwing and cabling, please don't drop the sweepings and wire leads into the controller's vent hole, or, fire, malfunction and wrong operation may be caused.
- After the installation, please be sure that the vent hole is not been blocked, or, the heat will not be yielded properly and fire, malfunction and wrong operation may be caused.
- Please don't wire or plug/unplug the cable while it's still live, or, electrical shock and circuit damage may happen.
- The installation and wiring should be stable, and the poor contact may cause wrong operation.
- In the place where sever interference exists, shielded cable should be used as the I/O cable for the high frequency signal to improve the transmitting quality.

Wiring Instruction

- Before the installation and wiring, please cut all the power supply, or electrical shock or damage to the equipment can be caused.
- This product should be well grounded before using.
- After the installation and wiring, all the sundries should be cleaned up, and the covers and panels should be put back and fixed well in order to avoid electrical shock.
- Operation and maintenance instruction
- Please don't touch the connectors when they are electrified, or electrical shock or wrong operation may happen.
- Please cut the power first before cleaning the cleaning and winding up the connectors. Operation when they are electrified can cause electrical shock.
- Please cut the power first before wiring or disconnecting the communication signal cable, extension modules or control units, or damage can be caused to the equipments.
- Please do not dismantle the equipment to avoid damages to the internal components.
- Please read this manual carefully, and ensure that all your operations are safe before changing the program, debugging the program, turning on the system and stopping the operation.
- The button cell can only be replaced when the equipment is not electrified. If the replacement has to be done with the electricity is on, it should be operated by professional person with insulating gloves on.

Product Disposal instruction

- When disposing the product, please take the following instructions:

Preface

“Digital IR Language Distribution System user manual” mainly introduces the way of operation, main specifications and the frequently seen malfunction elimination methods for VIS-VLI700A-4/-8/-16 (Digital IR Transmitter), VIS-VLI701A/B (Digital Infrared Radiator), and VIS-VLI703A-4/-8/16/-32 (Digital Infrared receiver).

This manual is provided with the intent to provide operation instructions, not for maintenance. Changes and updates may be applied to this manual after it was issued, please check with the manufacturer or your distributor for the latest version.

All rights related to this manual is reserved by VISSONIC Electronics Limited. No organization or person can use part or all of the content of this manual for business usage without permission from VISSONIC Electronics Limited.

This manual is protected by the “Copyright Law of the People's Republic of China” and other IPR protection laws, no disperse or copy is accepted without paper permission from VISSONIC Electronics Limited.

Version

Version	Update	Date
1.0		2019.4.15
2.0		2019.6.1
3.0	Adding VIS-DCP2000-D/W series , interpreter language channel and VIS-VLI700A IR transmitter operation interface.	2023.9.27
3.1	Add VIS-VLI701B features and parameters, delete 4.2 ④ language name function	2024.7.3
3.2	Modified the figure in 2.5.2	2024.8.12
3.3	Introduction and use of the newly added VIS-INT64-P Interpreter Desk	2024.11.28

Contents

Preface	4
Chapter 1 Overview	7
1.1 About.....	7
1.2 Equipments	7
1.3 System Advantages.....	8
1.4 Factors that affect the IR radiation	9
Chapter 2 Digital Infrared Transmitter	13
2.1 Overview	13
2.2 Features	13
2.3 Installation	13
2.4 VIS-VLI700A-4, VIS-VLI700A-8 ,VIS-VLI700A-16 Transmitter	14
2.5 Connection.....	15
2.6 Controls and indicators	18
2.7 Interconnection	18
2.8 Specification	18
2.9 VIS-VLI700A IR transmitter operation interface	19
Chapter 3 Digital Infrared Radiator.....	22
3.1 Overview	22
3.2 Features of Radiator.....	22
3.3 VIS-VLI701A/B Front Panel.....	23
3.4 How to allocation the system.....	23
3.5 Installation steps of radiator.....	26
3.6 Delay switch Settings	27
3.7 Installation of the radiator	27
3.8 Connection between the radiator and the transmitter	28
3.9 Controls and indicators	28
3.10Interconnection.....	29
3.11Specification.....	29
Chapter 4 Digital Infrared Receiver	30
4.1 Overview	30
4.2 VIS-VLI703A-4/8/16/32 Description	30
4.3 VIS-VLI703A-4/8/16/32 features	31
4.4 Operations of the receiver.....	31
4.5 Controls and Indicators.....	32
4.6 Interconnections.....	32
4.7 Specification	32
Chapter 5 InterpreterUnit.....	33
5.1 VIS-INT64.....	33
5.1.1 VIS-INT64 Features.....	33
5.1.2 VIS-INT64 Description.....	34
5.1.3 Descriptions of panel display	35
5.1.4 Operator	35
5.1.5 Specification	36
5.2 VIS-INT64 Setting of the language channel.....	36
5.2.1Connect to VIS-VLI700A IR transmitter.....	36
5.2.2 Connect to DCP 2000 controller.....	38
5.2 VIS-INT64-P	39
5.2.2 VIS-INT64-P Features	39
5.2.3 Description	39
5.3.3 Display panel instructions	40
5.3.4 operating mode.....	42
5.3.4 Specification parameters	43
5.4 Language channel selection	43
5.4.1. Connect to VIS-VLI700A Series Digital Infrared Transmitter	43
5.4.2Connect to Full Digital Networked DSP Conference Processor	44

Chapter 6 Accessories.....	46
6.1 VIS-TC50A Charger and Storage Box.....	46
6.2 VIS-BTPS Battery Pack.....	47
6.3 VIS-HPI Interpreter Headset.....	47
6.4 VIS-HPD Conference Headphone	48
Chapter 7 Frequently seen malfunction and maintenance.....	49

Chapter 1 Overview

1.1 About

Digital IR Simultaneous Translation System is a system using IR to transmit voice. Because light travels in straight lines, there is no signal outside of an enclosed room, thus, it has very good confidentiality. Within the room, due to the scattering and diffusion of the IR light on the surface of the wall, floor, ceiling, the IR signal will form a compact light net. As long as it is within the range where the IR light can cover, the receiver can be allocated randomly.

VIS-VLI700A-16 16 channel transmitter VISSONIC independently developed this system, which applies full-digital modulating technology. With this system, the translator simultaneously interpreting the language according to the speaker's original voice and the translated languages are transmitted to the whole meeting hall via modulated IR and can be received by the delegated with the earphone and the IR receiver with preferred channel on the language they understand.

This system can also be used for other applications, such as music distribution. It has high precision working frequency, stability, high confidentiality, and is interference and eaves-dropping proof. This system can be applied in international meetings halls from small to large scale, or in multi-language education organizations.

1.2 Equipments

VISSONIC language distribution system include:

Digital IR Transmitter

VIS-VLI700A-4 4 channel transmitter
 VIS-VLI700A-8 8 channel transmitter
 VIS-VLI700A-16 16 channel transmitter

Digital IR radiator

VIS-VLI701A
 VIS-VLI701B

Digital IR receiver

VIS-VLI703A-4 4 channels receiver
 VIS-VLI703A-8 8 channels receiver
 VIS-VLI703A-16 16 channels receiver
 VIS-VLI703A-32 32 channels receiver

Full digital interpreter desk

VIS-INT64 Full Digital 64 Channels Interpreter Desk
 VIS-INT64-P Digital 64 Channels Interpreter Desk Pro with IC Card

Interpreter Headset

VIS-HPI for interpreter unit

Charger and Storage Box

VIS-TC50A charger and storage box for Digital infrared receiver

The system can be composed of one or more of the above mentioned equipment.

1.3 System Advantages

Digital IR Language Distribution System includes transmitter, radiator, IR receiver and charging box. The transmitter encoding the audio signal, compresses, modulate it to many carrying waves and then transmit it to the radiator. The radiator emits the carrier signal via IR light. The IR receiver receives, modulates and converts the signal into audio output or other data. They have the following advantages:

- Apply simultaneous interpretation

It is important to allow every delegates hear clearly in a multi-language conference system, thus, a simultaneous interpretation system is a necessity. The translators translate the original language, then the translated language is distributed all over the whole meeting hall and the receiver select the language they need and can hear it with the earphone.

- Using IR to transmit

IR is part of the electromagnetic radiation spectrum, which includes visible light, radio wave and other radiation wave. The wave length of IR is longer than the visible light, thus, IR cannot penetrate the walls and ceiling. In this way, the confidentiality of the meeting can be ensured, tapping and interference can be avoided. VISSONIC's IR Simultaneous Translation System uses the IR modulated by DQPSK to transmit the signal. At the same time, this system also needs radio frequency permission.

- Advanced digital technology

Full-digital DQPSK modulation technology has been used to gain high frequency usage and strong anti-interference ability. The system applies full-digital audio processing technology to ensure the high audio quality, eliminate overhearing between channels and noise etc.

- Free from the interference of fluorescent light

The traditional IR Simultaneous Translation System is easily interfered by the fluorescent light. VISSONIC has applied unique technology and has solved this problem thoroughly. It works on 2-6MHZ frequency, and avoided the interference from various kinds of lighting sources.

- Flexible channel selection

VISSONIC has left huge flexibility to the users while designing the channels, and has provided 32 general quality audio channels. (31 different translation channel + 1 original voice). The general quality channels take smaller bandwidth and can be used to transmit audio signals.

- Flexible and convenient using methods

Using the IR system gives the delegates the freedom of going around the whole meeting room., because the signal transmit in the air, and the system has no physical connection, thus the activities can only be limited by the walls of the meeting room. The IR receiver is light and delicate, which can be put in the pocket of the user's T-Shirt or coat.

- Simple Installation and maintenance

The system is easy to install (the time it takes depends on the allocation and correction of the radiating panels). The only job to be done is connect the equipments together, and maintenance is just charging.

Once the installation is finished, the system can be expanded any time. If the meeting scale enlarges, what have to be done is just add more IR receivers in to the system, and the basic structure doesn't have to be changed.

1.4 Factors that affect the IR radiation

1.4.1 The directivity of receiving and emitting

VISSONIC digital IR distribution system has wide receiving angle, which can allow the receiver to get perfect sound quality no matter how they are placed. Please check Fig.1-1.

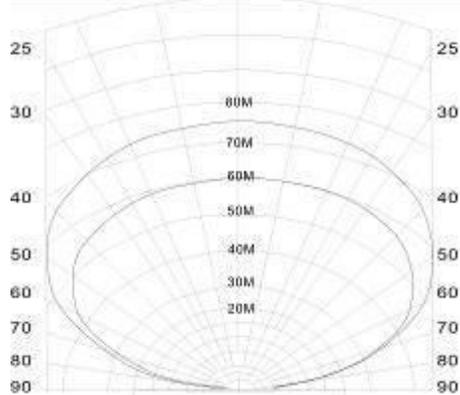


Fig1-1 radiator coordinate illustration

VISSONIC radiating panel’s cover area is an ellipse, which means as the distance gets larger, the dimension of the radiation area gets larger till a certain limit is reached. Please check the Fig.1-2 “radiating panel coordinate illustration.”

1.4.2 The relation between the radiator and the seats arrangement

If the receiver is accurately directed to the radiating panel, the receiver can get the best effect signal. If the radiating panel or the receiver gets off the light axis, the received energy will descend. But within, as long as there is no direct screen between the receiver and the radiating panel (for example screened by the delegate’s body or other objects), the energy can still be sufficient.

To ensure the best signal transmission, the allocation of the radiating panels has to be suited to the seats’ positions. The ideal way is to have the radiating panel emit directly onto the seats. This is one way of designing the installation solution.

Obviously, we should prefer the way of installation shown in Fig.1-3. But in actual installation, the way shown in Fig.1-3 can hardly be achieved, and then, we need employ the help of reflection to achieve the full cover of the signal. In Fig. 1-4, this delegate’s receiver can not only receive the direct emit from the radiating panel but also the reflected signal from all directions. In this situation, the reflected signal can strengthen the signal. In Fig.1-5, this delegate receives only reflected signals, and the signal he gets in this situation is relatively weaker, but sufficient enough. In order to avoid people’s screening of the IR signal, the installation height of the radiating panel should be higher than 2.5m.

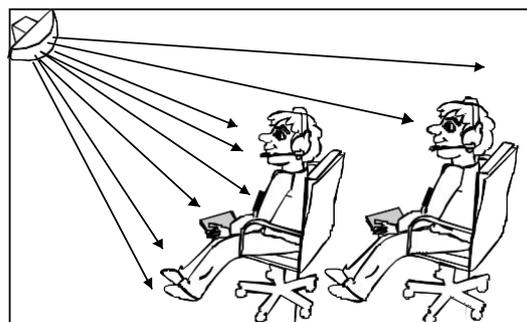


Fig.1-2 radiator coordinate illustration

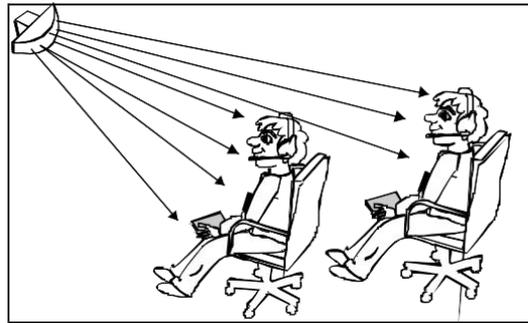


Fig.1-3 installation without obstacles

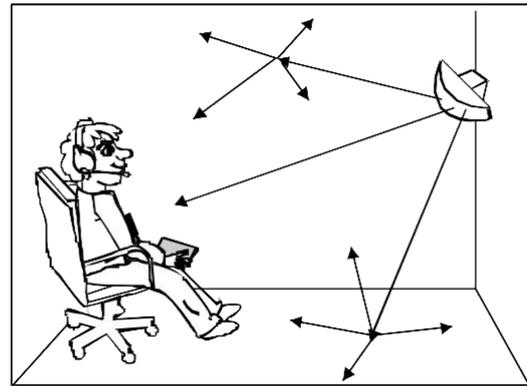


Fig.1-4. Direct emission and reflect

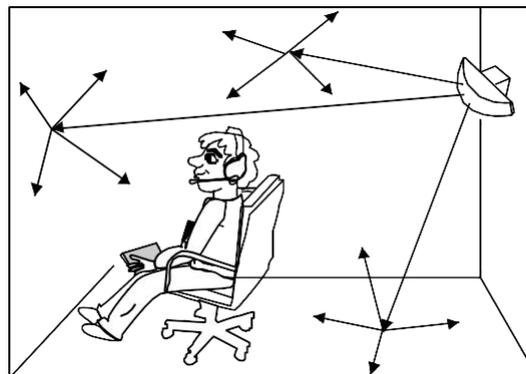


Fig. 1-5 Reflect

1.4.3 The surface of the walls, ceiling, floor and curtain

IR is just like visible light, and can be reflected by shining, smooth surface and absorbed by dark, rough surface. The reflected light generally can help by transmitting signals, and won't cause any damaging interference. In a room with shining, smooth surfaces, the required power of the radiating panel is lower than the room with dark, rough surfaces, as curtain and carpet.

Otherwise, the reflecting effect can be very different when the texture of the floor is different: the shadow of the walls and furniture can interfere the IR transmitting. But if we use enough radiating panels and allocate them properly, this problem can be solved. At the same time, it should be noticed that the radiating panels cannot be positioned to face the windows without curtains, which can reduce the radiating effect. As shown in Fig. 1-6, there is difference in the reflection effects for floors of different texture.


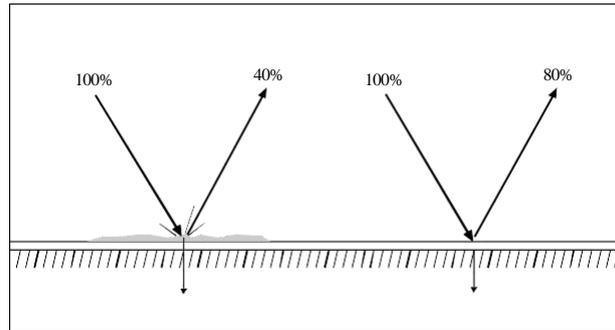


Fig. 1-6 there is difference in the reflection effects for floors of different texture


1.4.4 The coverage of the radiating panel

In the system, the coverage is decided by radiating controller's carrier wave and the radiating panel's output power, and the coverage will be enlarged when there are more radiating panels. The radiating panels' total radiant intensity is allocated in the controller according to the amount of the carrier wave, and when the used carrier wave increase, the coverage's percentage will decrease accordingly.


As shown in the following figure (the white part),the crossing area of the radiation allocation area and the receiving area of the people's receiver is the coverage. Within the coverage area, if the radiating signal can reach the receiver directly, the intensity of the direct signal can be enough to be received. Here the following are some illustration figures for installation for your reference:

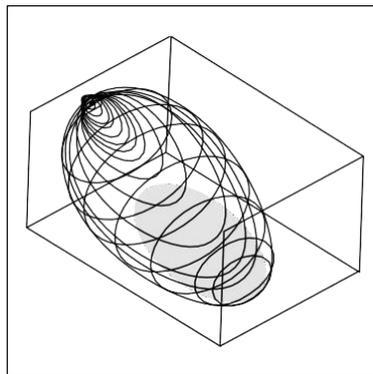

15°installation figure

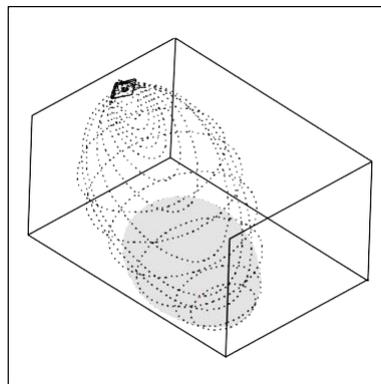


45°installation figure

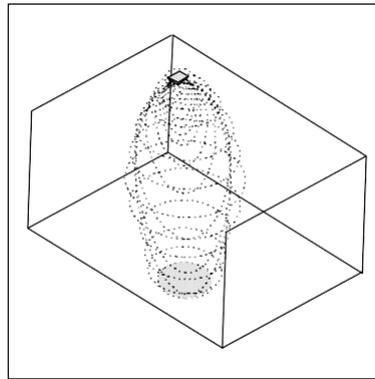

90° installation figure


1.4.5 Floor area of overlapping and multi-path effects

The installed radiation board in meeting room, if was overlapping, the overall coverage may be greater than the radiation of two separate panels. Radiation intensity is greater than the area needed.(As shown in the Figure)

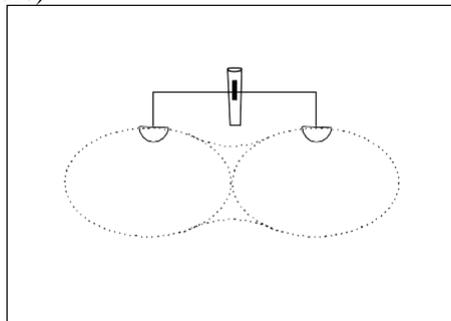

The added area increases the coverage

The receiver machine receive signal from many radiation boards. It may be offset by delay, or can't receive signal at all. Signal delay can be compensated by radiating panel switch delay compensation.

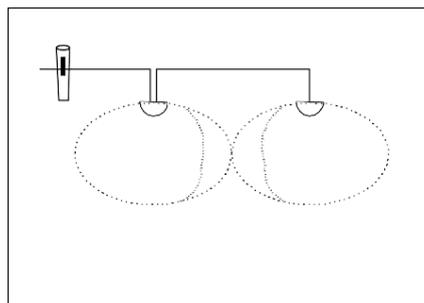

The signal delay reduces the coverage area

Chapter 2 Digital Infrared Transmitter

2.1 Overview

VIS-VLI700A-4/-8/-16 IR transmitter is the main part of the digital IR distribution system. To transfer the simulation audio, compress code, full digital DQPSK transfer. The system can send 16 kinds of languages. IR transmitter can be installed on 19-inch standard rack, the easy storage and safekeeping.


2.2 Features

1. Compliant to IEC 61603-7 and IEC 60914
2. Compatible with any other IR simultaneous interpretation system compliant to IEC 61603-7
3. DQPSK digital modulation/demodulation technology
4. Transmitting in 2~8 MHz frequency band eliminates disturbance from high frequency lighting systems
5. Capable of distributing a maximum of 4,8,16 or 32 audio channels
6. Auxiliary mode for distribution of music to all channels during a break
7. Slave mode for distribution of signals from another transmitter allows multiple rooms to be used
8. Radiator and system status indication via display and indicators
9. Each transmitter can be assigned a unique name by the installer for easy identification in a multi-transmitter system
10. Automatic distribution of emergency messages to all channels
11. Automatic synchronization to the number of channels in use by the CLEACON system
12. Each audio channel can be assigned a language name for easy identification
13. Adjustable sensitivity for each input to enable fine tuning of audio levels, support levels indicating of audio input channel quality modes: Mono, standard quality, maximum 16 channels Mono, perfect quality, maximum 8 channels Stereo, standard quality, maximum 8 channels Stereo, perfect quality, maximum 4 channel
14. With 16 interpretation output channels for recording
15. Universal mains power facility allows worldwide use
16. Conference hall privacy; the congress venue itself acts as a barrier to infrared signals escaping and being overheard, as infrared is unable to pass through opaque objects such as walls
17. Suitable for various kinds (small/medium/large international) of conference halls and outdoor venues
18. Support the interpreter unit connection directly (by optional firmware VIS-VLI700-FW)
19. Support 16 channel analogue audio input and 16 channels analogue audio output.
20. Support 2 transmitters can work as master and slaver mode for 32 channel language distribution
21. Support optional Dante port for connecting to Dante network
22. Flexible configuration of channels and+channel quality modes: Mono, standard quality, maximum 16 channels Mono, perfect quality, maximum 8 channels Stereo, standard quality, maximum 8 channels Stereo, perfect quality, maximum 4 channel

2.3 Installation

The system controllers are made of metal and work with many other equipments.

Furthermore, the system controller can also be installed on standard 19'' cabinet, as shown in the following figure.

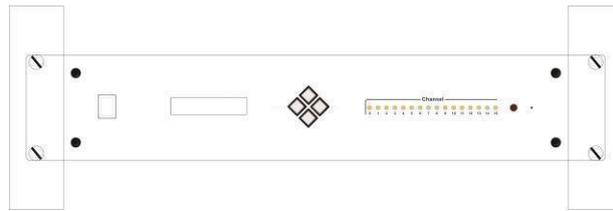

2.4 VIS-VLI700A-4, VIS-VLI700A-8, VIS-VLI700A-16 Transmitter



Front panel

- ① Power On/Off
- ② LCD display to show the setting menu
- ③ Menu button
- ④ Channel input status
- ⑤ Small radiator window
Small window is transmitting the same infrared signal as the radiator output for monitor purpose
- ⑥ Monitor headphone jack

Rear panel

- ⑦ Audio signal Input 4, 8, or 16 audio connectors to connect external audio input signals. The number of connectors depends on the transmitter model. Audio signal output
- ⑧ Audio signal output 4, 8, or 16 audio connectors. The number of connectors depends on the transmitter model. System Power Indicator
- ⑨ Ground screw Connect the processor unit to the ground
- ⑩ Auxiliary audio L input Female XLR connectors for external audio inputs to connect auxiliary balanced audio signals such as music, floor language
- ⑪ Auxiliary audio R input
Female XLR connectors for external audio inputs to connect auxiliary balanced audio signals such as music, floor language or emergency audio signal
- ⑫ Fire alarm linked trigger interface
When this switch is closed, the emergency audio signal on the Aux-R input is distributed to all output channels and overriding all other audio inputs
- ⑬ HF signal input

1 BNC connector for receiving HF signal from other transmitter

⑭ HF signal output

6 BNC connectors for output HF signal to radiator. To each connector, up to 30 radiators can be connected

⑮ AUDIOLINK port

Connect to the conference main unit

VIS-DCP2000 series or connect to the interpreter unit VIS-INT64

⑯ Dante

Connect to the Dante network, support maximum 8 ch digital audio in or 8 ch digital audio out

For communication between the conference main unit and the PC under TCP/IP protocol to realize Web server and remote controlling; furthermore, it enables remote controlling by wireless touch panel through central control system

⑰ Ethernet

⑱ RS232

For connecting to a central control system for central controlling

⑲ Power inlet

support AC100V-240V 50Hz/60Hz, self-adaptive.


2.5 Connection

Typical system connection includes:

- to CLEACON series full digital networked DSP conference system
- to interpreter unit
- to external audio sources
- to emergency signal switch
- to another transmitter


2.5.1 To CLEACON full digital networked DSP conference system

The transmitter can be directly connected to the AUDIOLINK network of the CLEACON full digital networked DSP conference system. Use an CAT5 cable to connect one of the AUDIOLINK sockets of the transmitter to the CLEACON network (see the next figure). The network mode must be enabled with the configuration menu.

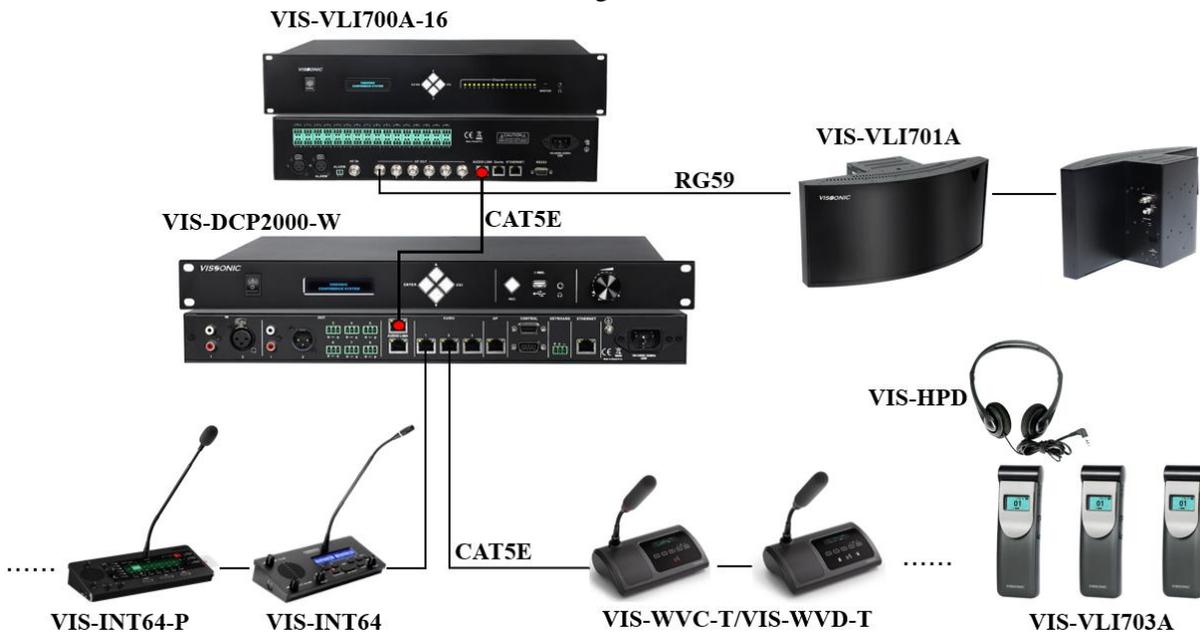

2.5.2 To the interpreter


The transmitter can be directly connected to the interpreter unit VIS-INT64 or VIS-INT64S by AUDIOLINK, but the power adaptor is necessary for the first interpreter unit connected from the transmitter unit. The power consumption is 9W, when the speaker of interpreter unit is on. The power adaptor is DC48V 3A. It is necessary to calculate power for connecting the sum of all interpreter unit and power loss of extension cable.

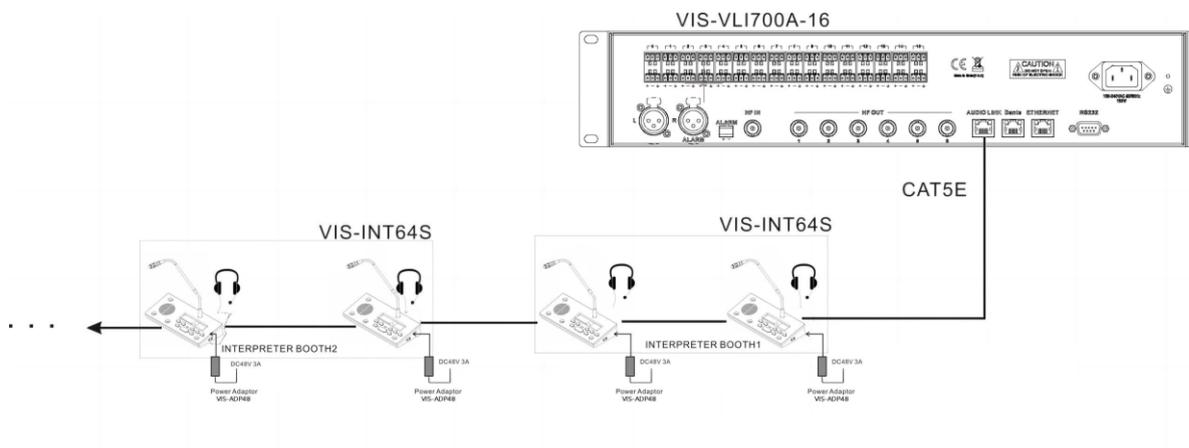

The DCP 2000 can directly supply power to the interpreter unit, so no additional power supply is needed. The connection is made through the network cable by CU/DU behind the controller, and the connection of subsequent interpreter units can be made through the cascade.

2.5.3 To the external audio source


The transmitter has up to 32 audio inputs (depending on the transmitter type and work mode) to interface with external asymmetrical audio sources, such as congress systems from other manufacturers or for music distribution. The audio signals (stereo or mono) are connected to the audio input 3pin connectors.

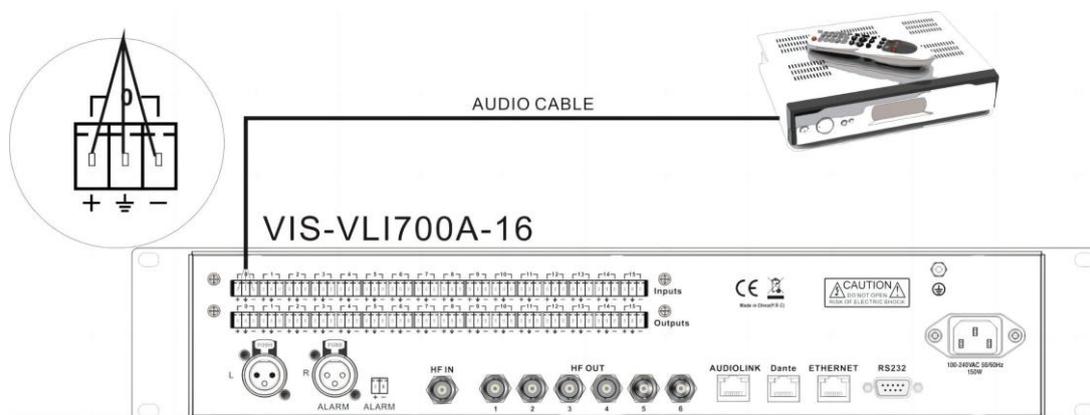

2.5.4 To the emergency signal switch


To use emergency function, fire alarm linked trigger interface (normally open) must be connected

to the emergency switch connector. When the switch is closed, the audio signal on the Aux-Right input is distributed to all output channels and overriding all other audio inputs. “ALARM” will be displayed on the LCD at this moment.

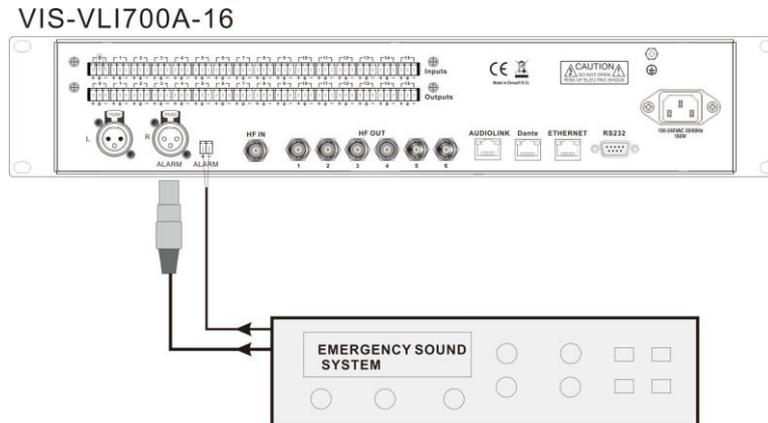


2.5.5 To another transmitter

Max. 7 transmitter can work as master and slave mode for distribution language on multiroom. The transmitter can be operated in slave mode to loop-through the IR radiator signals from a master transmitter. One of the six radiator outputs of the master transmitter is connected with an RG59 cable to the radiator signal loop-through input of the slave transmitter. The Transmission mode of the slave transmitter must be set to ‘Slave’.

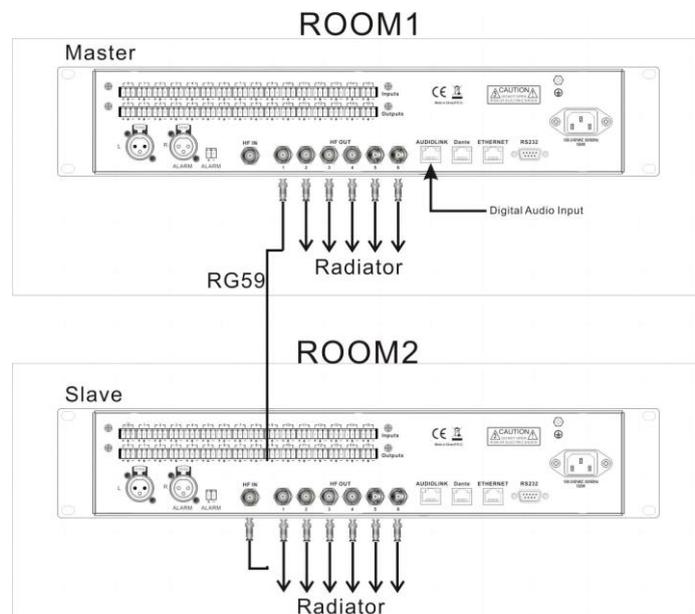

Two transmitters can work as a 32 channels distribution system. The transmitter can be operated in serial mode to loop-through the IR radiator signals from a master transmitter. One of the six radiator outputs of the master transmitter is connected with an RG59 cable to the radiator signal loop-through input of the serial transmitter. The Transmission mode of the serial transmitter must be set to ‘Serial’.

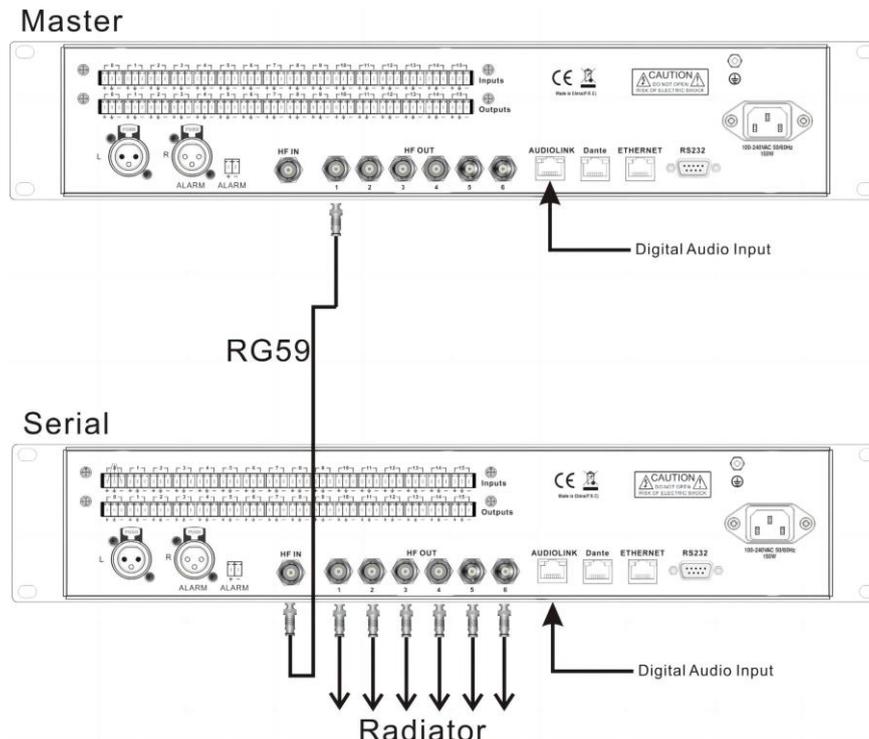

2.6 Controls and indicators

- Power switch
- Graphic LCD with back-lighting displays status and menu of the system configuration, supporting multi language menu
- Four buttons for configuration
- Channel active indicators

2.7 Interconnection

- 2female XLR connectors for external audio inputs to connect auxiliary balanced audio signals such as music, floor language or emergency audio signal
- 16 audio signal output connectors (phoenix sockets) for output multi-channel audio
- 16 audio signal input connectors (phoenix sockets) to connect external unbalanced audio input signals
- 6 BNC connectors for output HF signal to radiator. To each connector, up to 30 radiators can be connected
- 1 BNC connector for receiving HF signal from another transmitter
- Audio-Link Port for connecting to Interpreter Unit(optional firmware VIS-VLI700-FW) or VIS-DCP2000
- DANTE port for connecting to Dante network for the digital audio(Optional VIS-DANTE module)
- Ethernet and RS232 ports for connection to computer
- Emergency signal interface: when the public emergency system is active, alarm signal can be fed to all channels automatically
- Power supply socket

2.8 Specification

System Specifications

ModulationDQPSK, according to IEC 61603-7

Modulation frequency.....	2 to 8 MHz
Carriers 0 to 5:2 to 6 MHz, according to IEC 61603-7	
Frequency response.....	20 Hz to 10kHz (-3dB) at standard quality;20 Hz to 20 kHz (-3dB)at perfect quality
THD at 1 kHz	<0.05%
Isolation	>80 dB
Dynamic range	>90 dB
Weighted SNR.....	>85 dBA

Electrical

Unbalanced audio inputs-12 dBVto +12 dBV nominal
Balanced audio inputs.....	..-6 dBV to+18 dBV nominal
Emergency switch connector	2-PIN 3.81 mm
Phoenix connector, alarm signal control input	
Headphone output.....	32 Ohm to 2kOhm
HF input/output	75 Ohm
Power supply	AC 100 V - 240 V, 50 Hz / 60 Hz
Power consumption	Maximum 25W

Mechanical

Mounting	Brackets for 19" rack
mounting or fixing to a table top; detachable feet for free-standing use on a table top	
Dimensions h x w x d (mm).....	88 x 483 x 266
Weight	7.5 kg
Color.....	Black


2.9 VIS-VLI700A IR transmitter operation interface

①Turn on the switch button to access the main interface



②Press the "ENTER" to enter the menu screen. Then press the "▼" key to stroll down, Total Channel/AudiQuality/Audio Monitor/IR Setting/Auto Floor/Download, Default/Version, will be displayed in order. You can press "ENTER" again to select a menu item, and press "ESC" to exit the menu interface.


③Enter the "Audio Quality" settings by pressing "ENTER". Press the "▼" to choose between SQ (Standard Quality) and HQ (High Quality). Press "ESC" to exit the setting.

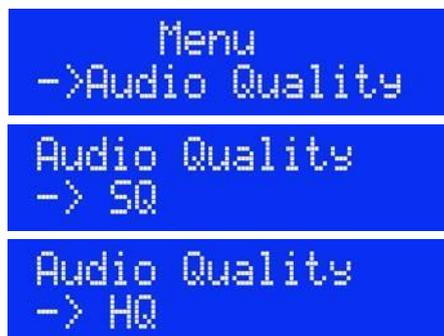

④ Press "ENTER" to access the "Channel Monitor" interface. The audio monitoring interface offers a selection of 16 channels ranging from 0 to 15 for audio monitoring. Press "▲" or "▼" keys to choose the channel number, and it supports continuous scrolling by holding down the button. Press "ESC" to exit the setting.



⑤ Press "ENTER" to access the "IR Setting" interface. Press "▼" to select the maximum channel count from options like Off, 16, 8, or 4. Press "ESC" to exit the setting.

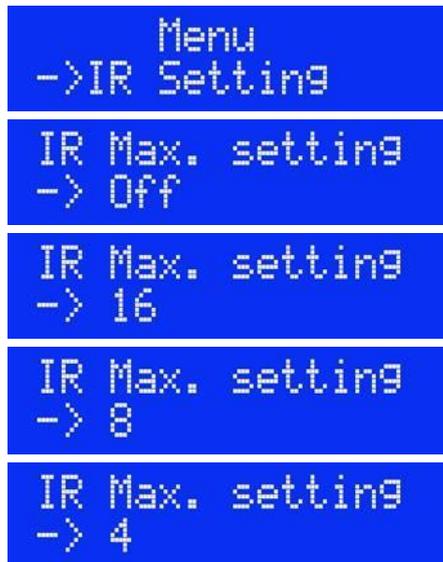

⑥ Press "ENTER" to enter the "Auto Floor" interface, where you can choose between "On" and "Off" settings. Enabling this option allows each channel that has been configured to transmit the original audio. Press "ESC" to exit the setting.



⑦ Press "ENTER" to access the "Download" interface, where you can choose between two modes: Run (operational mode) and Host (host upgrade mode).

```

Menu
->Download

Download:Run
->Host
    
```

In the "Host" interface, press 'ENTER' to switch to "Download: Host" for host upgrade mode. Turn off and on the power to access the upgrade interface, using the rear-panel Ethernet interface.

```

Download:Host
->Host

Host Download!
    
```

If you need to return to the operational mode, reset it to 'Download: Run.' In the 'Run' interface, press ENTER, then turn off and on the power to restore the operational mode.

```

Download:Run
->Run
    
```

⑧ Press "ENTER" to enter the "Default" interface for viewing. Press "ENTER" again to restore factory settings and return to the main interface. Press ESC to exit directly.

```

Menu
->Default

Enter -> Defaut
ESC -> Exit
    
```

⑨ Press "ENTER" to access the "Version" interface to check the version number of the host. As shown in the illustration below, you can press ESC to exit.

```

Menu
->Version

Digital IR Host
Version: 1.3
    
```

Chapter 3 Digital Infrared Radiator

3.1 Overview

The radiator is high power IR radiating equipment used to receive the carrier wave signal from the IR system controller and emit the signal in the form of IR. It support hand-in-hand connection and there can be maximally 30 radiating panels connected together.




- Cable delay compensation for differences in cable lengths between transmitter and radiators
- Half-power / full-power the operating mode can be selected with a switch
- Synchronization on/off with transmitter
- Connection to connect further radiators in a daisy chain

3.2 Features of Radiator

- Compliant to IEC 61603-7 and IEC 60914
- Compatible with any other IR system compliant to IEC 61603-7
- High power to achieve further coverage of signal
- Maximum radiation range up to 76 meters.
- Cable delay compensation for differences in cable lengths between transmitter and radiators
- Half-power / full-power the operating mode can be selected with a switch
- Synchronization on/off with transmitter
- Standby, working, failure status can monitor by inside lights condition
- Connect further radiators in a daisy chain
- Radiation angle $\pm 25^\circ$
- When the temperature of the radiator is too high, the system will automatically switch from full power to half power.
- For the use in conference rooms, even in daylight

3.3 VIS-VLI701A/B Front Panel

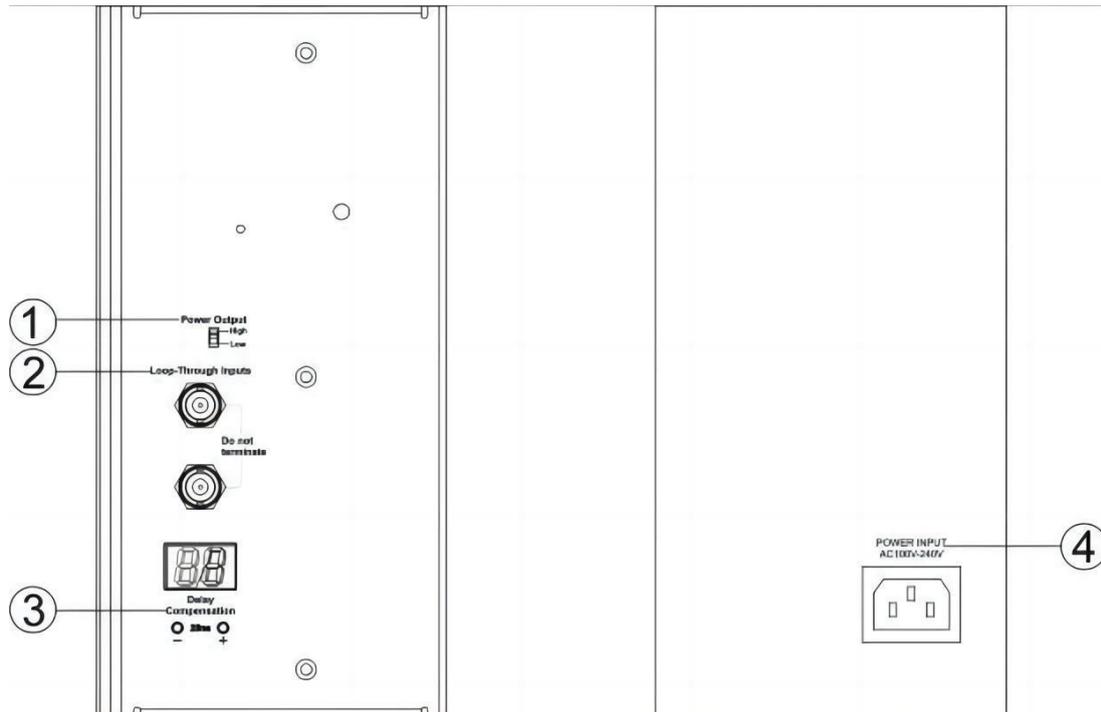

① POWER OUTPUT

Switch for the power of the radiated signal.

② LOOP-THROUGH INPUTS

Connected to the system controller's SIGNAL OUTPUTS interface or the former IR radiating panel's output interface.

③ DELAY COMPENSATION*25

Delay composition adjusting button, “+” is to delay increase, “-“ is to delay decrease. The value for adjusting will be displayed on the LCD above the button.

Delay composition range: 00~99, that is, from 0 (0*25) ns to 2475ns (99*25)

Cable delay coefficient:5.6ns/m, please refer to the cable’s specifications for details.

 3.6 “settings of the delay button”

④ Power input interface: AC100V~240V50Hz/60Hz input

3.4 How to allocation the system

3.4.1 The installation of the radiator

The IR can reach the receiver by direct reflection or diffused reflection. In a conference hall, the delegates who sit behind others will not receiver IR signal if it has been screened by the front row of seats, which has to be taken into consideration when allocating the radiator. Thus, when the radiator should be installed as high as possible, and generally the height should be more than 2.5m and the radiator should face the whole conference hall from various directions to make sure their radiating area can cover the whole place.

If the radiator are installed highly enough, the signal intensity of the received IR signal will not decreased to zero in the shadow area, because IR can be reflected (same as the visible light).

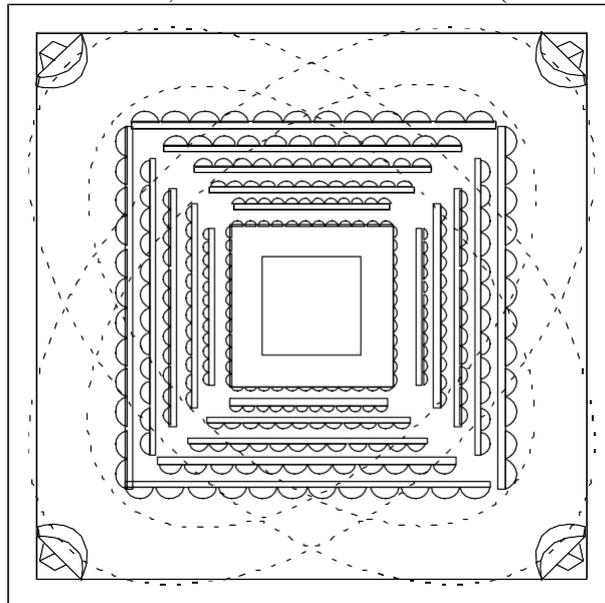


Fig.3-1 Square IR coverage

When the radiator cannot be installed onto the existing ceiling, walls or bearing structures, they must be installed according to the above mentioned rules to ensure the proper signal transmission.

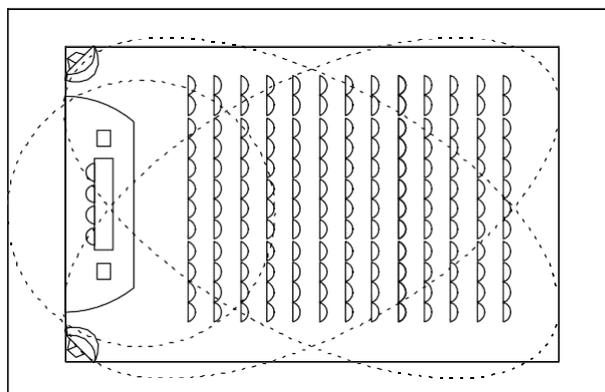


Fig.3-2 Audience seats and chairman seats coverage

If there are IR barricades in the room, extra radiator should be added to increase the radiation to ensure the normal transmission of the signal.

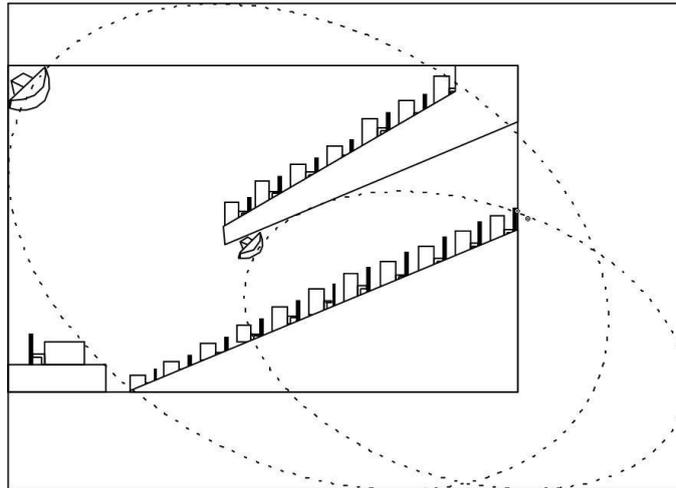


Fig. 3-3 “IR Coverage in “blind Area”

3.4.2 Wiring of the radiator

The signal’s delay can be caused by the distance difference between the system transmitter to the different radiator. In order to avoid “blind spot”, please choose the cables that are of same length. The cable delay can be compensated via the signal compensation button inside of the radiating panel.

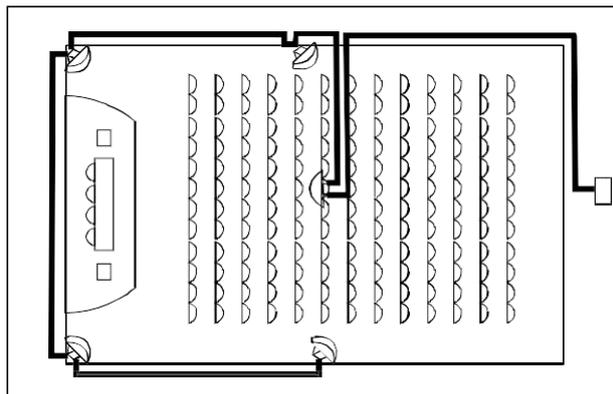


Fig.3-4 Non-symmetrical connection, should be avoided

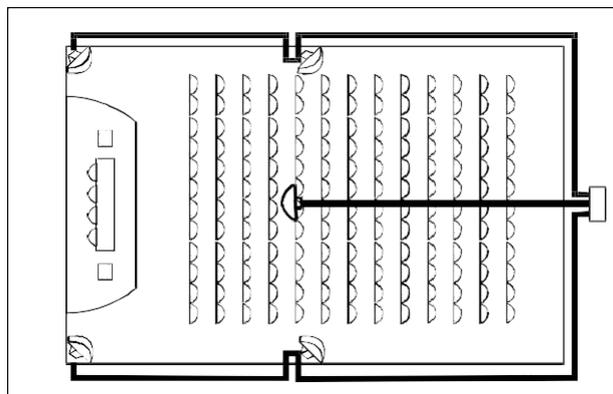


Fig.3-5 symmetrical connection (preferred)

3.4.3 Rectangle Coverage

The actual required number of the radiator can only be determined by field test, but using “rectangle coverage” can ensure a very close guess.

Fig.3-6 and Fig.3-7 explain what is the “rectangle coverage”, from which we can see that the rectangle coverage is smaller than the total coverage. Notice: in Fig.3-7, “deviation value” X is negative and the rectangle coverage is actually bigger than the actual coverage.

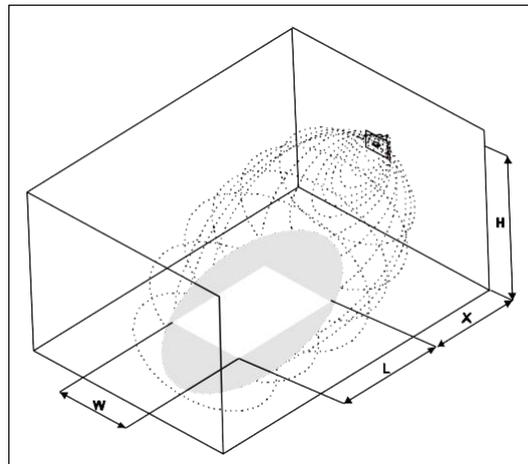


Fig.3-6 15° installation: typical rectangle coverage

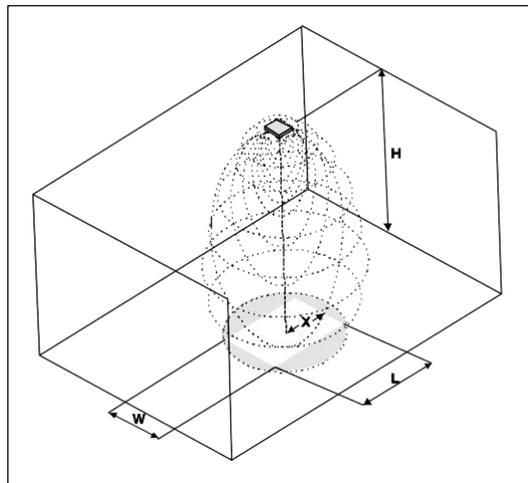


Fig. 3-7 90° installation's typical rectangle coverage


3.5 Installation steps of radiator

- Take the instructions mentioned in section 1.4 to decide the positions of the IR radiator
- Draw out the rectangle coverage in the layout draft of the room
- If there are some areas which can receive signal from two neighbor radiating panels, it means that there is eclipsing effects. Draw out the enlarged rectangle coverage in the layout draft.
- Check whether the radiator have full coverage to certain spots; and if not, extra radiator should be added.

3.6 Delay switch Settings

In section 1.4.5, there is “overlapping multi-path effect”: the receiver receive signal from two or more radiating panels, and “blind spots” can be caused due to delay difference.

In order to compensate the delay difference, the delay switch on the side of the radiator can be set to increase the corresponding panel’s delay. The LCD can display from 00 to 99, and the digit is timed by 25ns, ie. The delay time can be set is from 25ns to 2475ns (99*25).

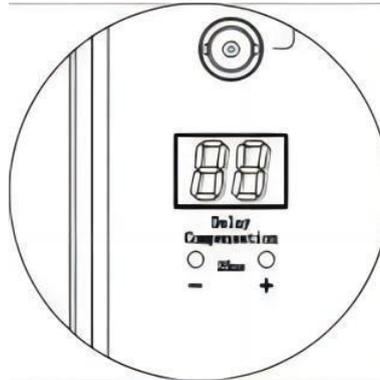

3.6.1 How to calculate the delay

When there is only one transmitter and all the radiator are connected to the transmitter with the cables that are of same length, there is no delay to be considered. Under this situation, all delay switches on all the radiator should be set as 00, and the need of delay signal should be confirmed. Use the delay of the radiator whose distance to the transmitter is the farthest, and then use “+” and “-“ to adjust the delay of the other radiating panels to make sure every radiator have the same delay.

Formula:
$$X = \frac{(L_{MAX} - L) \times 5.6}{25}$$

- Cable delay coefficient 5.6ns/m;
- X: The displayed delay compensation factor
- L MAX-L: The max distance (meter) between the transmitter and the radiator;
- L: the distance between the radiator land the transmitter(meter);


Follow the steps to measure the length of the cables to determine the settings of the delay switch:

- Measuring the cable length from the distribution host to each radiation board L;
- Make sure the maximum distance from the distribution host to each radiation board LMAX;
- Calculate the difference from L to LMAX;
- Cable length with a calculated by multiplying the cable signal delay difference between the rate of radiation on each radiator can be drawn to the cable signal delay difference;
- In addition to the signal delay in 25 poor, in addition to be an integer (rounded) radiator delay compensation switches to set parameters;
- If necessary, to overlapping coverage areas, away from the overlapping coverage area closer to the delay of radiator switch settings parameters do increase, as the radiation signal delay compensation;
- In accordance with the calculated setting parameters to set the delay switch.

3.7 Installation of the radiator


Infrared radiator can be installed on walls or ceiling, with the package with a mounting bracket

and screws, install as shown below:

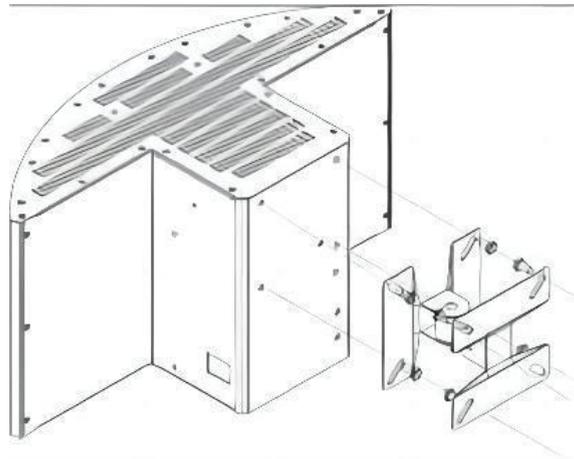

In determining the installation location before, need to ensure smooth airflow around the unit of radiation, radiator to avoid the phenomenon of high temperature.

3.8 Connection between the radiator and the transmitter

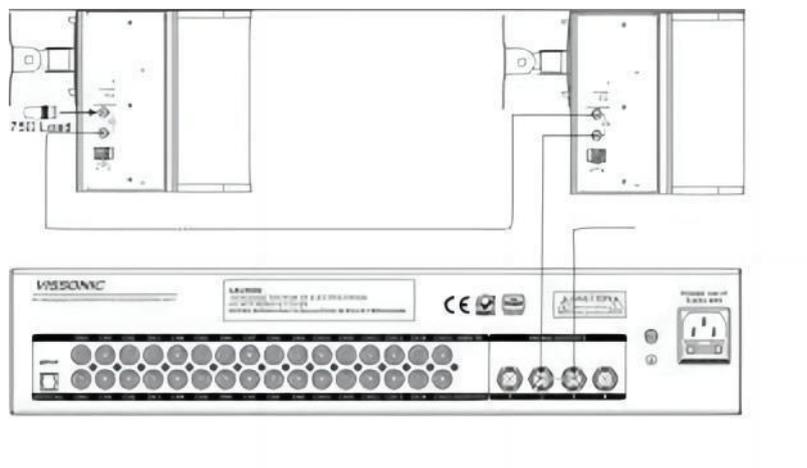

Attention: When cascading the radiator, the BNC connector of the last radiator in the cascading chain which is left unused should be connected to a load resistance of 75Ω in order to match the impedance to avoid signal reflex.

3.9 Controls and indicators

- Input signal indicated with the radiation LED
- Output power switch
- Delay compensation LCD
- Delay compensation buttons(-/+)

3.10 Interconnection

- HF input and output connectors(2 x BNC) for connection to transmitter and loop-through to other radiators

3.11 Specification

VIS-VLI701A

Electrical and optical

Modulation	DQPSK, according to IEC61603-7
Modulation frequency	
Carriers 0 to 5	2 to 6 MHz, according to IEC 61603-7
Carriers 6 to 7	Up to 8 MHz
Angle of half intensity	$\pm 25^\circ$
HF input	Nominal 1 V _{pp} ,75 Ohm
HF output.....	1 V _{pp} ,6V DC,75Ohm
Power Supply	100V-240V AC 50/60Hz
Power consumption operating	36W
Power consumption standby	3W
Number of IR receiver modules	286
Number of IREDS	286
Total optical peak intensity	14.3W/sr
Automatic switching-on voltage Level	100mV Radiating signal
Radiation distance	76m

Mechanical

Mounting	Wall mounting bracket VIS-RAM1, ceiling mounting, mounting plates for floor stands.
Dimension (mm).....	453Lx230Wx208H
Weight	7KG
Color.....	Deep Grey

VIS-VLI701B

Electrical and optical

Modulation	DQPSK, according to IEC61603-7
Modulation frequency	
Carriers 0 to 5	2 to 6 MHz, according to IEC 61603-7
Carriers 6 to 7	Up to 8 MHz
Angle of half intensity	$\pm 25^\circ$
HF input	Nominal 1 V _{pp} ,75 Ohm
HF output.....	1 V _{pp} ,6V DC,75Ohm
Power Supply	100V-240V AC 50/60Hz
Power consumption operating	116W
Power consumption standby	6W
Number of IR receiver modules	540
Number of IREDS	540
Total optical peak intensity	27W/sr
Automatic switching-on voltage level	100mV Radiating signal
Radiation distance	76m

Mechanical

Mounting	Wall mounting bracket VIS-RAM1, ceiling mounting, mounting plates for floor stands.
Dimension (mm).....	480Lx200Wx300H
Weight	7.8KG
Color.....	Deep Grey

Chapter 4 Digital Infrared Receiver

4.1 Overview

Using the latest electronic technology, the use of specialized chips to ensure the best performance and longest battery life, according to ergonomic design of the infrared receiver to receive IR signals can be very good. With channel selection functions and volume level adjustment function, the power switch control, and battery power, signal indicator, when the receiver receives less than 5 minutes continuous signal or unplug the headphones will automatically shut down after 5 minutes.

VISSONIC produces several types of digital infrared receiver:

VIS-VLI703A-4 4 channels IR receiver


VIS-VLI703A-8 8 channels IR receiver

VIS-VLI703A-16 16 channels IR receiver

VIS-VLI703A-32 32 channels IR receiver

All receivers support rechargeable battery or regular AA battery

4.2 VIS-VLI703A-4/8/16/32 Description

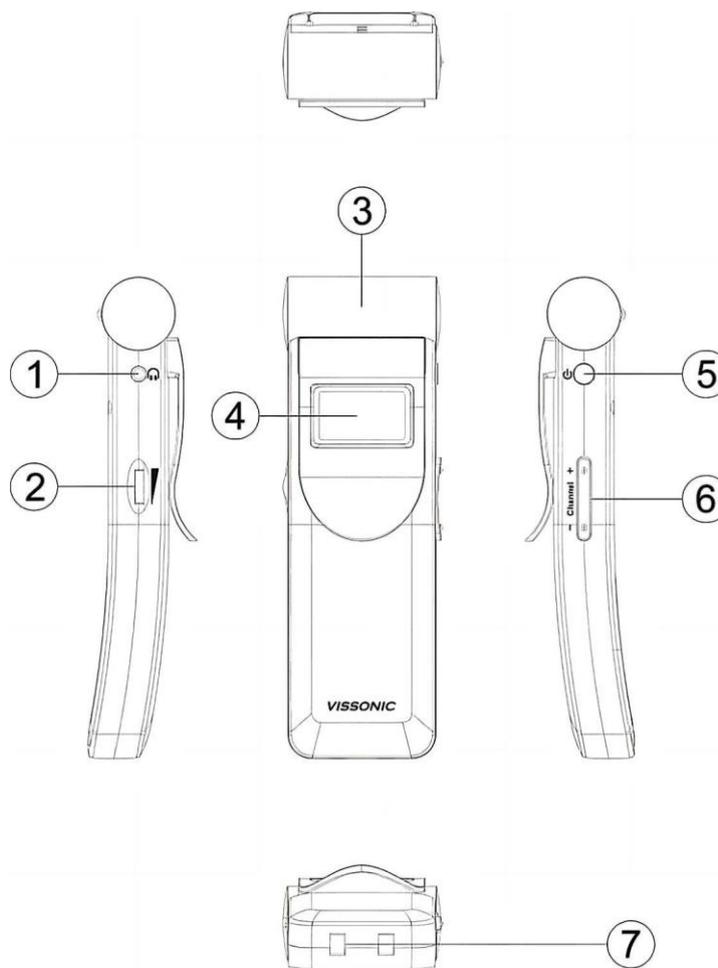

- ① Headphone jack
- ② Volume knob
- ③ Infrared receiving window
- ④ LCD screen to display the channel number, signal intensity, volume level, battery level etc.
- ⑤ Power switch
- ⑥ Chanel selector button
- ⑦ Charging contact

4.3 VIS-VLI703A-4/8/16/32 features

- Compliant to IEC 61603-7 and IEC 60914
- Compatible with any other IR
- simultaneous interpretation system compliant to IEC 61603-7
- Digital infrared processor with DQPSK digital modulation/demodulation technology
- Transmitting in 2~8 MHz frequency band eliminates disturbance from high frequency lighting systems
- Channel selection via up/down button, at most 4,8,16 or 32 channels available
- LCD display with channel number, language name, battery and signal status indication
- Number of available channels is always the same as the number of channels in use by the system, eliminating the need to scroll through unused channels
- Adjustable volume
- Unique 270° super wide reception angle, ensuring perfect sound quality even when casually placed
- Audio signal automatically muted when signal is too low, ensuring that the user receives only high quality audio.
- Ergonomically compact and elegant design
- Lightweight and handy receiver in conjunction with single earphone or headphone for easy and comfortable use
- Can be hung over the neck via a nice strap or fit into the shirt pocket
- Freedom of movement within the range of IR power radiator
- No limit to the receiver number within the IR power radiation range
- Works without errors, even in bright sunlight
- Built-in high precision rechargeable circuitry to prolong battery life and lithium rechargeable battery pack, user can also use AA battery instead of battery pack (Optional)
- No power consumption and auto-off when headphone is disconnected after 5 minutes

4.4 Operations of the receiver

IR receiver can be plugged in headphones work,plug your headphones into the receiver's headphone jack,press the power switch button, LCD screen displays channel,using channel selection buttons"+"and"- "to select the desired channel to listen.

In the work,such as signal failure,the receiver will automatically mute on headphone output,not more than five minutes to receive infrared signals,the receiver automatically shut down,not consume electricity.

When the headset and the receiver is disconnected after 5 minutes did not plug headphones straight to receive will automatically shut down.

Receiver using disposable batteries environmentally-friendly rechargeable battery,the battery is installed,follow the instructions to install the polarity of the battery slot.

4.5 Controls and Indicators

- LCD displays channel number, language name, battery capacity, signal intensity and volume
Power switch
- On/Off Button;
- Slider-type volume adjuster;
- Channel selector buttons;

4.6 Interconnections

- 3.5mm(0.14 inch)Headphone output jack
- Charging contacts

4.7 Specification

System Specifications

Modulation	DQPSK, according to
IEC 61603-7 Modulation frequency	
Carriers 0 to 5	2 to 6 MHz,
according to IEC 61603-7	
Frequency response	20 Hz to 10
kHz (-3dB) at standard quality;	
20 Hz to 20 kHz (-3dB) at perfect quality THD at	
1 KHz	<0.05%
Isolation	>80 dB
Dynamic range	>80 dB
Weighted SNR.....	>80 dBA
Input range.....	-12 dBV ~ +12 dBV
(adjustable)	

Electrical

IR irradiance level	4 mW/m2 per carrier
Angle of sensitivity	270°
Headphone output level at 2.4 V 450 mVrms (speech at maximum volume, 32 Ohm headphone)	
Headphone output freq. Range.....	20Hz to 20 kHz
Headphone output impedance.....	32Ohm to 2 kOhm
Max. SNR.....	>80 dBA
Supply voltage.....	V to 4.2V,nominal 3.7 V
Headphone jack unplugged after 5	
minutes 0 mA Battery life	
Rechargeable battery pack	24 hours

Mechanical

Dimensions(HxWxD)159x49x23mm	
Weight	excluding battery 85 g
Including battery 128g (0.27lb)	
Color.....	black with silver

Chapter 5 Interpreter Unit


5.1 VIS-INT64

The VIS-INT64 interpreter unit is a fully functional translation unit, which can carry 63+1 languages simultaneously, and realize the direct translation and indirect translation of these languages.

5.1.1 VIS-INT64 Features


- Digital audio technology, built-in high-speed DSP processing.
- Accommodates up to 64 interpretation channels (incl. floor channel)
- No limit quantity of interpreter units in the system
- Digital audio technology, built-in high-speed DSP processing.
- Supporting 48 kHz audio sampling rate, 30 Hz to 20 kHz frequency response on all 64 channels
- Anti-interference by any RF signal with metal housing design.
- Hot plug and play
- Removable microphone design
- The volume of Loudspeaker and earphone jack support separated adjustment.
- Direct and relay interpretation available
- Hearing protection direct and relay interpretation available
- Interpreter unit can be set as operation unit and all interpreter units support Internal communication with operator unit
- Language and system configuration from the interpreter desk's configuration menu
- Short message and tea service function
- COUGH key to mute the MIC to avoid the unnecessary sound to the output
- With two groups of the headset microphone and earphone jacks for two interpreters working on the interpreter unit
- The speaker and the headset's volume should be regulated alone. If all microphones in the same booth are off, the loudspeaker will play floor language or interpretation channel
- Support the headset microphone and pluggable microphone.
- Channel interlock function permits only one microphone on a channel to be activated at any time, ensuring the uniqueness of language channels
- Two necessary modes within one interpreter booth: Interlock and Override
- A-B pre-select input key to quickly select Input channel
- a-b pre-select input key to quickly select output channel
- The timing function for indicating the interpretation time.
- Translation unit number almost unlimited.

5.1.2 VIS-INT64 Description

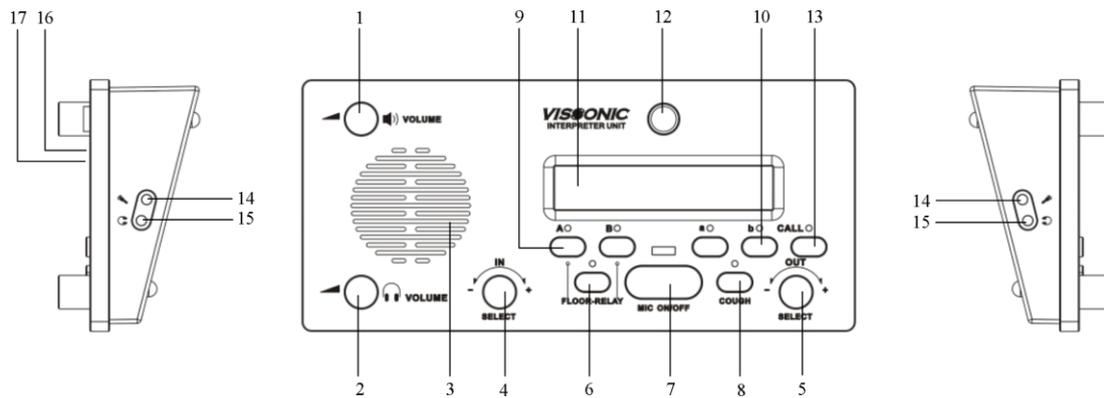

- ① Speaker volume control knob.
- ② The headphones volume knob.
- ③ Built-in speakers.
- ④ IN-input channel selection knob.
- ⑤ OUT-Output channel selection knob.
- ⑥ FLOOR-RELAY-Sounds and indirect translation switch.
- ⑦ MIC ON/OFF--microphone switch.
- ⑧ COUGH-cough elimination button.Press and hold in translation status,a temporary interruption to prevent cough being passed,release to return to normal translation.
- ⑨ A,B–input channel shortcuts.Select an input channel and press A or B button for 3 seconds,the button becomes the channel shortcut key,you can quickly select input channel.
- ⑩ a,b,-output channel shortcuts.Select an output channel,long press a or b for 3 seconds,the button becomes the shortcut key,you can quickly select output channel.
- ⑪ LCD display-Resolution 320X64,the left shows the input channel number and multilingual information.The right displays output channel number and multilingual information.
- ⑫ Microphone jack.
- ⑬ CALL-multi-function button.Long press this button to enter setup mode interface.You can set the corresponding relations of languages and
- ⑭ Microphone jack.
- ⑮ Headphone jack.
- ⑯ CU/DU
- ⑰ Power input-48VDC


5.1.3 Descriptions of panel display

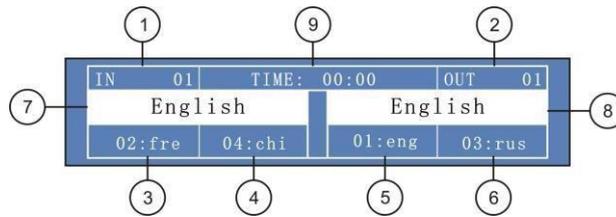

- ①input channel indication.
- ②output channel instructions.
- ③the channel and multilingual instructions corresponding to input channel shortcut key A.
- ④the channel and multilingual instructions corresponding to input channel shortcut key B.
- ⑤the channel and multilingual instructions corresponding to output channel shortcut key a.
- ⑥the channel and multilingual instructions corresponding to output channel shortcut key b.
- ⑦input channels languages.
- ⑧output channels languages.
- ⑨speech timing,maximum timing for 99 minutes 59 seconds long.

Services:

In the conference mode, press the number key"CALL" button to enter the service menu, which can offer language switch, intercom, tea applications and viewing the short message

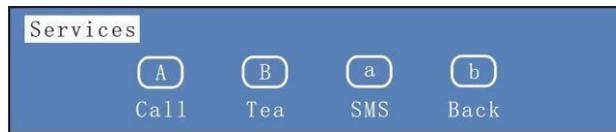

Press "A" key, enter internal call.
 Press "B" key to enter the tea applications. Press "a" key to view short messages.
 Press "b" key to return to the previous menu.


5.1.4 Operator

Translation unit can be set to the operator unit, for the convenience of intercom management.

Translation unit is set to operator as follows: Before power translation unit, press and hold the translation unit "CALL" button, release the button until operator set, translation unit is set to operator. The operator can be set to translation unit in the same way.

Operator is usually installed in management room to monitor conference translation channels, true voice, the whole hall intercom.

Operator LCD displays as follows:

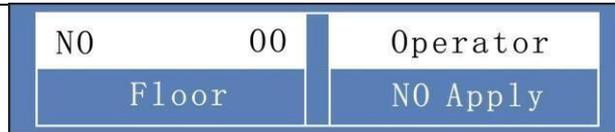

When internal calls applies, the operator translation unit LCD display shows as below:



Press "Agree" button, the call begins, the LCD display shows as below:



Press "EXIT" button to finish the call and quit,

5.1.5 Specification

Electrical

Power.....	DC48V from main unit or adaptor
Power consumption	3W
Microphone Transducer.....	Electret-condenser
Polar pattern	Uni-directional
Sensitivity	-46dBV/pa
Frequency response	20Hz~20KHz
Input impedance	2.2kOhm

Earphone

Frequency Response.....	30~20KHZ
Earphone load.....	>8ohm
Earphone volume.....	10mW
Directivity 0°/180°	> 20 dB (1 kHz)
Equivalent noise	20 dBA (SPL)
Maximum sound pressure level	125dB (THD<3%)

Interface

Display	320x64 dot (blue white)
Connector	2 x Ø 3.5 mm earphone jack, 2 x Ø 3.5 mm
Microphone jack,2xRJ45 port,1x2.5mm adapter port	

Mechanical

Dimension. h x w x d (mm).....	280X128X55
Weight.....	1.5kg
Color.....	Black

5.2 VIS-INT64 Setting of the language channel


5.2.1 Connect to VIS-VLI700A IR transmitter

- ① Press the "CALL" button to enter the password setup page.Press the "CALL" button again to

configure the password. Turn the right-side "SELECT" knob to select digits and press the "CALL" button to confirm. The password is "2468."



② After setting the password, it will automatically advance to the "ENTER" option. Press the "CALL" button to enter this interface. Next, select "CH MAP" and press the "CALL" button. Use the knob to choose the total channels, including one original sound channel and additional channels (for this demonstration, set it to 6 channels).

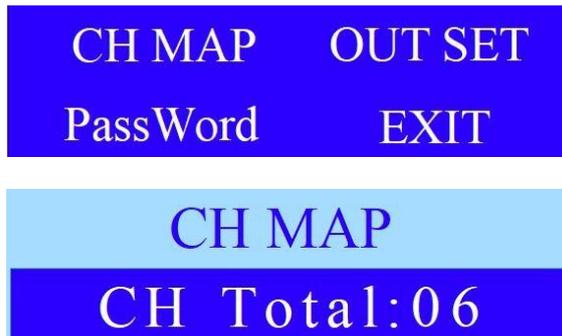

③ After selecting the total number of channels: Choose the language type for each channel. Confirm each selection by pressing the CALL button. Select "exit" and press the button to finish. Input and output language types are now set. Use the knobs to view specific language types for channels.



④ Press "floor relay" or rotate the left knob on the main screen to display the Original Sound Channel when the green light is on.

IN 00	TIME: 00:00	OUT 01
Floor		Chinese
01:ZHO	01:ZHO	01:ZHO 01:ZHO

IN 01	TIME: 00:00	OUT 01
Chinese		Chinese
01:ZHO	01:ZHO	01:ZHO 01:ZHO

5.2.2 Connect to DCP 2000 controller

① The main interface displays the unit quantity and microphone types.

```
Unit: 0015
MIC : Override/2
```

② Press the "Enter" key to access the menu interface. Choose "Menu Interpretation" and press "Enter" to select the maximum channel quantity. Press "ESC" to exit the setup interface.

```
Menu
->Interpretation
```

```
Interpretation
->Max. channel
```

```
Max. channel: 16
->16
```

③ Use the "▼" button to navigate the menu, select "Channel Lang," and press "ENTER" to set channel language and you'll find the language abbreviation in the top right corner. Use "▲" and "▼" to choose language, confirm with "Enter," and repeat for other channels. Press "ESC" to exit settings.(here's the language setting for the 1th-9th channel)

```
Interpretation
->channel lang.
```

```
Channel: 01 ABK
->Abkhazian
```

```
Channel: 01 ZHO
->Chinese
```

.....

```
Channel: 09 YUE
->Cantonese
```


5.2 VIS-INT64-P

The new VIS-INT64-P simultaneous interpretation equipment is professional and efficient, equipped with a 6.8-inch touch screen, supporting 64 languages and 1000 translation units, meeting the real-time translation needs of large-scale international events. Humanized design, such as hot swappable, hearing protection, and dual translator system, makes translation easy, and there are no "difficulties" in cross-border meetings, making communication smoother and more unobstructed.

5.2.2 VIS-INT64-P Features

- Compliant with the latest ISO 20109, ISO 2603, and ISO 4043 standards
- Up to 64 language channels (including original sound channel)
- Support for up to 1000 translation units in the system
- Digital audio technology with built-in high-speed DSP processing.
- 48 kHz audio sampling rate on all 64 channels, with a frequency response from 30 Hz to 20 kHz
- Metal casing design resistant to any RF signal interference.
- Hot-swappable support
- Detachable microphone design
- Separate volume control for speakers and headphone jacks.
- Direct and relay translation capabilities
- Hearing protection function
- Translation units can be set as operation units, enabling internal communication between translation units and operation units
- Language and system configuration can be configured in the menu of the interpretation unit
- SMS and tea request functions
- COUGH key to mute the microphone to avoid unnecessary sound output
- SLOW button available
- Two sets of headphone microphone and headphone jacks, allowing two interpreters to work on the translation unit
- Separate volume adjustment for speakers and headphones; if all microphones in the same booth are turned off, the speakers will play floor language or translation channels
- Supports headphone microphones and detachable microphones. Channel interlocking function allows activation of only one microphone on a channel at a time, ensuring the uniqueness of the language channel
- Two necessary modes in a translation room: interlocking and covering
- 7 quick input selection buttons, supporting 7 preset quick input channel selections.
- Preset shortcuts for A-B-C for quick selection of output channels.
- Supports IC card authentication and translation timing functions.

5.2.3 VIS-INT64-P Description

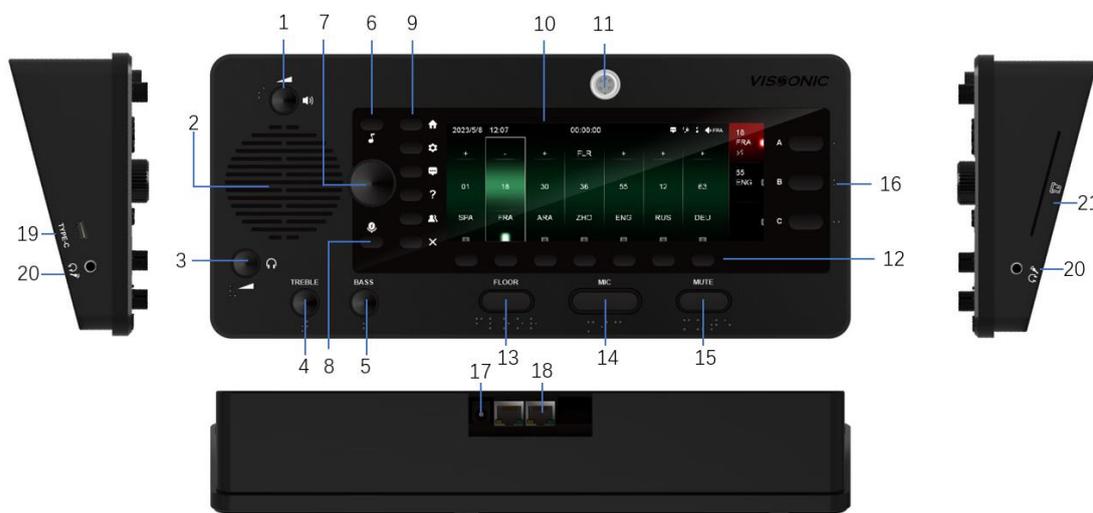

- ① Speaker volume control knob
- ② Built in speaker
- ③ Earphone volume knob
- ④ Adjust the high-frequency knob for sound output
- ⑤ Adjust the low-frequency knob for sound output
- ⑥ Voice prompt function (for visually impaired individuals to use VIS-INT64-P without barriers)
- ⑦ Multi function knob (this button can be pressed to confirm or rotated to select up or down)
- ⑧ Slow button (when pressed, will send a request to prompt the speaker to speak slower)
- ⑨ The menu bar, from top to bottom, consists of returning to the main interface, entering settings, viewing received messages, requesting services, viewing the current speaking list, and the return button
- ⑩ 6.8-inch display screen, with a green area in the middle displaying the languages selected from 7 pre input channels, and a red area on the right displaying the languages selected from 3 pre output channels
- ⑪ Microphone jack
- ⑫ 7 pre input language channel selection buttons allow translators to select the language channel they need to translate in advance, enabling quick switching of language channels
- ⑬ FLOOR-LAY - Sound and Indirect Translation Switch
- ⑭ MIC ON/OFF - microphone switch
- ⑮ Mute button (also known as cough button, press this button when speaking to mute the microphone and avoid unnecessary sound output)
- ⑯ 3 pre output options for language channels, allowing translators to select the language channel they need to translate in advance, enabling quick switching of language channels
- ⑰ Power interface
- ⑱ AudioLink interface, INT64-P supports up to 1000 translation units connected in series
- ⑲ TYPE-C interface is used for recording audio
- ⑳ INT64-P has one microphone/headphone jack on each side, allowing two interpreters to use it
- ㉑ IC card slot, can be used to insert IC card check-in

5.3.3 Display panel instructions




- ① speaking time
- ② One of the 7 pre input selection channels, now highlighted to indicate selecting the second pre input language channel
- ③ One of the three pre output selection channels, now highlighted indicates that the first pre output language channel is being selected


- **Select pickup distance**




- **Set Brightness**

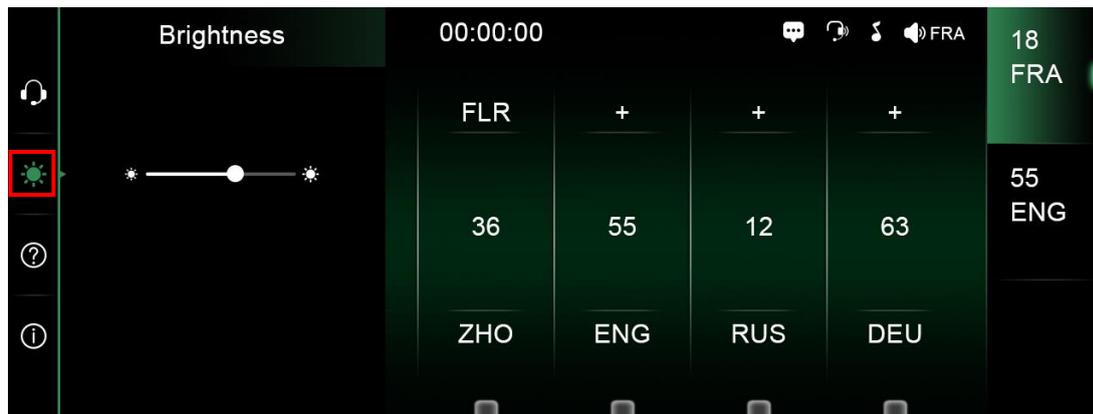


- **Service**

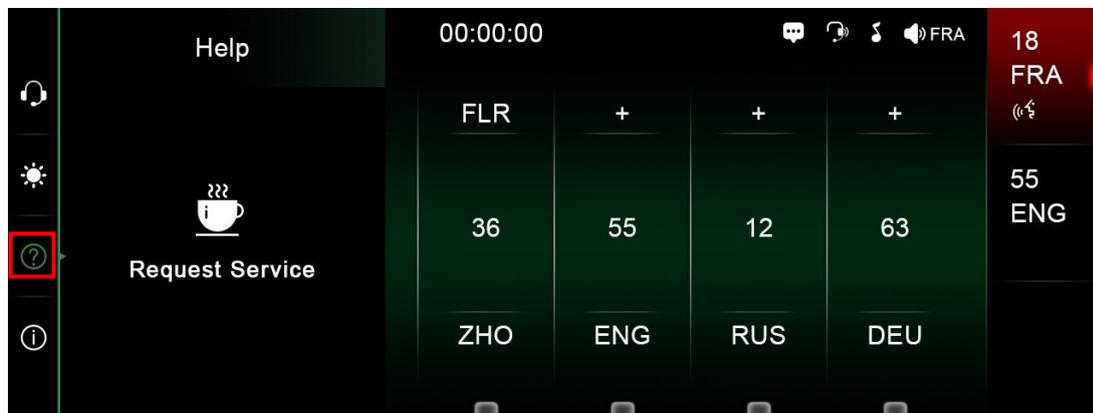

- **View the current ID number and version**

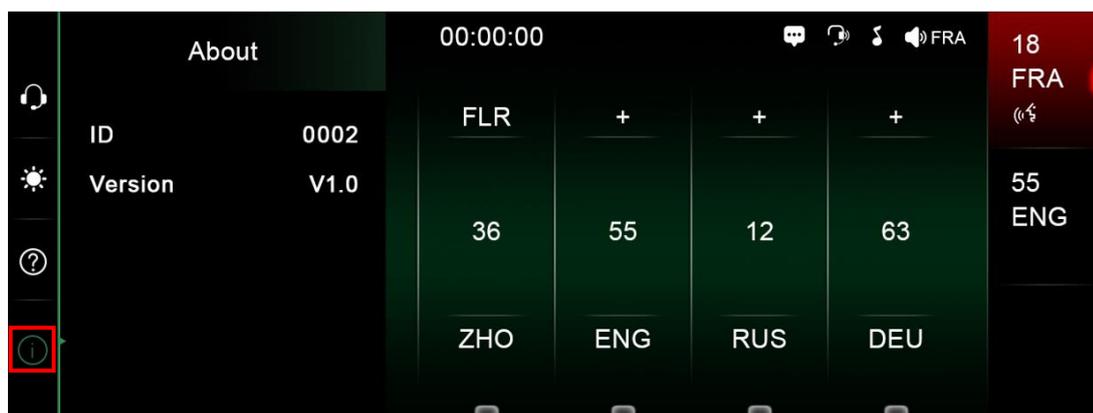

- **Press the slow button, and the screen displays ' You have requested to speak at a slower pace '**

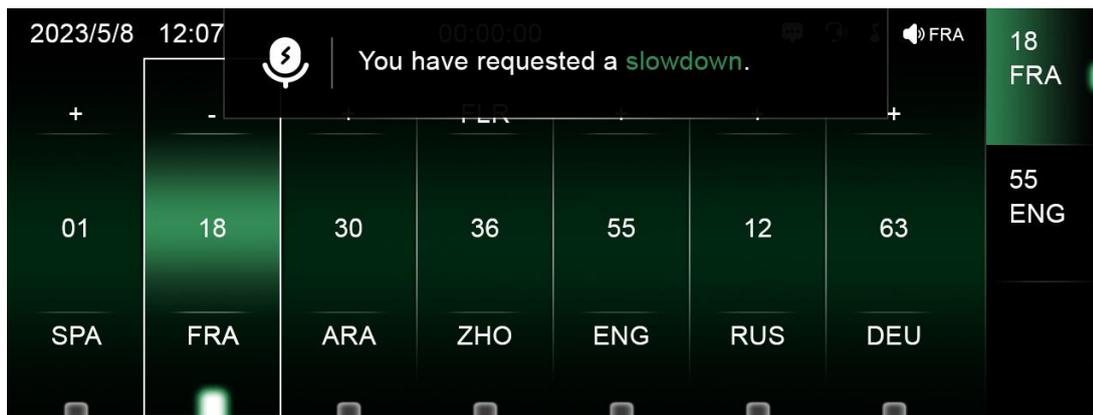

5.3.4 operating mode



- ① Select pre input language channel: Press and hold a button in the red box, the background will be highlighted, and then rotate the multifunction button up and down to select the language channel you want to input
- ② Select pre output language channel: Press and hold one of the buttons in A/B/C, the background will be highlighted, and then rotate the multifunction button up and down to select the language channel that needs to be output

After selecting both pre input and pre output language channels, when translation is needed, you can press the 7 pre input buttons or the A/B/C three pre output buttons again to select the desired language channel and achieve fast translation.

5.3.4 Specification parameters

Electrical

Power.....DC48V from main unit or adaptor

Power consumption.....3W

Microphone

Transducer.....Electret-condenser

Polar pattern.....Uni-directional

Sensitivity.....-46dBV/pa

Frequency response.....20Hz~20KHz

Input impedance.....2.2kOhm

Earphone

Frequency Response.....30~20KHZ

Earphone load.....> 8ohm

Earphone volume.....10mW

Directivity 0°/180°.....> 20 dB (1 kHz)

Equivalent noise.....20 dBA (SPL)

Maximum sound pressure level.....125 dB (THD<3%)

Interface

Display.....480x1280 dot (IPS), 6.8” TFT LCD

Connector.....2 x Ø 3.5 mm earphone jack, 2 x Ø 3.5 mm Microphone jack,2xRJ45 port,1x2.5mm adapter port, 1xHDMI output interface.

Mechanical

Dimension h x w x d (mm).....280x128x55


Weight.....1.5kg

Color..... black


5.4 Language channel selection

5.4.1. Connect to VIS-VLI700A Series Digital Infrared Transmitter

- ① Press the settings button on VIS-INT64-P  , Rotating multifunctional button selection  , Press the multifunction button,Continue rotating the multifunction button to select CH Total (total channels), press the multifunction button, and the number to the right of CH Total will change. For example, if we select 5 (including one original channel and four additional channels).

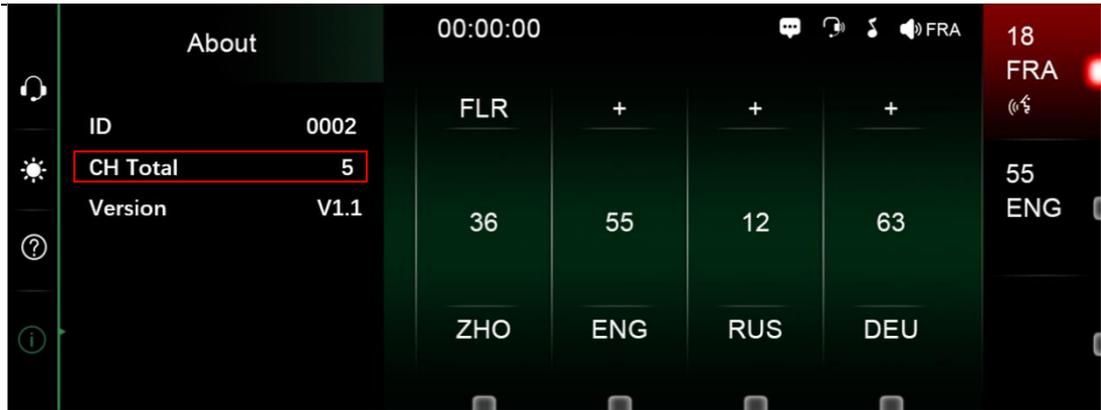

② After selecting the total number of channels, choose different languages for each channel. Continuing with the previous steps, press the multifunction button as shown in the figure below, if you want to set channel one to another language, you can rotate the multifunction button, select it, and press the multifunction button to indicate that channel one has been set to this language. Then the screen will display CH02 XXX, and so on. Select the language for each of the 5 channels we just set. After selecting, the channel selection area at the top of the screen will disappear, indicating that the channel settings have been completed.

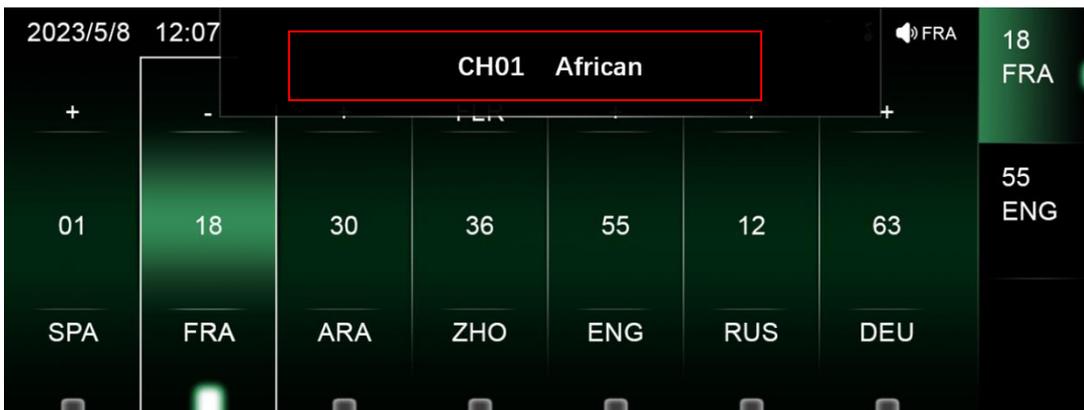

5.4.2 Connect to Full Digital Networked DSP Conference Processor

① The main interface displays the unit quantity and microphone types.



② Press the "Enter" key to access the menu interface. Choose "Menu Interpretation" and press "Enter" to select the maximum channel quantity. Press "ESC" to exit the setup interface.



④Use the "▼" button to navigate the menu, select "Channel Lang," and press "ENTER" to set channel language and you'll find the language abbreviation in the top right corner. Use "▲" and "▼" to choose language, confirm with "Enter," and repeat for other channels. Press "ESC" to exit settings.(here's the language setting for the 1th~9th channel)

```
Interpretation  
->channel lang.
```

```
Channel: 01 ABK  
->Abkhazian
```

```
Channel: 01 ZHO  
->Chinese
```

.....

```
Channel: 09 YUE  
->Cantonese
```

Chapter 6 Accessories

6.1 VIS-TC50A Charger and Storage Box

VIS-TC50A Charger and Storage Box support not only charging function, but also can be used to store infrared receiver, using special design, when the receiver stored in the charging box, move, or shake the box the receiver will not be affected.

When the receiver is plugged into the slot of charger, the red LED indicator in the infrared window of receiver is going to flashing(charging) or static lighting(The battery is full).The LCD on the receiver show the charging status on charging or batter full status.

Charger and Storage Box



Features

- Can accommodate VIS-VLI703A series receivers
- Universal mains power facility allows use worldwide
- Rapid recharging: within 2 hours
- Capable of charging 50 receivers.
- LEDs to indicate the charging status of the rechargeable batteries
- The charging box also has the function of storing receiver

Controllers and indicators

- On/Off switch

Interconnection

- Electric power supply in series Interface: European type, Yang-style socket
- 50 Charge contacts.

Specification

Electrical

Power..... 100V-240V AC
 Max. Power200W

Static Power.....	17W (no charging)
Mechanical	
Dimension h x w x d (mm).....	112x494x395
Weight.....	5kg
Color.....	Black

6.2 VIS-BTPS Battery Pack

The large-capacity rechargeable battery pack provides a continuous and stable power supply for the all-digital infrared receiving unit, ensuring uninterrupted operation for a long time.



Specification

Material	lithium battery pack
Voltage	V
Capacity.....	1600mAh
Dimensions Width ×Depth×Height (mm)	48 × 29 × 15
Weight.....	45 g

6.3 VIS-HPI Interpreter Headset

The bilateral head-mounted wheat earphones are light and exquisite in shape, which makes the user feel comfortable. The headphone is used with the interpreter unit and is used for sound monitoring and speaking.



Technical Parameters

Wearing style	
Frequency range.....	20Hz – 2KHz
Impedance	32 Ω ± 15% Ω
Plug size	3.5mm
Sensitivity.....	105dB ± 3dB
cable length.....	2.2mm

6.4 VIS-HPD Conference Headphone

The conference headphone can be used for the conference unit/simultaneous receiver for monitoring, high-fidelity sound quality. With a 1.5 meter long connection, the channel response has reached 30HZ-16KHZ



Technical Parameters

Unit interface.....	2-channel plug
Frequency response	80Hz – 2KHz
Sensitivity	90dB
Signal to noise ratio	>80dB
Distortion.....	< 0.1dB
Impedance	32 Ω
Dynamic range	> 85 dB
Output power.....	100mW

Chapter 7 Frequently seen malfunction and maintenance

① Host power indicator does not light

Check the power switch is closed, equipment power input is a good contact.

A: switching power supply there are two key characters, a "O" and "I" word, when the "O" word side of subsidence, "I" word side of the upturned, on behalf of the unit is turned off, and vice versa are turned on.

B: Check whether the connections are secure socket connection, or disconnect the power cord from the new re-plug in to determine the connection properly.

② when the plug serial port or connection cable interface, a significant electrostatic

Possible without a good grounding equipment power ground, press the correct way to ground, otherwise easily damage the system, reducing the host life.

A: due to the host using a 100-240V switching power supply, the better to prevent static electricity, attention must use a grounded three-core power cable, do not use the two-core power cable.

B: Check the local power outlet ground terminal is a good grounding.

③ Radiation panel indicator does not light

Please check the power cord is connected properly with the radiation panel.

④ Receiver abnormal working

A: If you use the battery, check battery is sufficient, if installed correctly. B:

If you use rechargeable batteries, check whether the charge to saturation. C:

Check the headset and the receiver is connected properly.

D: Check whether the receiver can receive the infrared signal of sufficient strength.

E: Check the volume is turned on, and opened to the maximum volume.

F: Please avoid direct rays of the receiver with a strong light, such as: not blasting dew in the sunlight.

G: If the receiver with noise or sound is distorted, adjust the receiver and the radiation panel or adjust the distance between the receipt of direction.

⑤ When Receiver charging

When the receiver into the charging box VIS-VLI703-8/16 when the receiver was red and green lights flashing, please check the contacts on the receiver contact with the charger is good contact,

back into the fixed, to be directed flashing red light when the state, the receiver is in charge state.

The same time, charging indicator light does not shine, need to check the receiver inside the battery is installed properly. Receiver needs to check whether the temperature anomaly.