



**X9 Series Modular Video Wall Processor
User's Manual**

Version1.6

The indications of symbols

■ Safety instructions

Some symbols pointing out the potential risk of injury and property loss are used in the instructions and devices, to help you use the devices safely and properly. Symbols and their indications are as follows. Please make sure that you have known these instructions before reading the manual.

	<p>Remind users to operate and maintenance according to the instructions attached to the devices. If ignoring this information, it may cause death or injury due to wrong operations.</p>
	<p>Remind users that uninsulated dangerous voltage in devices may lead to electric shock.</p>
	<p>CE certification means that the product has reached the safety requirements specified by EU regulations, users can be assured.</p>
	<p>SGS certification means that the product has reached the quality standards of the world's largest Societe Generale de Surveillance.</p>
	<p>This product has passed ISO9001 international quality certification (certification bodies: Rheinland TUV).</p>
	<p>WARNING: To avoid electric shock, do not open the cover, and do not place unnecessary portion in the chassis. Please contact qualified service personnel.</p>

■ General information indications

	<p>Information that may lead to an unsuccessful operation or setting and other relevant information needed to be noticed is listed.</p>
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------

Important notes



Warning

To ensure reliable use of devices and safety of personnel, please observe the following items in the installation, use and maintenance.

Notes in installation

- ◆ Do not use this product in the following places: Where exists dust, smoke, conductive dust, corrosive gases or flammable gases; where exposes to high temperature, condensation or wind and rain; where exists vibration and shock. Electric shock, fire, incorrect operation will also lead to product damage and deterioration;
- ◆ During screw hole processing and wiring, metal chips and wire heads shall not be dropped into ventilation holes of controllers, which may cause a fire, malfunction or incorrect operation;
- ◆ When the installation work is done, make sure that no foreign body is left on the surface of ventilation, including contact paper and other packaging materials, otherwise it may lead to poor run-time heat, causing a fire, malfunction or incorrect operation;
- ◆ Avoid wiring or inserting/pulling plugs in charged state, otherwise it may easily lead to electric shock or cause damage to the circuit;
- ◆ Installation and wiring must be solid and reliable, poor contact may result in incorrect operation;
- ◆ For application in occasions with severe interference, shielded cables should be used to input and output high-frequency signal so that anti-interference performance of the system could be improved.

Notes in wiring

- ◆ All of the external power supply must be cut off before carrying out installation, wiring and other operations, or it may cause electric shock or equipment damage;
- ◆ This product is grounded through the grounding conductor of the power cord. In order to avoid electric shock, the grounding conductor must be connected to earth. Before connecting the input or output terminals of the product, make sure that the product is properly grounded;
- ◆ Once wiring is completed, foreign matters should be immediately removed. Please cover the terminal covers of product before power connection to avoid electric shock;

Notes in operation and maintenance

- ◆ Do not touch the terminal when power is on, or it may cause electric shock or incorrect operation;
- ◆ Perform cleaning and terminal tightening when power is off, for these operations may cause electric shock when power is on;
- ◆ Perform connection, removal or other operations of the communication signal cables and the cables of expansion board or control unit after power is off, or it may cause equipment damage or incorrect operation;
- ◆ Do not disassemble the equipment, so as not to damage the internal electrical components;
- ◆ Always read the manual, after security fully recognized, changing the program, commissioning, starting and stopping operations after security is fully recognized;
- ◆ Button batteries must be replaced when the power is off. When you indeed need to replace the button batteries with the power on, the operation should be performed by a qualified electrical

technician wearing insulated gloves.

Notes in product obsolescence

- ◆ Explosive electrolytic capacitors: It may cause explosion when electrolytic capacitor on the circuit board burns;
- ◆ Please collect and process separately, it cannot be put in the life garbage.
- ◆ Please process it as industrial waste, or process it in accordance with local environmental regulations.

Contents

Chapter One Overview.....	1
1.1 Product Equipment	1
1.2 function features	2
1.3 cabinet installation	2
Chapter Two Hardware Introductions.....	4
2.1 VIS-VW0808 panel diagram	4
2.2 VIS-VW1616 panel diagram	4
2.3 VIS-VW3636 panel diagram	4
2.4 VIS-VW7272 panel diagram	7
2.5 Link of matrix and peripherals	9
2.5.1 Input interface description	9
2.5.2 Output interface description.....	9
2.5.3 Control board communication port and link method.....	9
2.5.4 Matrix RS-232 control interface	9
2.5.5 Link of matrix and control computer	9
2.5.6 Matrix KEYBOARD interface	10
2.5.7 Link of matrix and extended keyboard	10
2.5.8 Matrix Ethernet Interface	10
2.5.8.1 Hardware linking method	10
2.5.8.2 Connection Method Description of RJ45 Ethernet Port straight-through Line and Cross-line	10
2.5.9 HDMI port description	11
2.5.10 DVI port description	11
2.5.11 DB15 interface description.....	12
2.5.12 DB15 male socket transfer cable(S terminal, RCA head)	12
2.5.13 DB15 male socket transfer cable definition.....	13
Chapter Three Control Panel Operating Instructions.....	14
3.1 panel description	14
3.1.1 VIS-VW0808 panel	14
3.1.2 VIS-VW1616 panel	14
3.1.3 VIS-VW3636 panel	15
3.2 input boards	18
3.2.1 VW-HM4I input board function features	18
3.2.2 VW-DV4I input board function features	18
3.2.3 VW-HD4I twisted pair input board function features	18
3.2.4 VW-VA4I input board function features	19
3.2.5 VW-SD4I input board function features.....	19
3.2.6 VW-SF4I optical fiber input board function features.....	19
3.2.7 VW-IP2I input card Functions and Features.....	19
3.3 output boards	19
3.3.1 VW-HM4O seamless output board function features.....	19
3.3.2 VW-DV4O seamless output board function features.....	20

3.3.3	VW-HD4O twisted pair seamless output board function features	20
3.3.4	VW-VA4O seamless output board function features	20
3.3.5	VW-SD4O seamless output board function features.....	20
3.3.6	VW-SF4O optical fiber seamless output board function features	20
3.3.7	VP-HM4O stitching output board function features.....	20
3.3.8	VP-DV4O switching output board function features.....	21
3.3.9	VP-HD4O twisted pair stitching output board function features	21
3.3.10	VP-VA4O stitching output board function features	21
3.3.11	VP-SF4O optical fiber stitching output board function features.....	21
3.4	preview boards	21
3.4.1	VW-PVW preview board function features	21
3.5	control boards.....	22
3.5.1	VW-Con ETN4 control board function features	22
3.5.2	VW-Con ETN5 advanced control board function features	22
3.6	specifications and technical parameters.....	22
Chapter Four	Instructions	36
4.1	X9 processor instructions.....	36
4.2	Splicer instructions.....	44
Chapter Five	Software.....	45
5.1	Connection.....	45
5.2	Interface introduction	47
5.3	Drag &Drop to change the video source	49
5.4	Change the output window size	50
5.5	Save and Call the profile	51
5.6	Matrix switching control(Seamless output card is needed).....	52

Chapter One Overview

X9 series Modular video wall processor can realize graphics processing and seamless switching flexibly. The matrix adopts high-performance hardware design, perfectly supports a variety of high-definition digital / analog signal switching and processing, and supports two-way RS-232, two-way IR signal assigned switching function. It can also divide a completed image signal into several signals assigned to several different display units, forming a large display screen to display dynamic images. It provides a one-stop solution for various industries to assign, switch and process a variety of video and control signals, which can be widely used in radio and television engineering, multimedia conference room, large-screen display engineering, television teaching, intelligent traffic management centers, command and control centers and other places.

X9 series Modular video wall processor contains 0808,1616,3636,7272 and other models, its signal input/output interface contains HDMI, DVI, VGA, HDBaseT, SDI, optical fiber and other video interfaces. Leading all-digital signal processing technology ensures undistorted processing, sending top quality screen to the display terminal. With customized configuration of various types of the same or different input/output boards, single interface type or multi interface type of matrix can be formed, such as optical fiber matrix, HDMI matrix, DVI matrix, CAT5 matrix, VGA matrix, YUV matrix, Video matrix and so on.

X9 series Modular video wall processor provides a variety of control modes, with remote control operation, RS-485 extended keyboard, but also provides two standard RS-232 communication interfaces and network ports, convenient for users to coordinate it with various remote control devices.

1.1 Product Equipment

VIS-VW0808

VIS-VW1616

VIS-VW3636

VIS-VW7272

Modular video wall processor can be composed of any of the following input and output boards:

Input boards:

- ◆ VW-HM4I input board (HDMI signal input)
- ◆ VW-DV4I input board (DVI signal input)
- ◆ VW-HD4I twisted pair input board (HDBaseT signal input)
- ◆ VW-VA4I input board (CV, YPbPr, VGA signal input)
- ◆ VW-SD4I input board (SDI signal input)
- ◆ VW-SF4I optical fiber input board (OPTICAL FIBER signal input)

Seamless output boards:

- ◆ VW-HM4O seamless output board (HDMI signal output)
- ◆ VW-DV4O seamless output board (DVI, RGB signal output)
- ◆ VW-HD4O twisted pair seamless output board (HDBaseT signal output)
- ◆ VW-VA4O seamless output board (CV, YPbPr, VGA signal output)
- ◆ VW-SD4O seamless output board (SDI signal output)
- ◆ VW-SF4O optical fiber seamless output board (OPTICAL FIBER signal output)

Video wall output boards:

- ◆ VP-HM4O stitching output board (HDMI signal output)
- ◆ VP-DV4O stitching output board (DVI, RGB signal output)
- ◆ VP-HD4O twisted pair stitching output board

rd (HDBaseT signal output)

- ◆ VP-VA4O stitching output board (CV, YPb Pr, VGAI signal output)
- ◆ VP-SD4O stitching output board (SDI signal output)
- ◆ VP-SF4O optical fiber stitching output board (OPTICAL FIBER signal output)

Preview board:

- ◆ VW-PVW preview board (video signal output)

Control board:

- ◆ VW-Con ETN4 control board
- ◆ VW-Con ETN5 advanced control board


1.2 function features

- ◆ All digital switching, each seamless output board can realize real-time seamless switching;
- ◆ Each stitching output board can realize video stitching; picture windows in full screen can zoom, overlay and roam arbitrarily;
- ◆ Preview board can realize previewing videos by group and switching function;
- ◆ Support DVI 1.0 protocol, in line with HDCP1.3, compatible with HDMI 1.3a;
- ◆ Support hot plug, support audio and video signal switching together;
- ◆ Digital audio and analog audio in HDMI input board can be input selectively, digital audio and analog audio in HDMI output board can be output simultaneously;
- ◆ Support PC software control switching and EDID management;
- ◆ HDBaseT input/output signals support embedded (or local) two-way RS-232 and two-way IR signals, and can switch optionally with video signal or switch separately. They also support POC providing external power supply (VIS-VW3636 and its upgrades support POC);
- ◆ Flexible control with infrared remote control, RS485, RS232 communication interface and

network ports, and can be controlled by distant HDBaseT / optical fiber serial ports, convenient for users to coordinate it with various remote control devices;

- ◆ Support firmware upgrade online;
- ◆ support intelligent control matrix fan operation;
- ◆ SDI input board has looping out function;
- ◆ VIS-VW3636 and its upgrades have redundant power supply design;
- ◆ Plug-in board structure design, flexibly allocate input/output signal type and signal channel number.

1.3 cabinet installation

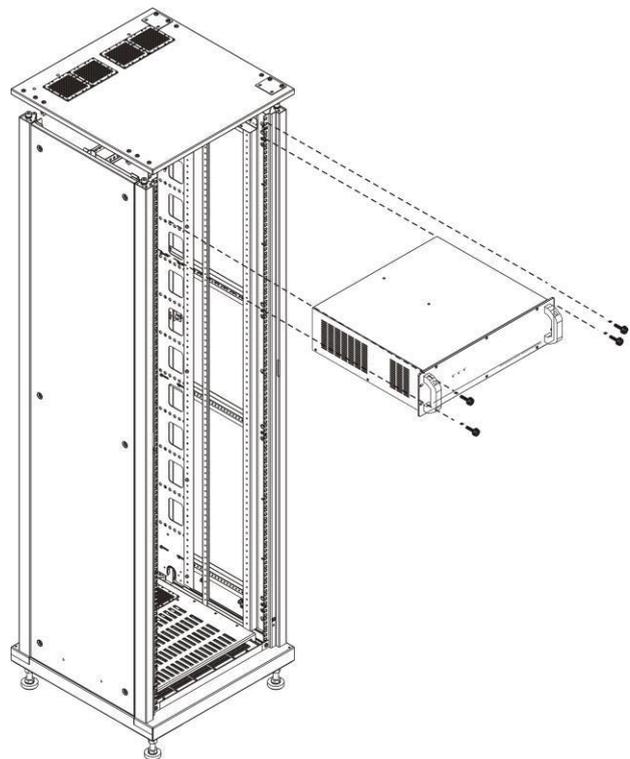





Chapter Two Hardware Introductions

2.1 VIS-VW0808 panel diagram

VIS-VW0808 front panel:

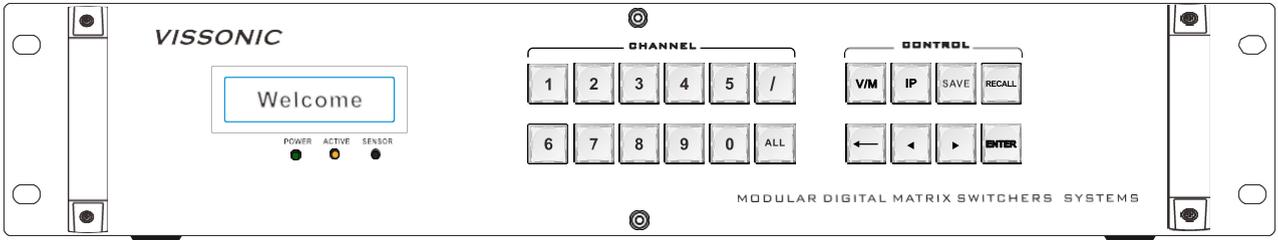


VIS-VW0808 back panel:

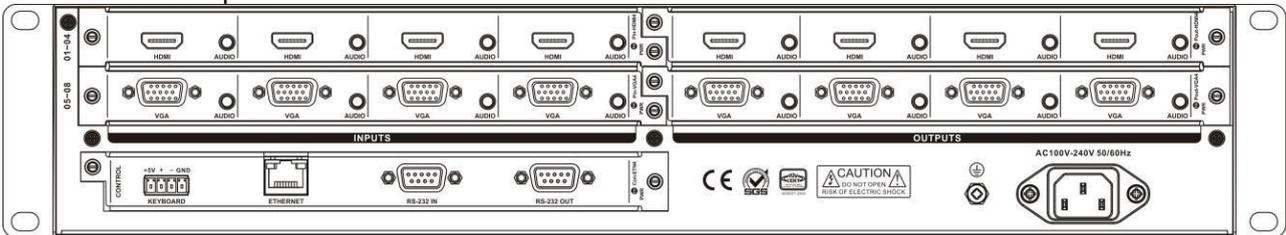


2.2 VIS-VW1616 panel diagram

VIS-VW1616 front panel:

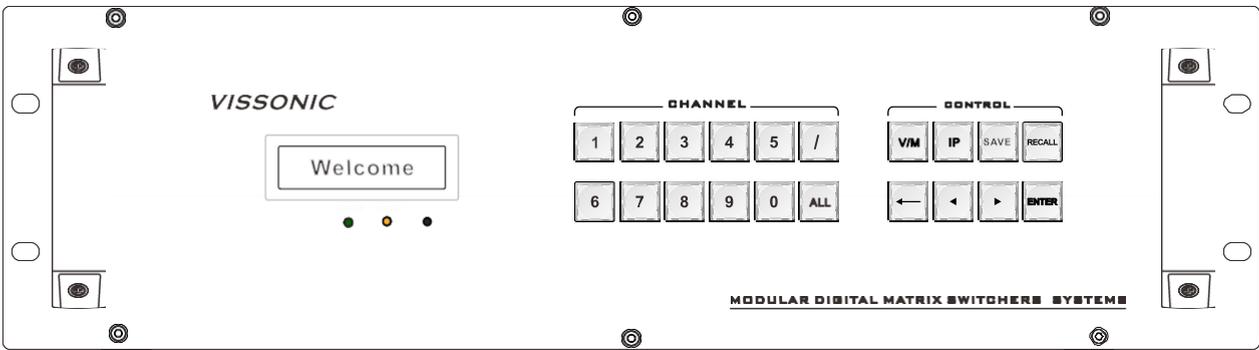


VIS-VW1616 back panel:

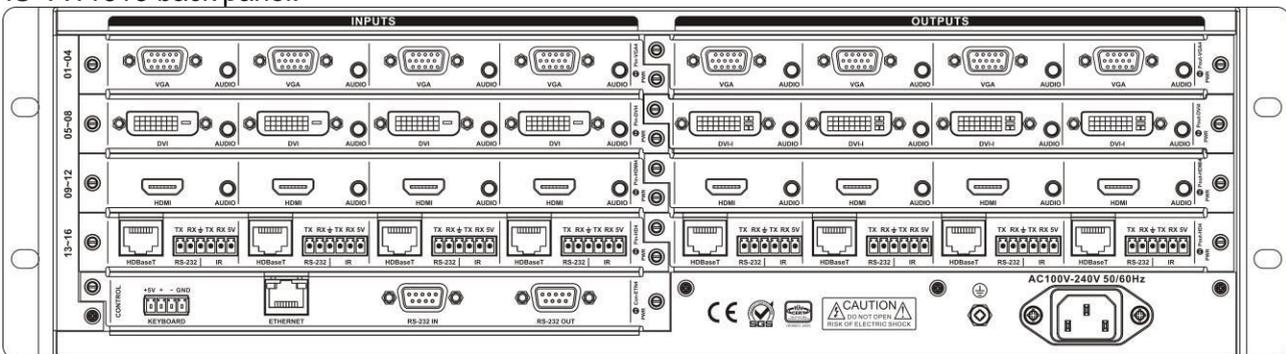


2.3 VIS-VW3636 panel diagram

VIS-VW3636 front panel:

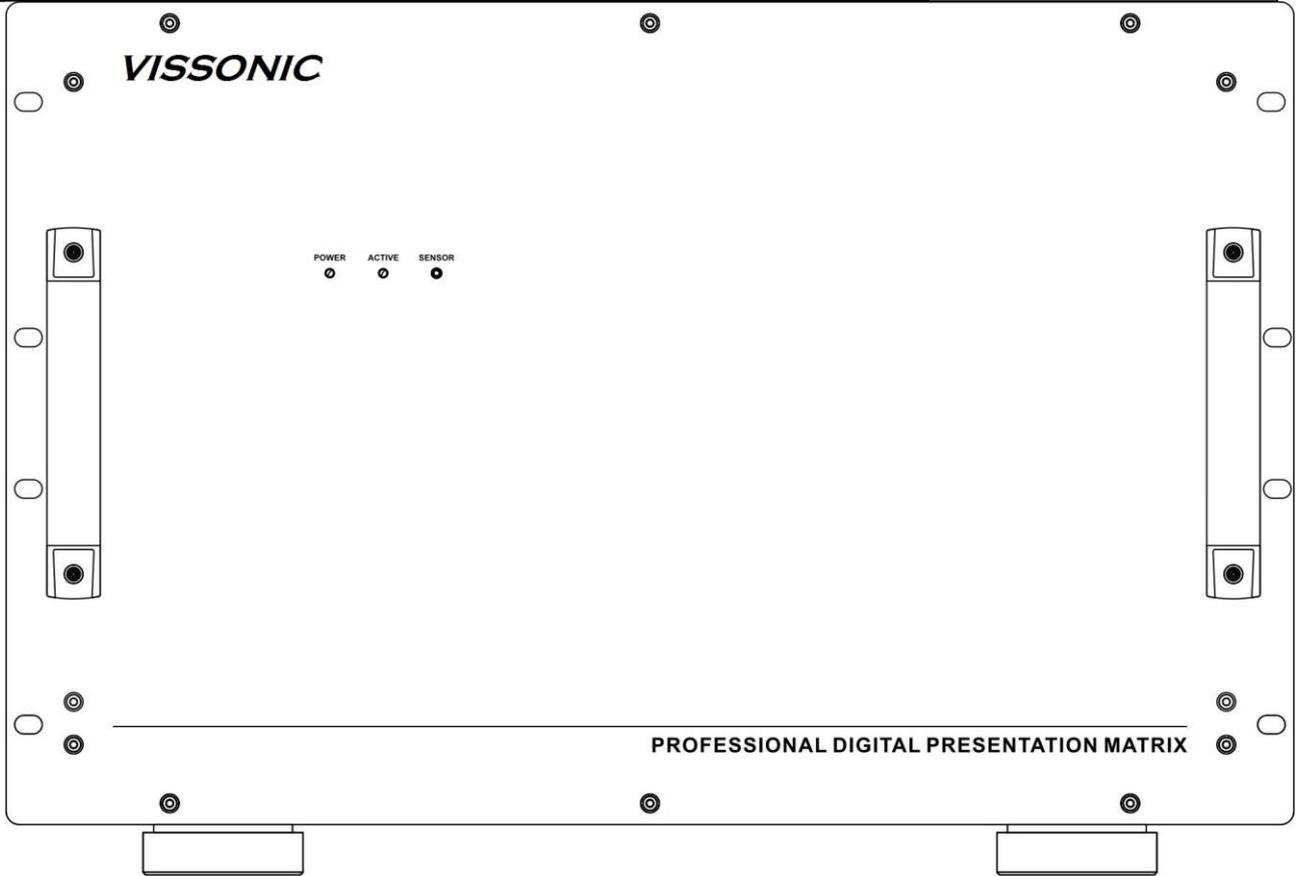


VIS-VW3636 back panel:

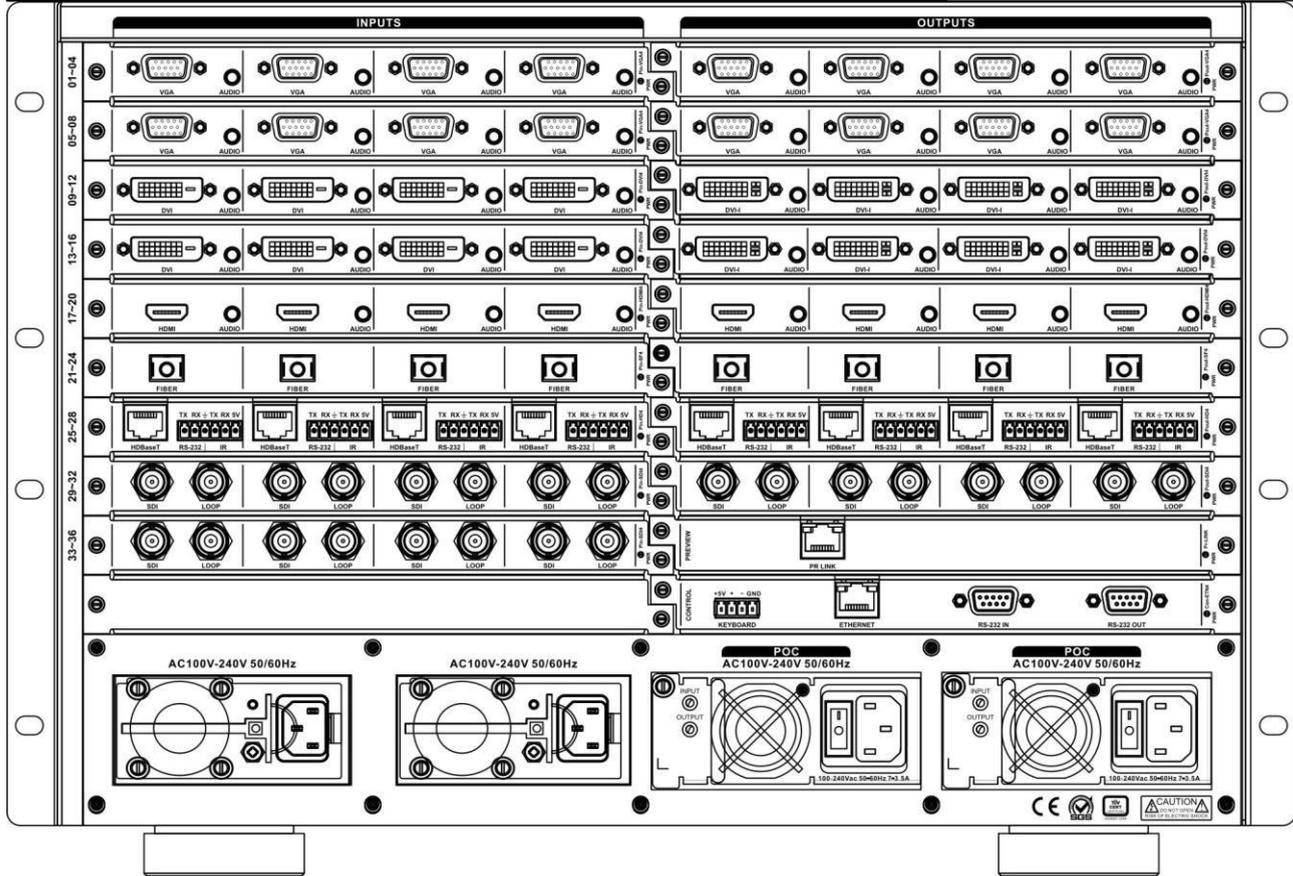


2.4 VIS-VW7272 panel diagram

VW-VM7272 front panel

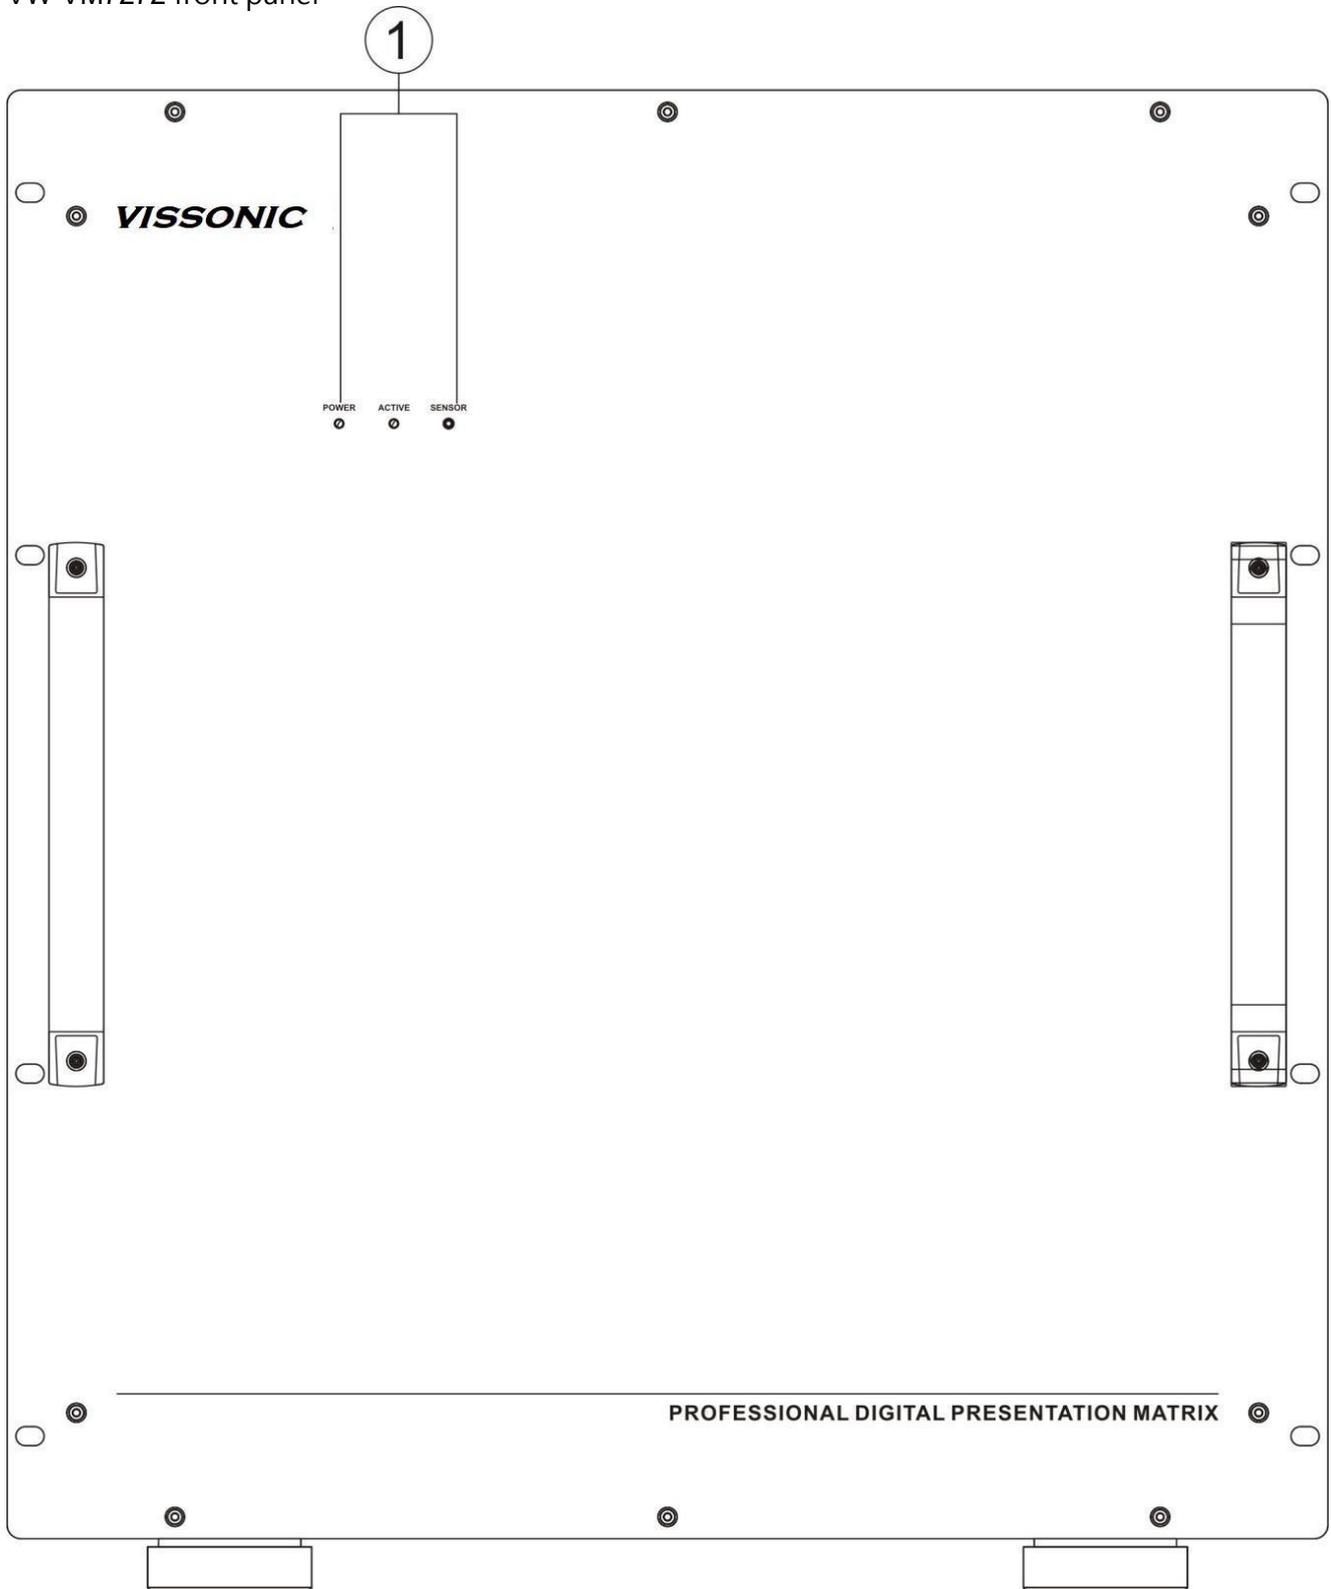

VW-VM7272 Rear Panel :

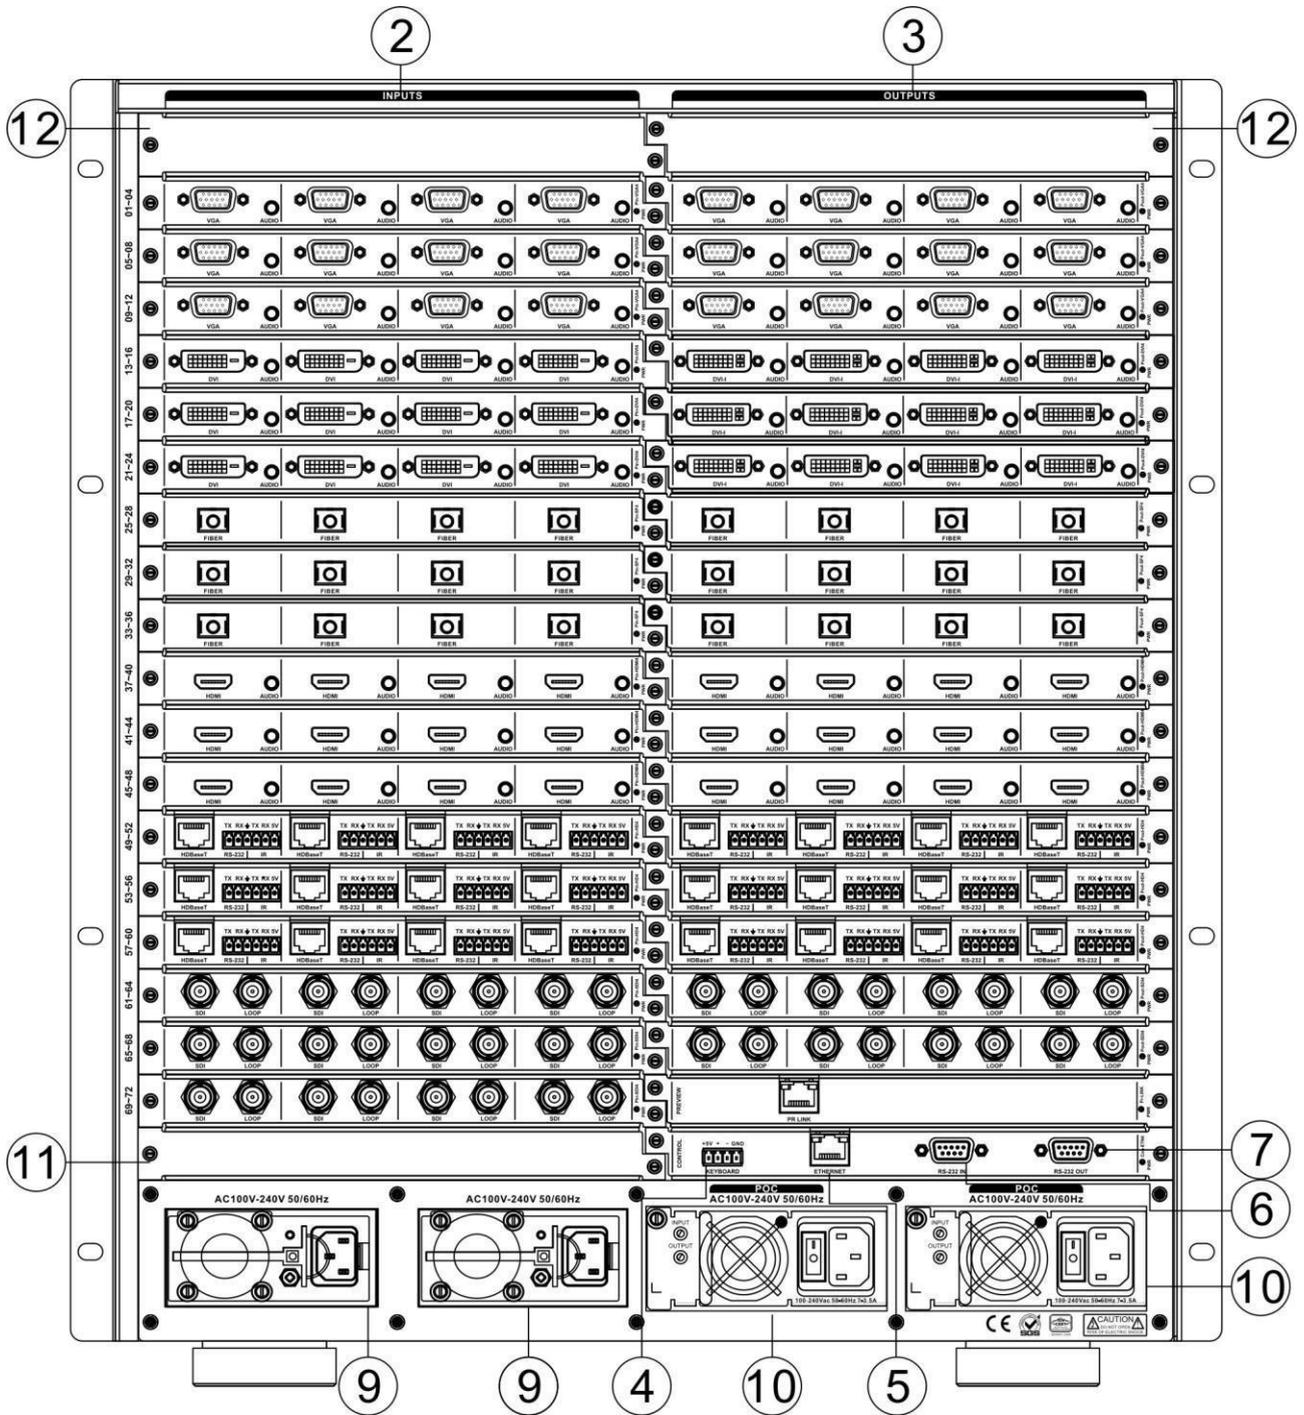

2.5 Link of matrix and peripherals

2.5.1 Input interface description

The input interface is composed of VW-DV4 I, VW-HM4I, VW-HD4I, VW-VA4I, VW-SD4I and VW-SF4I input board, enable to combine various input signal formats arbitrarily.

2.5.2 Output interface description


The output interface is composed of VW-DV4O, VW-HM4O, VW-HD4O, VW-VA4O, VW-SD4O, VW-SF4O seamless output board and VP-DV4O, VP-HM4O, VP-HD4O, VP-VA4O, VP-SD4O, VP-SF4O stitching output board, enable to combine various input signal formats arbitrarily.

2.5.3 Control board communication port and link method

X9 modular matrix provides standard RS-232 serial communication ports, in addition to realize switching operations with infrared remote control, it can also control by using a variety of control systems (such as PC, VISSONIC control systems, control systems of other manufacturers, etc.).

2.5.4 Matrix RS-232 control interface


Modular matrix provides two-way RS-232 serial interfaces (a DB9 female connector, a male DB9 connector), you can use this interface to control the matrix. Pin description of RS-232 port DB9 female connector is as follows:

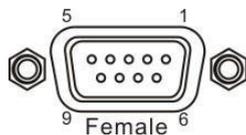

pin	signal	description
1	-	-
2	TXD	RS-232 protocol, sending data
3	RXD	RS-232 protocol, receiving data
4	-	-

5	GND	Signal ground
6	-	-
7	-	-
8	-	-
9	-	-


Pin description of RS-232 port DB9 male connector is as follows:

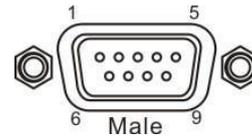

pin	signal	description
1	-	-
2	RXD	RS-232 protocol, sending data
3	TXD	RS-232 protocol, receiving data
4	-	-
5	GND	Signal ground
6	-	-
7	-	-
8	-	-
9	-	-

2.5.5 Link of matrix and control computer

With RS232 cable to link the computer's serial communication port (COM1 or COM2) and the matrix cabinet's RS-232 communication port, and use control command to control. For more details, refer to *Chapter five, Instructions*.

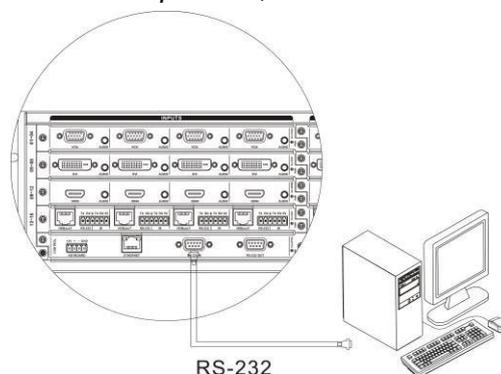


2.5.6 Matrix KEYBOARD interface

The matrix provides one-way KEYBOARD interface, it is used to link with extended keyboard VIS-MKB100 so that you can switch the channels of the matrix. KEYBOARD is a four-foot 3.8mm phoenix interface, its pin description is as follows:

pin	signal	description
1	+5V	Output DC5V/1A, enable to provide power for MKB100
2	+	RS-485 protocol, DATA+
3	-	RS-485 protocol, DATA-
4	GND	Signal ground

2.5.7 Link of matrix and extended keyboard

Based on screen printing, correspondingly connect matrix cabinet KEYBOARD interface with extended keyboard VIS-MKB100's MATRIX interface, then you can control the matrix. For more details, refer to *User's Manual of VIS-MKB100* Matrix Keyboard.

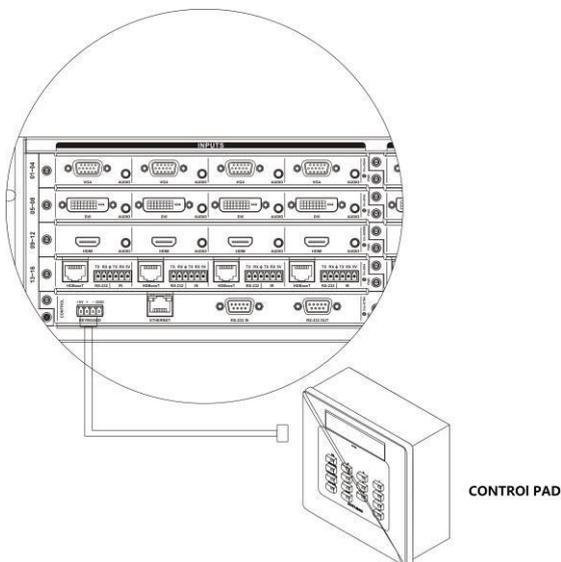


2.5.8 Matrix Ethernet Interface

2.5.8.1 Hardware linking method

There are two ways to link matrix with Ethernet adapter hardware

1) cross-connect method

Matrix and control computer is directly connected via CAT5 crossover cable.

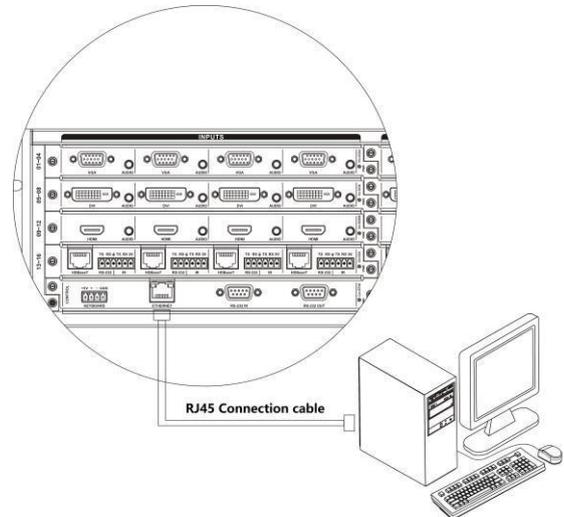


2) through-connect method

Matrix and Ethernet switchboard or concentrator is connected via CAT-5 straight-through cable.

2.5.8.2 Connection Method Description of RJ45 Ethernet Port straight-through Line and Cross-line

The system adopts CAT-5 (super 5-type line) as wires, using RJ-45 connector (commonly known as crystal head) of CAT-5 to connect network devices. Standard twisted-pair connection method is specifically regulated, aiming to ensure the symmetry of cable connector layout so that the interference between the cables within the connector can be offset. Super 5-type line in general has four pairs of wires twisted together, with different colors.

There are two ways to connect twisted pair: EIA / TIA 568B standard and EIA / TIA 568A standard.

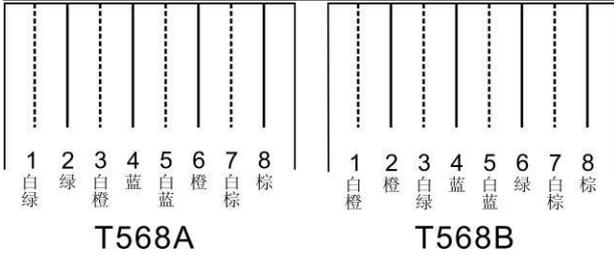

T568A line order							
1	2	3	4	5	6	7	8
White Green	Green	White Orange	Blue	White Blue	Orange	White Brown	Brown

T568B line order							
1	2	3	4	5	6	7	8
White Orange	Orange	White Green	Blue	White Blue	Green	White Brown	Brown


Straight-through line: both ends are connected in T568B line order.

Crossover line: one end is connected in T568A line order, the other end is connected in T568B line order.

2.5.9 HDMI port description

HDMI-A Type Line description:


Users can connect a variety of computer signals, audio and video signal equipments, such as DVD players, desktop computers, graphics workstations, and number displays in different occasions, output terminals can be connected to the projector, VCRs, computer monitors, amplifiers and so on.

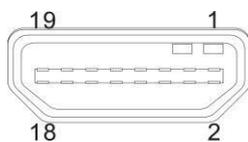

PIN	Function
1	TMDS Data2+
2	TMDS Data2 Shield
3	TMDS Data2-
4	TMDS Data1+
5	TMDS Data1 Shield
6	TMDS Data1-
7	TMDS Data0+
8	TMDS Data0 Shield
9	TMDS Data0-
10	TMDS Clock+
11	TMDS Clock Shield
12	TMDS Clock-
13	CEC
14	Reserved (in cable but N.C. on device)
15	SCL
16	SDA
17	DDC/CEC Ground
18	+5V Power
19	Hot Plug Detect

2.5.10 DVI port description

DVI-D Dual Link interface description

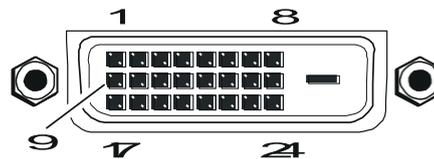


PIN	Function
1	T.M.D.S.Data2-
2	T.M.D.S.Data2+
3	T.M.D.S. Data 2/4 Shield
4	T.M.D.S. Data 4-
5	T.M.D.S. Data 4+
6	DDC Clock
7	DDC Data
8	No Connect
9	T.M.D.S.Data1-
10	T.M.D.S.Data1+
11	T.M.D.S.Data1/3 Shield
12	T.M.D.S.Data3-
13	T.M.D.S.Data3+

14	+5V Power
15	Ground (for +5V)
16	Hot Plug Detect
17	T.M.D.S. Data 0-
18	T.M.D.S. Data 0+
19	T.M.D.S. Data 0/5 Shield
20	T.M.D.S.Data5-
21	T.M.D.S.Data5+
22	T.M.D.S. Clock Shield
23	T.M.D. S. Clock +
24	T.M.D.S .Clock-

pin	signal	description
1	RED	red primary
2	GREEN	green primary
3	BLUE	blue primary
4	ID2	address code 2
5	GND	ground
6	RGND	red ground
7	GGND	green ground
8	BGND	blue ground
9	KEY	reserved
10	SGND	digital ground
11	ID0	address code 0
12	SDA	data pin
13	HSYNC	horizontal synchronization
14	VSYNC	vertical synchronization
15	SCL	clock signal

2.5.11 DB15 interface description

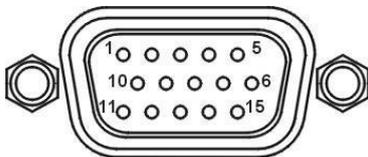

Pin description of component video DB15 port is as follows:


PI N	VGA	Componen t	S-Vide o	Composi te
1	RED	Pr	N/C	N/C
2	GREEN	Y	N/C	N/C
3	BLUE	Pb	N/C	N/C
4	ID2	N/C	N/C	CVBS
5	GND	GND	N/C	GND
6	GND	GND	GND	N/C
7	GND	GND	GND	N/C
8	GND	N/C	N/C	N/C
9	N/C	N/C	Y	N/C
10	GND	N/C	N/C	N/C
11	N/C	N/C	C	N/C
12	SDA	N/C	N/C	N/C
13	HSYNC	N/C	N/C	N/C
14	VSYNC	N/C	N/C	N/C
15	SCL	N/C	N/C	N/C

2.5.12 DB15 male socket transfer cable(S terminal, RCA head)



Pin description of VGA video output board is as follows:

2.5.13 DB15 male socket transfer cable definition

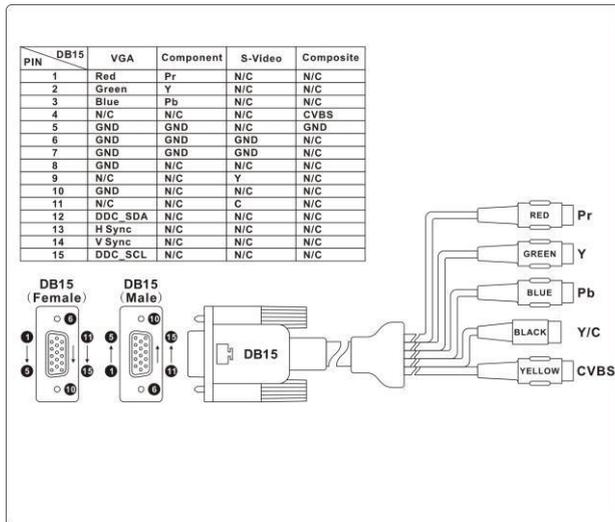

VGA input board of matrix supports the input of analog, composite video and component video; VGA output board supports the output of analog, composite video and component video. If users need input or output component video signal, they need connect DB15 male socket transfer cable(S terminal, RCA head). The two kinds of connection are different, two things should be noticed:

1. the connection of VGA input board: support VGA,

CVBS and YPbPr signal; when CVBS and YPbPr signal are needed, only three lines of DB15 male socket transfer cable terminal are useful. As shown above, the connection of YPbPr signal is Y attached to green line, Pb attached to blue line, Pr attached to red line; For CVBS signal, green line is the right one, signals can be recognized automatically, no setting is needed (VGA input port can access three signals, but one port can only attach to one signal a time).


2, the connection of VGA output board: support VGA, CVBS and YPbPr signal; when CVBS and YPbPr signal are needed, four lines of DB15 male socket transfer cable terminal are useful. As shown above, the connection of YPbPr signal is Y attached to green line, Pb attached to blue line, Pr attached to red line; For CVBS signal, only yellow line is the right one. VGA or YPbPr signal output requires instruction setting; CVBS output has always been on, no setting is needed.

Chapter Three Control Panel Operating Instructions


3.1 panel description

3.1.1 VIS-VW0808 panel

VIS-VW0808 front panel:

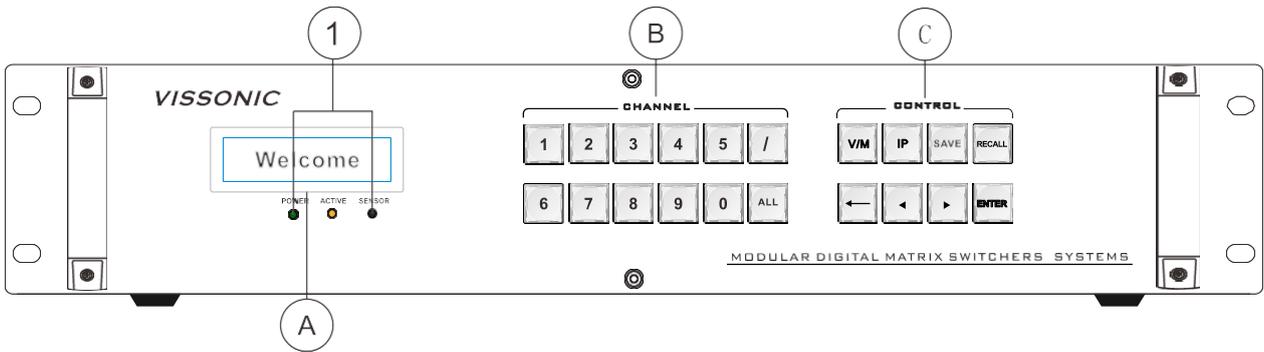


VIS-VW0808 back panel:

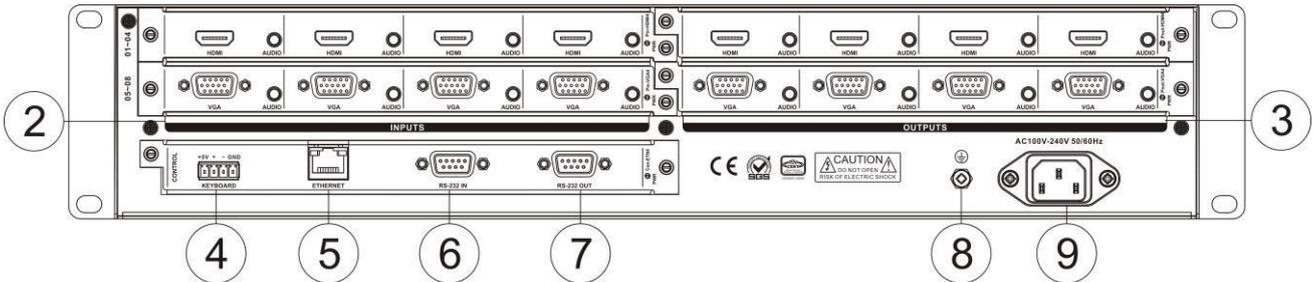


3.1.2 VIS-VW1616 panel

VIS-VW1616 front panel:

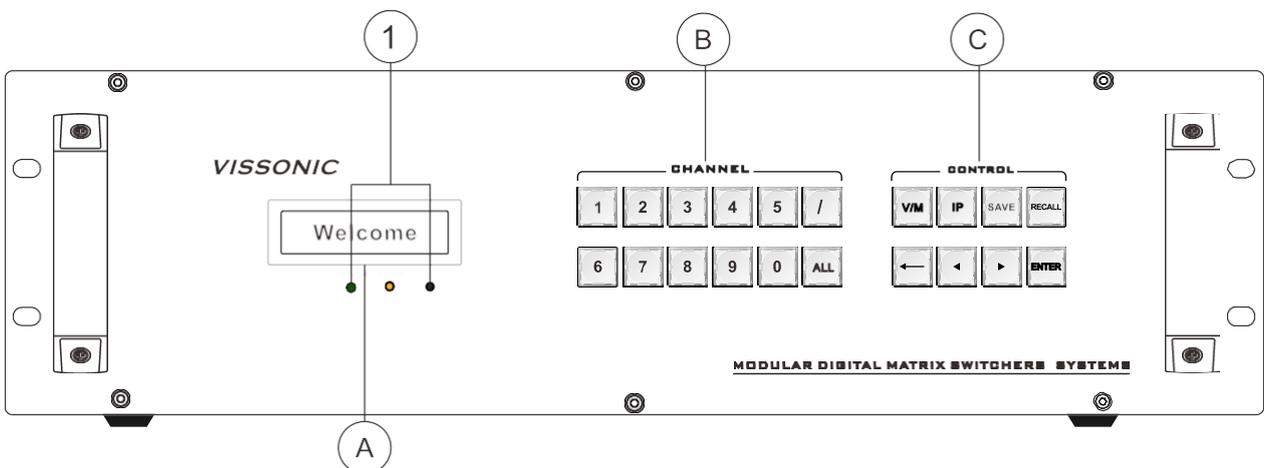


VIS-VW1616 back panel:

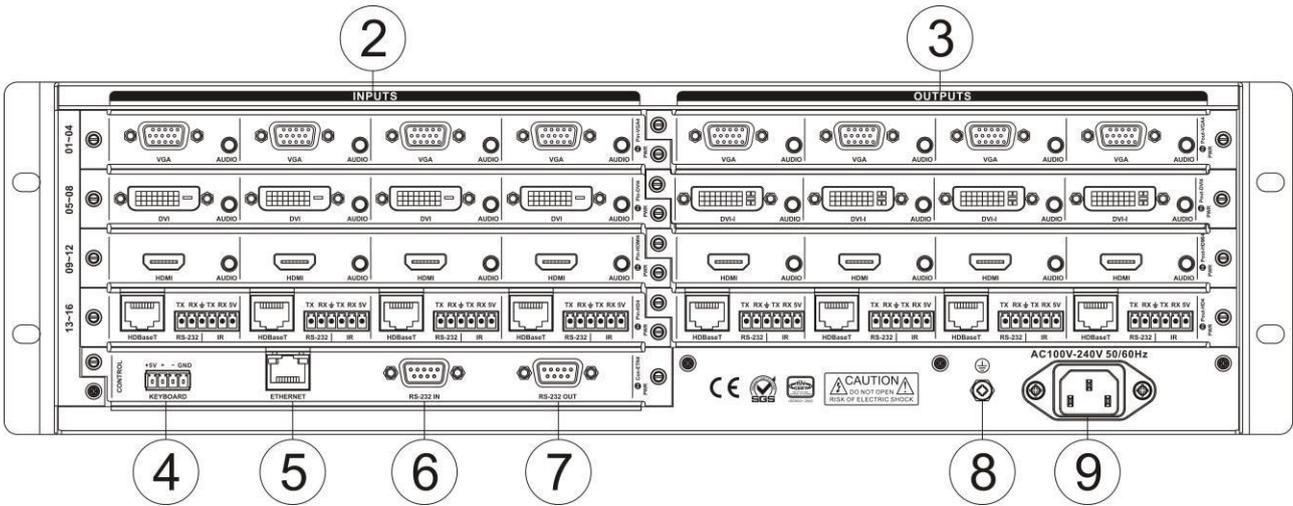


3.1.3 VIS-VW3636 panel

VIS-VW3636 front panel:

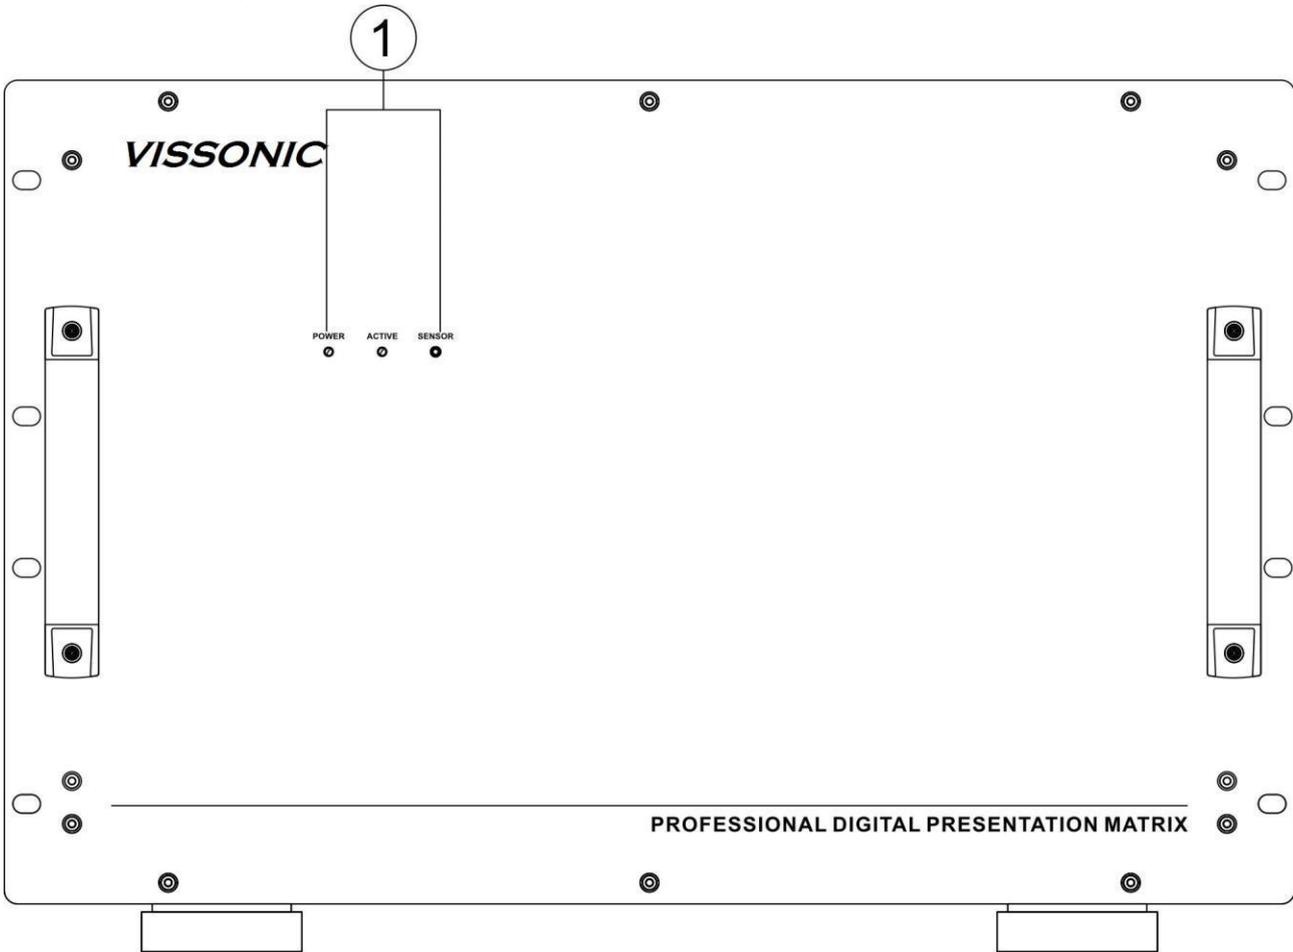

VIS-VW3636 back panel:

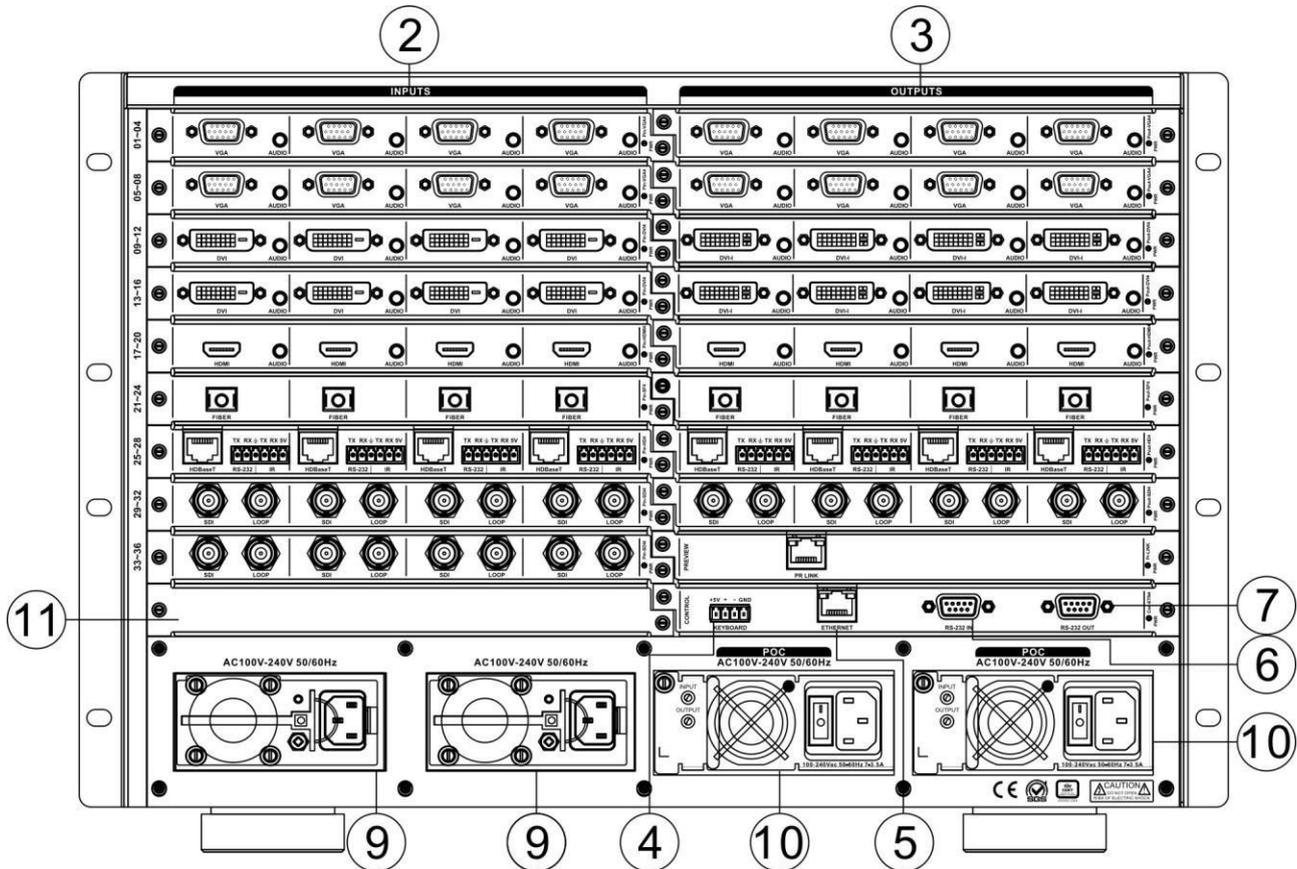

① **POWER:** power light

ACTIVE: state light of receiving commands

SENSOR: infrared receiving window

② **INPUTS**—signal input terminal

Various boards are adopted as signals' input source, providing channel 8/16/36/72 input terminals to connect corresponding input devices.

③ **OUTPUTS**—signal output terminal

Various boards are adopted as signals' output source, providing channel 8/16/36/72 output terminals to connect corresponding output devices.

④ **KEYBOARD**—extended keyboard interface

Channel 1 KEYBOARD interface, used together with MCP100 keyboard.

⑤ **ETHERNET**—RJ45 network interface

Ethernet link interface can be used to link

local area network, internet and so on. Green light indicates the link is normal, sparkling orange light indicates it is receiving or sending data.

⑥ **RS-232 IN**—RS-232 serial port input

Channel 1 independent RS-232 port (DB9 female socket) can be use to link PC or central control devices to control the system.

⑦ **RS-232 OUT**—RS-232 serial port output

Channel 1 independent RS-232 port (DB9 male socket) can be use to link PC or central control devices to control the system.

⑧ **Earthing rod**

⑨ **Power interface**

System power supports AC100~240V 50/60Hz input.

⑩ **POC power port**

System POC offers power to external devices, and is only applicable to HD boards of remote transmitters.

11 Blank slot

The lowest position of VIS-VW3636 and VIS-VW7272 matrix's input board slot is blank, video board can not be used.

12 Infrared serial port switching board slot

It is used to access infrared serial port switching board. Accessing infrared R232 serial port extended switching port can transmit infrared signal or RS232 signal of HD, optical fiber and other input boards to output boards by setting instructions, and vice versa (output board -- input board). Only VIS-VW7272 has this slot (infrared switching board is VIS-VW7272's optional board)

- A. **LCD display**
- B. **CHANNEL**——select the input/output channel to switch
- C. **CONTROL**——input the commands to switch, call profile, set IP etc operation.

name/model	Appearance
VW-HM4I HDMI seamless input board	
VW-DV4I DVI seamless input board	
VW-HD4I HDB seamless input board	
VW-VA4I VGA seamless input board	
VW-SD4I SDI seamless input board	
VW-SF4I optical fiber input board	
VW-HM4O HDMI seamless output board	
VW-DV4O HDMI seamless output board	

VW-HD40 HDB seamless output board	
VW-VA40 VGA seamless output board	
VW-SD40 SDI seamless output board	
VW-SF40 optical fiber seamless output board	
VP-HM40 HDMI video wall output board	
VP-DV40 DVI HDMI video wall output board	
VP-HD40 HDB video wall output board	
VP-SF40 optical fiber video wall output board	
VW-PVW preview board	
VW-Con ETN4 control board	
VW-Con ETN5 advanced control board	

3.2 input boards

3.2.1 VW-HM4I input board function features

- ◆ Four-way HDMI-A interface, 3.5 audio base;
- ◆ Maximum transmission distance can reach 35 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio, support HDMI embedded audio be input selectively;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Maximum supported resolution: HDPC: 1920x1200P@60; HDTV: 1920x1080P@60.

3.2.2 VW-DV4I input board function features

- ◆ Four-way DVI-D interface, 3.5 audio base;
- ◆ Maximum transmission distance can reach 35 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio input;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Maximum supported resolution: HDPC: 1920x1200P@60; HDTV: 1920x1080P@60.

3.2.3 VW-HD4I twisted pair input board function features

- ◆ Four-way high-speed RJ45 interface, four-way 6PIN phoenix interface;
- ◆ Maximum transmission distance via CAT5e/6

can reach 35 meters;

- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support infrared serial input, combined with IO switch board, enable to realize infrared port switch;
- ◆ Support HDBaseT protocol;
- ◆ Support of providing power for external POC, matched with POC power, 3636 and its upgrades support this function;
- ◆ Maximum supported resolution:
HDPC: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.2.4 VW-VA4I input board function features

- ◆ Four-way DB15 interface, 3.5 audio base;
- ◆ Support of inputting VGA, CVBS and YPbPr signal, input signal source can be recognized automatically;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio input;
- ◆ Maximum supported resolution:
HDPC: 1920x1200P@60;
HDTV: 1920x1080P@60.



Only when external video is input at VGA interface, VGA input board's 3.5mm audio port will receive audio signal.

3.2.5 VW-SD4I input board function features

- ◆ Four-way BNC female interface, four-way BNC female interface looping out;
- ◆ Support hot plugging;
- ◆ Support HD/3G SDI signal.

3.2.6 VW-SF4I optical fiber input board function features

- ◆ Four-way single-core optical fiber input;
- ◆ Support hot plugging;
- ◆ Transmission distance with the aid of optical

fiber transmitter can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);

- ◆ Using IO switch board enables to realize infrared port switch;
- ◆ Maximum supported resolution:
HDPC: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.2.7 VW-IP2I input card Functions and Features

- ◆ 2 channels high speed RJ45 interfaces;
- ◆ Maximal output distance with CAT5e/6 cable 100 M;
- ◆ Support web logging in to configure the network protocol, LAN parameters, and Remote Network parameters, etc.;
- ◆ HDTV: 1920x1080P@60.

Note: The IP address of the connected IP camera and the interface's local IP address should be within the same network segment.

3.3 output boards

3.3.1 VW-HM4O seamless output board function features

- ◆ Four-way HDMI-A interface seamless output, 3.5 audio base;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio and HDMI embedded audio be output together;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Maximum supported resolution:
HDPC: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.3.2 VW-DV40 seamless output board function features

- ◆ Four-way DVI-I interface seamless output, 3.5 audio base;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support analog audio output;
- ◆ Support EDID reading function;
- ◆ Support DVI and VGA be output selectively;
- ◆ DVI output support DVI1.0 protocol;
- ◆ Maximum supported resolution:
HDCP: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.3.3 VW-HD40 twisted pair seamless output board function features

- ◆ Four-way high-speed RJ45 interface seamless output, four-way 6PIN phoenix interface;
- ◆ Maximum transmission distance via CAT5e/6 can reach 100 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support infrared serial output, combined with IO switch board, enable to realize infrared port switch;
- ◆ Support HDBaseT protocol;
- ◆ Support of providing power for external POC, matched with POC power, 3636 and its upgrades support this function;
- ◆ Maximum supported resolution:
HDCP: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.3.4 VW-VA40 seamless output board function features

- ◆ Four-way DB15 interface seamless output, 3.5 audio base;
- ◆ Support of outputting VGA, CVBS and YPbPr signal selectively;
- ◆ Support hot plugging, support seamless switch of audio and video together;

- ◆ Support analog audio output;
- ◆ Maximum supported resolution:
HDCP: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.3.5 VW-SD40 seamless output board function features

- ◆ Four-way BNC female interface seamless output, four-way BNC female interface looping out;
- ◆ Support hot plugging;
- ◆ Support HD/3G SDI signal.

3.3.6 VW-SF40 optical fiber seamless output board function features

- ◆ Four-way single-core optical fiber output;
- ◆ Support hot plugging;
- ◆ Transmission distance with the aid of optical fiber transmitter can be 300 meters (multimode) , and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Using IO switch board enables to realize infrared port switch;
- ◆ Maximum supported resolution:
HDCP: 1920x1200P@60;
HDTV: 1920x1080P@60.

3.3.7 VP-HM40 stitching output board function features

- ◆ Four-way HDMI-A interface output, 3.5 audio base;
- ◆ Stitching function;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support EDID reading function;
- ◆ Support HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol;
- ◆ Four-way HDMI seamless output, maximum supported resolution is 1920*1200@60 HZ, with four-way independent audio output, enabling HDMI audio dividing;

- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

3.3.8 VP-DV40 switching output board function features

- ◆ Four-way DVI-I female interface output, 3.5 audio base;
- ◆ Stitching function;
- ◆ Maximum transmission distance can reach 7 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support EDID reading function;
- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

3.3.9 VP-HD40 twisted pair stitching output board function features

- ◆ Four-way high-speed RJ45 interface output, four-way 6PIN phoenix interface;
- ◆ Stitching function;
- ◆ Maximum transmission distance via CAT5e/6 can reach 100 meters;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support infrared serial output, combined with IO switch board, enable to realize infrared port switch;
- ◆ Support EDID reading function;
- ◆ Support HDBaseT protocol;
- ◆ Support of providing power for external POC, matched with POC power, 3636 and its upgrades support this function;
- ◆ Support four-way twisted pair seamless o utput, support RS232 on the board, IR int erface;
- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

3.3.10 VP-VA40 stitching output board function features

- ◆ Four-way DB15 interface output, 3.5 audio base;
- ◆ Stitching function;

- ◆ Support of outputting VGA, CVBS and YPbPr signal selectively;
- ◆ Support hot plugging, support seamless switch of audio and video together;
- ◆ Support four-way VGA seamless output, maximum supported resolution is 1920*1200@60HZ, with four-way independent audio output, enabling to output YUV/CVBS signal by switching interface;
- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

3.3.11 VP-SF40 optical fiber stitching output board function features

- ◆ Four-way single-core optical fiber output;
- ◆ Stitching function;
- ◆ Support hot plugging;
- ◆ Transmission distance with the aid of optical fiber transmitter can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Using IO switch board enables to realize infrared port switch;
- ◆ Support four-way single-core optical fiber seamless output, maximum supported resolution is 1920*1200@60HZ; transmission distance with the aid of VIS-USFCOMP900R can be 300 meters (multimode), and maximum transmission distance can reach 20 kilometers (signal-mode);
- ◆ Single screen can open 2 windows; signal s can overlay, roam and scale arbitrarily.

3.4 preview boards

3.4.1 VW-PVW preview board function features

- ◆ One RJ45 interface preview output, you can simultaneously view four-way video packet information or automatic round robin;
- ◆ each way supported video resolution: 1280x720@30fps;

800x600@30fps;

640x480@30fps;

352x288@30fps;

- ◆ applied H.264 JPEG multi-stream coding, supported frame rate is 1/16 ~ 60fps;
- ◆ Support hot plugging;
- ◆ Support control video switching by preview.

- ◆ Support hot plugging.

3.5 control boards

3.5.1 VW-Con ETN4 control board function features

- ◆ Two DB9 fully functional serial ports, enabling to control multiple peripherals, to receive commands and to forward data;
- ◆ One RJ45 interface can attach to PC software off board, enabling to control, query devices and so on;
- ◆ One 4P phoenix-head keyboard interface can attach to keyboards off board, enabling to control devices;

3.5.2 VW-Con ETN5 advanced control board function features

- ◆ Two DB9 fully functional serial ports, enabling to control multiple peripherals and to receive commands;
- ◆ One RJ45 interface, enabling to download, upgrade controlled programming and to query information;
- ◆ One 4P phoenix-head keyboard interface, enabling to operate with keyboards;
- ◆ One 3P phoenix-head serial port, enabling to output debugging and to receive commands;
- ◆ Support hot plugging;
- ◆ Support controlled programming.

3.6 specifications and technical parameters

Model	VW-HM4I	VW-HM4O
Specifications		
Protocol	HDMI1.3a, HDCP1.3protocol, DVI1.0 protocol;	
Video		
Gain	0dB	
Pixel bandwidth	165MHz, all-digital	
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)	
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60 , 1280x800@60, 1280x960@60, 1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1080@25,1920x1080P@30,1920x1200P@60,1920x1080P@60,1920x1080i@50,1920X1080i@60	
Clock Jitter	<0.15 Tbit	
Rise time	<0.3Tbit (20%--80%)	
Fall time	<0.3Tbit (20%--80%)	

Model	VW-HM4I		VW-HM4O	
Specifications				
Maximum transmission delay	5nS(\pm 1nS)			
Interface	Four-way HDMI-A interface, four-way 3.5mm audio base			
Signal strength	T.M.D.S. +/- 0.4Vpp			
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V			
Impedance	50 Ω			
EDID	Default EDID and reading function		N/A	
Maximum DC bias error	15mV			
Suggested maximum input/output transmission distance	Maximum transmission distance is 35 meters with 1600x1200@60 (recommend to use certified HDMI dedicated wires, such as Molex TM wire)		Maximum transmission distance is 7 meters with 1600x1200@60 (recommend to use certified HDMI dedicated wires, such as Molex TM wire)	
Product weight	About 0.5KG		About 0.5KG	
Maximum consumption	15W		15W	

Model	VW-DV4I		VW-DV4O	
Specifications				
Protocol				
DVI1.0 protocol				
Video				
Gain	0dB			
Pixel bandwidth	165MHz, all-digital		165MHz, all-digital or analog	
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)		2.25Gbps all-digital or 350MHz analog	
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920x1080P@60, 1920x1080i@50,1920X1080i@60;			
Clock Jitter	<0.15 Tbit			

Model	VW-DV4I	VW-DV4O
Specifications		
Rise time	<0.3Tbit (20%--80%)	
Fall time	<0.3Tbit (20%--80%)	
Maximum transmission delay	5nS(±1nS)	
Interface	Four-way DVI-D female interface, four-way 3.5mm audio base	Four-way DVI-I female interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp	
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V	
Impedance	50 Ω	
EDID	Default EDID and reading function	N/A
Maximum DC bias error	15mV	
Suggested maximum input/output transmission distance	Maximum transmission distance is 35 meters with 1600x1200@60 (recommend to use certified HDMI dedicated wires, such as Molex TM wire)	Maximum transmission distance is 7 meters with 1600x1200@60 (recommend to use certified HDMI dedicated wires, such as Molex TM wire)
Product weight	About 0.5KG	About 0.5KG
Maximum consumption	15W	15W

Model	VW-HD4I	VW-HD4O
Specifications		
Link input/output		
Interface	Four-way high-speed base and four-way 6PIN phoenix base	
Supported protocol	HDBaseT protocol	
Pixel bandwidth	165MHz, all-digital	
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)	
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920x1080P@60,1920x1080i@50,1920x1080i@60;	
Signal type	High-speed differential signal defined in HDBaseT protocol	

Model Specifications	VW-HD4I	VW-HD4O
Cable transmission power	POC power supply (+48V), it should be used with our company CAT5 series transmitter which can provide power supply via cables.	POC power supply (+48V), it should be used with our company CAT5 series transmitter which can provide power supply via cables.
Impedance	50 Ω	
EDID	Default EDID	N/A
Maximum DC bias error	15mV	
Suggested maximum input/output transmission distance	Maximum transmission distance is 100 meters with 1600x1200@60 (recommend to use NEXANS CAT5e/6 dedicated wires)	
Product weight	About 0.5KG	About 0.5KG
Maximum consumption	27W	22W

Model Specifications	VW-VA4I	VW-VA4O
Interface	DB15 interface, 3.5mm audio base	
Supported resolution	Composite video CV	Input board: 480i/NTSC,576i/PAL Output board: 480i/NTSC,576i/PAL
	Component video YPbPr	Input board:480i/NTSC,480P/NTSC,576i/PAL,576P/PAL,1280x720@50,1280x720@60,1920x1080i@50,1920X1080P@60; Output board: 1280x720@60,1920X1080P@60;

Model Specifications		VW-VA4I	VW-VA4O	
	VGA video	Input board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1360x1024@60,1366x768@60,1440x900@60,1400x1050@60,1600x900@60,1600x1200@60,1680x1050@60,1920X1080P@60; Output board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60;		
Gain		0dB	0 dB	0 dB
Bandwidth		150MHz @ -3dB	350MHz @ -3dB	380 MHz
Differential phase error		0.1°,3.58-4.43 MHz	0.1°,3.58-4.43 MHz	
Differential gain error		0.1% , 3.58-4.43 MHz	0.1% , 3.58-4.43 MHz	
Signal strength		1V p-p :composite video (CV BS)	1V p-p :(Y in component video) 0.3V p-p: (PbPr/CbCr in component video)	0.63V p-p -- 0.9 V p-p
Minimum/maximum level		Analog signal: -2V/+2V	Analog signal: -2V/+2V	RGB signal: 0V/1.0V HV signal: 0V/5.0V
Impedance		75 Ω	75Ω	75Ω
Return loss		<-30dB@5MHz	<-30dB@5MHz	<-30dB@5MHz
Product weight		About 0.5KG		
Maximum consumption		20W		

Model Specifications		VW-SD4I	VW-SD4O
Interface		Four-way BNC input/output, four-way BNC looping out	
Supported protocol		SMPTE 425M, SMPTE 424M,SMPTE 292M,SMPTE 259M-C,DVB-ASI	
Pixel bandwidth		2.970Gb/s, 1.485Gb/s, 270Mb/s,	

Model Specifications	VW-SD4I	VW-SD4O
Supported resolution	1920x1080@25,1920x1080P@30,1280x720@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;	
Supported format	HD-SDI 3G-SDI	
Product weight	About 0.5KG	
Maximum consumption	20W	

Model Specifications	VW-SF4I	VW-SF4O
Interface	Four-way high-speed single-core SC optical fiber interface	
Video		
Optical fiber interface	SC connector	
Optical fiber type	Multimode/Single Mode(optional)	
Wavelength	Multimode 850nm/Single Mode: 1310 –1620nm(optional)	
Interface bandwidth	Forward: 6.25Gbps, reverse: 3.125Gbps	
Clock Jitter	<0.15 Tbit	
Rise time	<0.3Tbit (20%--80%)	
Fall time	<0.3Tbit (20%--80%)	
Suggested maximum input transmission distance	OM3 multimode optical fiber: <300 meters, single mode optical fiber: 2~20 kilometers, 1920x1080p@60	
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;	
Product weight	About 0.5KG	
Maximum consumption	20W	

Model	VP-IP2I
Specifications	
Protocol	
RTP, RTCP, RTSP, TCP, UDP RTSP, UDP	
Video	
Transmission distance	100m
Compression technology	H264.
Max.Delay Time	100ms
Default IP	192.168.1.180
Network Bandwidth	100M
Max. Resolution	最大支持分辨
Fall time	<0.3Tbit (20%--80%)
Weight	0.5kg
Consumption	25W

Model	VP-HM40
Specifications	
Protocol	
HDMI1.3a, HDCP1.3 protocol, DVI1.0 protocol.	
Video	
Gain	0dB
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1080@25,1920x1080P@30,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way HDMI-A interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 7 meters with 1600x1200@60 (recommend to use HDMI dedicated wires, such as Molex TM wire)
Product weight	About 0.5KG
Maximum consumption	15W

Model	VP-DV40
specifications	
Protocol	
DVI1.0 protocol	
Video	
Gain	0dB
Pixel bandwidth	165MHz, all-digital or analog
Interface bandwidth	2.25Gbps all-digital or 350MHz analog
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Maximum transmission delay	5nS(±1nS)
Interface	Four-way DVI-I interface, four-way 3.5mm audio base
Signal strength	T.M.D.S. +/- 0.4Vpp
Minimum/maximum signal level	T.M.D.S. 2.9V/3.3V
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 7 meters with 1600x1200@60 (recommend to use DVI dedicated wires,such as Molex TM wire)
Product weight	About 0.5KG
Maximum consumption	15W

Model	VP-HD40
Specifications	
Link input/output	
Interface	High-speed RJ45 base and 6PIN phoenix base
Video	
Supported protocol	HDBaseT protocol
Pixel bandwidth	165MHz, all-digital
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60,1920x1080i@50,1920X1080i@60;
Signal type	High-speed differential signal defined in HDBaseT protocol
Cable transmission power	POC power supply (+48V), it should be used with our company CAT 5 series transmitter which can provide power supply via cables.
Impedance	50 Ω
EDID	N/A
Maximum DC bias error	15mV
Suggested maximum input/output transmission distance	Maximum transmission distance is 100 meters with 1600x1200@60 (recommend to use NEXANS CAT5e/6 dedicated wires)
Product weight	About 0.5KG
Maximum consumption	22W

Model		VP-VA40	
Specifications			
Interface		DB15 interface, 3.5mm audio base	
Supported resolution	Composite video CV	Input board: 480i/NTSC,576i/PAL Output board: 480i/NTSC,576i/PAL	
	Component video YPbPr	Input board: 480i/NTSC,480P/NTSC,576i/PAL,576P/PAL,1280x720@50,1280x720@60,1920x1080i@50,1920X1080P@60; Output board: 1280x720@60,1920X1080P@60;	
	VGA video	Input board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1360x1024@60,1366x768@60,1440x900@60,1400x1050@60,1600x900@60,1600x1200@60,1680x1050@60,1920X1080@60; Output board: 800x600@60,1024x768@60,1280x720@60,1280x768@60,1280x800@60,1280x960@60,1280x1024@60,1360x768@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920X1080P@60;	
Gain	0dB	0 dB	0 dB
Bandwidth	150MHz @ -3dB	350MHz @ -3dB	380 MHz
Differential phase error	0.1°,3.58-4.43 MHz	0.1°,3.58-4.43 MHz	
Differential gain error	0.1% , 3.58-4.43 MHz	0.1% , 3.58-4.43 MHz	
Signal strength	1V pp :composite video (CVBS)	1V pp :(Y in component video) 0.3Vpp :(PbPr/CbCr in component video)	0.63V pp -- 0.9 V pp
Minimum/maximum signal level	Analog : -2V/+2V	Analog : -2V/+2V	RGB signal:0V/1.0V HV signal: 0V/5.0V
Impedance	75 Ω	75Ω	75Ω
Return loss	<-30dB@5MHz	<-30dB@5MHz	<-30dB@5MHz
Product weight	About 0.5KG		
Maximum consumption	20W		

Model	VP-SD40
Specifications	
Interface	Four-way BNC interface, four-way BNC looping out
Protocol	SMPTE 425M, SMPTE 424M, SMPTE 292M, SMPTE 259M-C, DVB-ASI
Pixel bandwidth	2.970Gb/s, 1.485Gb/s, 270Mb/s,
Supported resolution	1920x1080@25,1920x1080P@30,1280x720@60,1920x540i@50,1920x540i@60;
Interface bandwidth	2.25Gbps, all-digital (6.75Gbps in all, each color is 2.25Gbps)
Supported resolution	1920x1080@25,1920x1080P@30,1280x720@60,1920x1080P@60,1920x1080i@50,1920x1080i@60;
Product weight	About 0.5KG
Maximum consumption	20W

Model	VP-SF40
Specifications	
Interface	Four-way high-speed single-core SC optical fiber interface
Video	
Optical fiber interface	SC connector
Optical fiber type	Multimode/Single Mode(optional)
Wavelength	Multimode 850nm/Single Mode: 1310 –1620nm(optional)
Interface bandwidth	Forward: 6.25Gbps, reverse: 3.125Gbps
Clock Jitter	<0.15 Tbit
Rise time	<0.3Tbit (20%--80%)
Fall time	<0.3Tbit (20%--80%)
Suggested maximum input/output transmission distance	OM3 multimode optical fiber: < 300 meters, single mode: 2~20 kilometers, 1920x1080p@60
Supported resolution	800x600@60,1024x768@60,1280x720@60,1280x800@60,1280x1024@60,1366x768@60,1440x900@60,1600x900@60,1600x1200@60,1920x1200P@60,1920x1080P@60;
Product weight	About 0.5KG
Maximum consumption	20W

Model Specifications	VIS-VW0808	VIS-VW1616	VIS-VW3636	VIS-VW7272
Interface				
Number of input boards/input channels	2/8	4/16	9/36	18/72
Number of output boards/output channels	2/8	4/16	9/36	18/72
Supported input board type	VW-HM4I; VW-DV4I; VW-HD4I; VW-VA4I; VW-SF4I; VW-SD4I			
Supported seamless output board type	VW-HM4O; VW-DV4O; VW-HD4O; VW-VA4O; VW-SF4O; VW-SD4O;			
Supported stitching output board type	VP-HM4O; VP-DV4O; VP-HD4O; VP-VA4O; VP-SF4O; VP-SD4O;			
Interface bandwidth	6.75Gbps			
Serial port control				
Serial control interface	RS-232, 9 pin female D type interface and 9 pin male D type interface			
Baud rate and protocol	Baud rate: 9600, data bits: 8 bits, stop bits: 1 bit, no parity check bit			
Serial control interface structure	9 pin female D type interface : 2 = TX, 3 = RX, 5 = GND; 9 pin male D type interface : 2 = RX, 3 =TX, 5 = GND			
KEYBOARD control interface				
Keyboard control interface	Four-way 3.8mm phoenix interface			
Operation method	To use with extended keyboard MCP100			
Keyboard control interface structure	+5V=DC5V , + = DATA+, -=DATA- GND = signal ground			
Ethernet control				
Ethernet control interface	RJ-45 female interface			
Ethernet control protocol	TCP/IP			
Ethernet control speed rate	Adaptive 10M / 100M, full-duplex or half-duplex			
Specifications				
System power	100VAC ~ 240VAC, 50/60 Hz, International adaptive power			
Storage, work temperature	0 ~ +50°C			
Storage, work humidity	20% ~70%			

Model Specifications	VIS-VW0808	VIS-VW1616	VIS-VW3636	VIS-VW7272
Chassis size	2U	3U	7U	12U
Product weight (without boards)	About 5Kg	About 7Kg	About 16Kg	About 29Kg
Full power (without boards)	About 18W		About 30W	
Size	445x400x88	445x400x132	445x400x310	445x400x532
Mean time between failures	30,000 hours			
Quality guarantee	One year warranty and lifetime maintenance			

Chapter Four Instructions

4.1 X9 processor instructions

Serial port protocol: baud rate: 9600, data bits: 8, stop bits: 1, parity bits: none

Ethernet: protocol: TCP, IP: 192.168.1.190, PORT: 6666

Meanings of instructions:

[X1], [X2]... [Xn] represents the corresponding input port;

[Y1], [Y2]... [Yn] represents the corresponding output port;

[TX1], [TX2]... [TXn] represents the corresponding input port's serial port/infrared transmitter channel;

[RX1], [RX2]... [RXn] represents the corresponding input port's serial port/infrared receiver channel; [TY1],

[TY2]... [TYn] represents the corresponding output port's serial port/infrared transmitter channel;

[RY1], [RY2]... [RYn] represents the corresponding output port's serial port/infrared receiver channel;

H represents Arabic numerals; n in the number of the corresponding model's input/output interface, such as VIS-VW7272, the maximum value of n is 72.



[] of [x] in the following instruction list is annotation, in practice, it should be removed. For example, \$[x]AudioA! should be \$8AudioA! in practice.

Instructions (pc-->X9)	Functions	Returned information	Examples
System instructions			
/:BellOff;	Close buzzer	<Closed The Bell.>	/:BellOff;
/:BellOn;	Open buzzer	<Opened The Bell.>	/:BellOn;
/:MessageOff;	Close serial port return, only few characters such as SWITCH or OK! is allowed	<Closed The Message Return.>	/:MessageOff;
/:MessageOn;	Open serial port return	<Enabled The Message Return.>	/:MessageOn;
/:HeartBeat;	PC software heartbeat	<HeartBeat>	/:HeartBeat;
\$Default!	Control board restore default(control board reset and restart)	None	\$Default!
\$(X1)DefaultIn!	Restore channel [X1] default input	<Set Succeed!>	\$1DefaultIn!
\$(Y1)DefaultOut!	Restore channel [Y1] default output	<Set Succeed!>	\$1DefaultOut!
\$AllDefaultIn!	Restore all default input	<Set Succeed!>	\$AllDefaultIn!
\$AllDefaultOut!	Restore all default output	<Set Succeed!>	\$AllDefaultOut!
Status [Y1].	Query channel [X1] output current status	V:[x1] -> [Y1];	Status1.
Status.	Query all output channels current status	V:[x1] -> [Y1];	Status.

Save [H].	Save current state to [H], [Y] is number 0 - 9	<Save to F1!>	Save8.
Recall [H].	Recall [H], [H] is number 0-9	<Recall from F1!>	Recall8.
Clear [H].	Clear data of [H]	<Clear F1!>	Clear8.
FanTemp[H].	Set fan temperature, start fan at [H]	<Set Succeed!>	FanTemp30.
<control/.../>	Control screen ... The instructions to control the big screen, supported maximum bit is 50 bits. In controlling the network, data is forwarded from serial port 0, while date is forwarded from another serial port in controlling the serial port.	<Set Succeed!>	<control/open com0/>

Instructions to acquire board information

/:ScanPortType;	Scan card slot	<Port/37/In/HDMI/Ver3.1/Ver1.2>	/:ScanPortType;
/:ScanPortResolution;	Scan all input/output boards resolution	<Resolution/37/In/noinput>	/:ScanPortResolution;
\$(X1)ReadInResolution!	Acquire channel [X1] input board resolution	<Resolution/37/In/noinput>	\$(1)ReadInResolution!
\$(Y1)ReadOutResolution!	Acquire channel [Y1] output board resolution	<Resolution/37/Out/unknown>	\$(1)ReadOutResolution!
\$(X1)ReadInType!	Acquire channel [X1] input board type	<Type/37/In/HDMI>	\$(1)ReadInType!
\$(Y1)ReadOutType!	Acquire channel [Y1] output board type	<Type/37/Out/HDMI>	\$(1)ReadOutType!
\$(X1)TemperatureIn!	Acquire channel [X1] input board temperature	<temp/[37,40]/In/24.5>	\$(1)TemperatureIn!
\$(Y1)TemperatureOutput!	Acquire channel [Y1] output board temperature	<temp/[37,40]/Out/24.5>	\$(1)TemperatureOutput!
AllTemperatureIn!	Analyze all channels input board temperature	<temp/[37,40]/In/24.5> <temp/[65,68]/In/25.5>	AllTemperatureIn!
AllTemperatureOutput!	Analyze all channels output board temperature	<temp/[37,40]/Out/24.5> <temp/[61,64]/Out/26.5>	AllTemperatureOutput!
AllAnalyseOut!	Analyze all output chips work status		AllAnalyseOut!
AllAnalyseIn!	Analyze all input chips work status		AllAnalyseIn!
\$(X1)AnalyseIn!	Analyze work status of channel [X1] input board chips		\$(1)AnalyseIn!

\$[Y1]AnalyseOut!	Analyze work status of channel [Y1] output board chips		\$1AnalyseOut!
Instructions to choose audio infrared serial port			
[\$X1]AudioA!	Select channel [X1] input board analog audio/Phoenix infrared serial port input	<Set Succeed!>	\$1AudioA!
[\$X1]AudioD!	Select channel [X1] input board signal audio/network infrared serial port input	<Set Succeed!>	\$1AudioD!
[\$Y1]AudioAOut!	Select channel [Y1] output board infrared serial port Phoenix output	<Set Succeed!>	\$1AudioAOut!
[\$Y1]AudioDOut!	Select channel [Y1] output board infrared serial port output	<Set Succeed!>	\$1AudioDOut!
EDID management instructions	(in acquiring EDID, EDID data is between <EDID Start/ and /EDID End>. If you want to update or edit EDID on PC, send Update EDID[X1] first to assign a path, then sent updated EDID data, in the end, send UpdateEnd.		
GetInEDID[X1].	Acquire channel [X1] input board EDID (HDMI DVI board effective, is the EDID of current device)	<EDID Start/.../EDID End>	GetInEDID1.
GetOutEDID[Y1].	Acquire channel [Y1] output board EDID (HDMI DVI board effective, is the EDID of current device)	<EDID Start/.../EDID End>	GetOutEDID1.
[Y1]EDIDTo[X1].	Read and output channel [Y1] EDID, and input it to channel [X1] (HDMI DVI board effective)	<Set EDID succeed!>	1EDIDTo1.
UpdateEDID[X1].	Update channel [X1] EDID on PC, (HDMI DVI board effective)	<Update EDID start!>	UpdateEDID1.
UpdateEnd.	Exit update EDID	<Exit Update EDID!>	UpdateEnd.
Instructions to switch audio			
[X1]V[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	V:[X1] -> [Y1];	1V1.
[X1]v[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	v:[X1] -> [Y1];	1v1.
[X1]B[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	B:[X1] -> [Y1];	1B1.
[X1]b[Y1].	Channel [X1] input, channel [Y1] output, the audio is switched. When [X1] is 0, it represents closing channel Y1 audio.	b:[X1] -> [Y1];	1b1.
[X1]V[Y1],[Y2],[Y3]	Channel [X1] input, channel [Y1][Y2][Y3] output	V:[X1] -> [Y1];	1V1,2,3.
[X1]All.	Channel [X1] input, all channels output. When [X1] is 0, it represents closing all channel audio.	V:[X1] -> [x2];	1All.
All\$.	Close all channels	V:[X1] -> [x2];	All\$.

[X1]\$.	Close channel [X1] output	V:[X1] -> [x2];	1\$.
All#.	Input channels and output channels are mapped respectively.	V:[X1] -> [x2];	All#.
Demo.	The system is set at demo mode. In this mode, each input/output channel will be switched in turn; the time interval is 3 seconds.	<System enter into demo mode!>	Demo.
Instructions to control the network			
<^SPORT>	Query the port number of current matrix network	<SPORT:[X1]>	<^SPORT>
<^SIPR>	Query the IP of current matrix network	<SIPR:[X1].[X2].[X3].[X4]>	<^SIPR>
<^SUBR>	Query the subnet mask of current matrix network	<SUBR:[X1].[X2].[X3].[X4]>	<^SUBR>
<^GAR>	Query the gateway of current matrix network	<GAR:[X1].[X2].[X3].[X4]>	<^GAR>
<^SHAR>	Query hardware address of current matrix network	<SHAR:[X1].[X2].[X3].[X4].[X5].[X6]>	<^SHAR>
<#SPORT[5000]>	Set port number of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#SPORT5000>
<#SIPR[192]. [168]. [0]. [2]>	Set IP of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#SIPR192. 168. 0. 23>
<#GAR[192]. [168]. [0]. [1]>	Set gateway of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#GAR192. 168. 0. 11>
<#SUBR[255]. [255]. [255]. [0]>	Set subnet mask of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#SUBR255. 255. 255. 0>
<#SHAR[00]. [11]. [22]. [33]. [44]. [55]>	Set hardware address(hex) of matrix network(take effect after re-power)	<Set Network Succeeded!>	<#SHAR00. 11. 22. 33. 44. 55>
<#NETDEFAULT>	Network configuration restore to factory settings(take effect after re-power)	<Set Network Succeeded!>	<#NETDEFAULT>
Instructions to control preview boards			
<^HSPORT>	Query the port number of preview board network	<HSPORT:[X1]>	<^SPORT>
<^HSSIPR>	Query the IP of preview board network	<HSSIPR:[X1].[X2].[X3].[X4]>	<^SIPR>
<^HSSUBR>	Query the subnet mask of preview board network	<HSSUBR:[X1].[X2].[X3].[X4]>	<^SUBR>
<^HSGAR>	Query the gateway of preview board network	<HSGAR:[X1].[X2].[X3].[X4]>	<^GAR>

<^HSSHAR>	Query hardware address of preview board network	<HSHAR:[X1].[X2].[X3].[X4].[X5].[X6]>	<^SHAR>
<#HSSPORT[5000]>	Set port number of preview board network(take effect after re-power)	<Set Network Succeed!>	<#SPORT[5000]>
<#HSSIPR[192]. [168]. [0]. [2]>	Set IP of preview board network(take effect after re-power)	<Set Network Succeed!>	<#SIPR192. 168. 0. 23>
<#HSGAR [192]. [168]. [0]. [1]>	Set gateway of preview board network(take effect after re-power)	<Set Network Succeed!>	<#GAR192. 168. 0. 11>
<#HSSUBR [255]. [255]. [0]>	Set subnet mask of preview board network(take effect after re-power)	<Set Network Succeed!>	<#SUBR255. 255. 0>
<#HSSHAR [00]. [11]. [22]. [33]. [44]. [55]>	Set hardware address(hex) of preview board network(take effect after re-power)	<Set Network Succeed!>	<#SHAR0. 11. 22. 33. 44. 55>
<#HSNETDEFAULT>	Network configuration restore to factory settings	<Set Network Succeed!>	<#NETDEFAULT>
<^HSResolution1280*720>	Coding resolution of preview board is set as 1280*720	<Set Succeed!>	<^HSResolution1280*720>
<^HSResolution800*600>	Coding resolution of preview board is set as 800*600	<Set Succeed!>	<^HSResolution800*600>
<^HSResolution640*480>	Coding resolution of preview board is set as 640*480	<Set Succeed!>	<^HSResolution640*480>
<^HSResolution352*288>	Coding resolution of preview board is set as 352*288	<Set Succeed!>	<^HSResolution352*288>
<^HSResolution>	Query current resolution of preview board	<^HSResolution_is_1280*720> or <^HSResolution_is_800*600> or <^HSResolution_is_640*480> or <^HSResolution_is_352*288>	Multicast address is 224.1.1.1---224.1.1.2, the port is Port+2, Port+4, Port+6, Port+8 (Port is TCP linking port)
Instructions to switch infrared serial port			
[RX1]R[TY1].	Link serial port receiving channel [RX1] of input port to serial port sending channel [TY1] of output port (RS232 forward channel switching)	RS:[RX1]->[TY1];	1R2.
[RY1]S[TX1].	Link serial port receiving channel [RY1] of output port to serial port sending channel [TX1] of input port	TS:[RY1]->[TX1];	1S2.
[RX1]Q[TY1].	Link infrared receiving channel [RX1] of input port to infrared sending channel [TY1] of output port (IR forward channel switching)	IR:[RX1]->[TY1];	1Q2.

[RY1]F[TX1].	Link infrared receiving channel [RY1] of output port to infrared sending channel [TX1] of input port	TR:[RY1]->[TX1];	2F1.
[RX1]T[TY1].	Link serial port/infrared receiving channel [RX1] of input port to serial port/infrared sending channel [TY1] of output port (RS232/IR forward channel switching)	T:[RX1]->[TY1];	1T2.

Instructions to change single output resolution

[\$Y1]->800x600x60Hz!	Channel [Y1] output resolution is 800x600x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->800x600x60Hz!
[\$Y1]->1024x768x60Hz!	Channel [Y1] output resolution is 1024x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1024x768x60Hz!
[\$Y1]->1280x720x50Hz!	Channel [Y1] output resolution is 1280x720x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1280x720x50Hz!
[\$Y1]->1280x720x60Hz!	Channel [Y1] output resolution is 1280x720x60Hz	<Set Resolution Succeeded!>	\$1->1280x720x60Hz!
[\$Y1]->1280x768x60Hz!	Channel [Y1] output resolution is 1280x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1280x768x60Hz!
[\$Y1]->1280x800x60Hz!	Channel [Y1] output resolution is 1280x800x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1280x800x60Hz!
[\$Y1]->1280x960x60Hz!	Channel [Y1] output resolution is 1280x960x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1280x960x60Hz!
[\$Y1]->1280x1024x60Hz!	Channel [Y1] output resolution is 1280x1024x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1280x1024x60Hz!
[\$Y1]->1360x768x60Hz!	Channel [Y1] output resolution is 1360x768x60Hz (except SDI)	<Set Resolution Succeeded!>	\$1->1360x768x60Hz!
[\$Y1]->1366x768x60Hz!	Channel [Y1] output resolution is 1366x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1366x768x60Hz!
[\$Y1]->1440x900x60Hz!	Channel [Y1] output resolution is 1440x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1440x900x60Hz!
[\$Y1]->1600x900x60Hz!	Channel [Y1] output resolution is 1600x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1600x900x60Hz!
[\$Y1]->1600x1200x60Hz!	Channel [Y1] output resolution is 1600x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1600x1200x60Hz!

\$[Y1]->1920x1080x25Hz!	Channel [Y1] output resolution is 1920x1080x25Hz(SDI HDMI board is valid)	<Set Resolution Succeeded!>	\$1->1920x1080x25Hz!
\$[Y1]->1920x1080x30Hz!	Channel [Y1] output resolution is 1920x1080x30Hz(SDI HDMI board is valid)	<Set Resolution Succeeded!>	\$1->1920x1080x30Hz!
\$[Y1]->1920x1080x50Hz!	Channel [Y1] output resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$1->1920x1080x50Hz!
\$[Y1]->1920x1080x60Hz!	Channel [Y1] output resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$1->1920x1080x60Hz!
\$[Y1]->1920x1200x60Hz!	Channel [Y1] output resolution is 1920x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$1->1920x1200x60Hz!
\$[Y1]->1920x540x50Hz!	Channel [Y1] output resolution is 1920x540x50Hz(1920x1080ix50Hz)	<Set Resolution Succeeded!>	\$1->1920x540x50Hz!
\$[Y1]->1920x540x60Hz!	Channel [Y1] output resolution is 1920x540x60Hz(1920x1080ix60Hz)	<Set Resolution Succeeded!>	\$1->1920x540x60Hz!
Instructions to change all output resolution			
\$All->800x600x60Hz!	All channel resolution is 800x600x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->800x600x60Hz!
\$All->1024x768x60Hz!	All channel resolution is 1024x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1024x768x60Hz!
\$All->1280x720x50Hz!	All channel resolution is 1280x720x50Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x720x50Hz!
\$All->1280x720x60Hz!	All channel resolution is 1280x720x60Hz	<Set Resolution Succeeded!>	\$All->1280x720x60Hz!
\$All->1280x768x60Hz!	All channel resolution is 1280x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x768x60Hz!
\$All->1280x800x60Hz!	All channel resolution is 1280x800x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x800x60Hz!
\$All->1280x960x60Hz!	All channel resolution is 1280x960x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x960x60Hz!
\$All->1280x1024x60Hz!	All channel resolution is 1280x1024x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1280x1024x60Hz!
\$All->1360x768x60Hz!	All channel resolution is 1360x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1360x768x60Hz!
\$All->1366x768x60Hz!	All channel resolution is 1366x768x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1366x768x60Hz!
\$All->1440x900x60Hz!	All channel resolution is 1440x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1440x900x60Hz!
\$All->1600x900x60Hz!	All channel resolution is 1600x900x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1600x900x60Hz!

\$All->1600x1200x60Hz!	All channel resolution is 1600x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1600x1200x60Hz!
\$All->1920x1080x50Hz!	All channel resolution is 1920x1080x50Hz	<Set Resolution Succeeded!>	\$All->1920x1080x50Hz!
\$All->1920x1080x25Hz!	All channel resolution is 1920x1080x25Hz(SDI HDMI is valid)	<Set Resolution Succeeded!>	\$All->1920x1080x25Hz!
\$All->1920x1080x30Hz!	All channel resolution is 1920x1080x30Hz(SDI HDMI is valid)	<Set Resolution Succeeded!>	\$All->1920x1080x30Hz!
\$All->1920x540x50Hz!	All channel resolution is 1920x540x50Hz(1920x1080x50Hz)	<Set Resolution Succeeded!>	\$All->1920x540x50Hz!
\$All->1920x1080x60Hz!	All channel resolution is 1920x1080x60Hz	<Set Resolution Succeeded!>	\$All->1920x1080x60Hz!
\$All->1920x540x60Hz!	All channel resolution is 1920x540x60Hz(1920x1080x60Hz)	<Set Resolution Succeeded!>	\$All->1920x540x60Hz!
\$All->1920x1200x60Hz!	All channel resolution is 1920x1200x60Hz(except SDI)	<Set Resolution Succeeded!>	\$All->1920x1200x60Hz!

Instructions for VGA output board to output signals

Set channel Y1] output board as VGA output	<The Port Signal Setting Succeeded!>	\$1VGAOut!
Set channel Y1] output board as YUV output	<The Port Signal Setting Succeeded!>	\$1YUVOut!

Instructions to adjust VGA input/output signals (choose the channel before setting corresponding parameters VGA)

SetVGAIn[X1].	Set channel [X1] VGA input signal	<Set Succeeded!>	SetVGAIn1.
SetVGAOut[Y1].	Set channel [Y1] VGA output signal	<Set Succeeded!>	SetVGAOut1.
Bright[H].	Set brightness value of channel [X1] as H (VGA IN/OUT:50)(range from 0 to 100)	<Set Succeeded!>	Bright50.
Contrast[H].	Set contrast value of channel [X1] as H (VGA IN/OUT:50)(range from 0 to 100)	<Set Succeeded!>	Contrast50.
Saturation[H].	Set saturation value of channel [X1] as H (VGA IN:50)VGA input is valid (range from 0 to 100)	<Set Succeeded!>	Saturation50.
Sharp[H].	Set sharp value of channel [X1] as H (VGA IN:50)VGA input is valid (range from 0 to 100)	<Set Succeeded!>	Sharp50.
Red[H].	Set Red value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeeded!>	Red128.
Green[H].	Set Green value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeeded!>	Green128.
Blue[H].	Set Blue value of channel [X1] as H (VGA IN:128)VGA input is valid (range from 0 to 255)	<Set Succeeded!>	Blue128.

AutoConfig.	Set channel [X1] automatic adjustment (VGA input is valid)	<Set Succeed!>	AutoConfig.
HPosUp.	Set channel [X1] horizontal position +1 (VGA input is valid)	<Set Succeed!>	HPosUp.
HPosDown.	Set channel [X1] horizontal position -1 (VGA input is valid)	<Set Succeed!>	HPosDown.
VPosUp.	Set channel [X1] vertical position +1 (VGA input is valid)	<Set Succeed!>	VPosUp.
VPosDown.	Set channel [X1] vertical position -1 (VGA input is valid)	<Set Succeed!>	VPosDown.
HSizeUp.	Set channel [X1] horizontal size +1 (VGA input is valid)	<Set Succeed!>	HSizeUp.
HSizeDown.	Set channel [X1] horizontal size -1 (VGA input is valid)	<Set Succeed!>	HSizeDown.
VSizeUp.	Set channel [X1] vertical size +1 (VGA input is valid)	<Set Succeed!>	VSizeUp.
VSizeDown.	Set channel [X1] vertical size -1 (VGA input is valid)	<Set Succeed!>	VSizeDown.
PosReset.	Set channel [X1] video position reset (VGA input is valid)	<Set Succeed!>	PosReset.

4.2 Splicer instructions

instructions (pc-->MAX72)	Functions	Returned information
<#MARGIN[X1],[x1]>	Screen spacing of video wall: [X1]: video wall identification [x1]: screen spacing	<Set Succeed!>
<#MAP[X1],[x1],[x2]>	Window x1 of video wall x mapped to output port x2	<Set Succeed!>
<#SIZE[X1],[x1],[x2]>	Window size of PC: [X1]: video wall identification [x1]: horizontal size [x2]: vertical size	<Set Succeed!>
<#VIR[X1],[x1],[x2]>	Window array of PC: [X1]: video wall identification [x1]: number of horizontal windows [x2]: number of vertical windows	<Set Succeed!>
<#OPEN[X1],[x1],[x2],[x3],[x4],[x5],[x6],[x7]>	Setting parameters of opening new windows: [X1]: video wall identification [x1]: window identification [x2]: input source [x3]: layer number [x4]: window horizontal position [x5]: window vertical position [x6]: window horizontal length [x7]: window vertical length	<Set Succeed!>
<#MOVE[X1],[x1],[x2],[x3]>	Setting parameters of moving windows: [X1]: video wall identification [x1]: window identification [x2]: window horizontal position [x3]: window vertical position	<Set Succeed!>

<#RESIZE[X1],[x1],[x2],[x3],[x4],[x5]>	Setting parameters of stretching windows: [X1]:video wall identification [x1]: window identification [x2]: window horizontal position [x3]:window vertical position [x4]: window horizontal size [x5]: window vertical size	<Set Succeed!>
<#LAYER[X1],[x1],[x2]>	Setting parameters of window layers:[X1]:video wall identification [x1]: window identification [x2]: layer number	<Set Succeed!>
<#CLOSE[X1],[x1]>	Window closing setting: [X1]: video wall identification [x1]: window identification	<Set Succeed!>
<^JOINT>	Query spicing state of all video walls	<OPEN[X1],[x1],[x2],[x3],[x4],[x5],[x6],[x7]>
<^SIZE>	Query window size of PC	<SIZE[X1],[x1],[x2]>
<^VIR>	Query window array of PC	<VIR[X1],[x1],[x2]>
<^MAP>	Query mapping relation	<MAP[X1],[x1],[x2]>
<^MARGIN>	Query the setting parameters of screen pitch	<MARGIN[X1],[x1]>


Chapter Five Software

5.1 Connection

1. Connect your PC to the Matrix on Ethernet by CAT5 cable for TCP/IP communication.

The default IP of matrix:192.168.1.190 Port:6666


2. Please set your PC as the bellowing IP

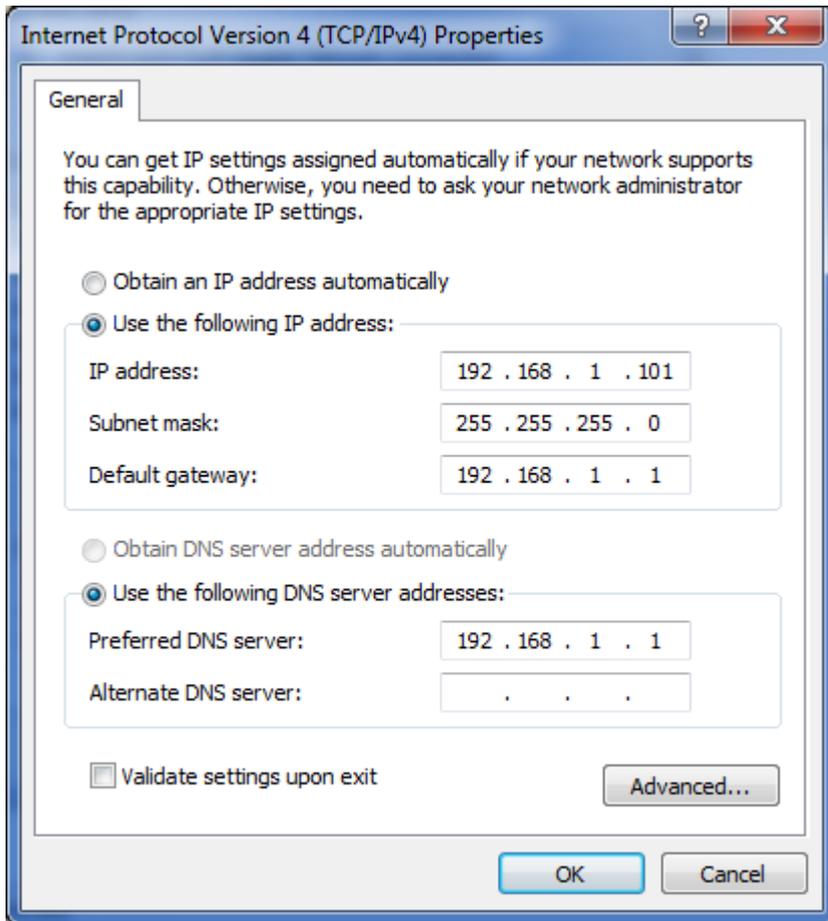

3.Lauch the software




You will get the login interface as bellowing,

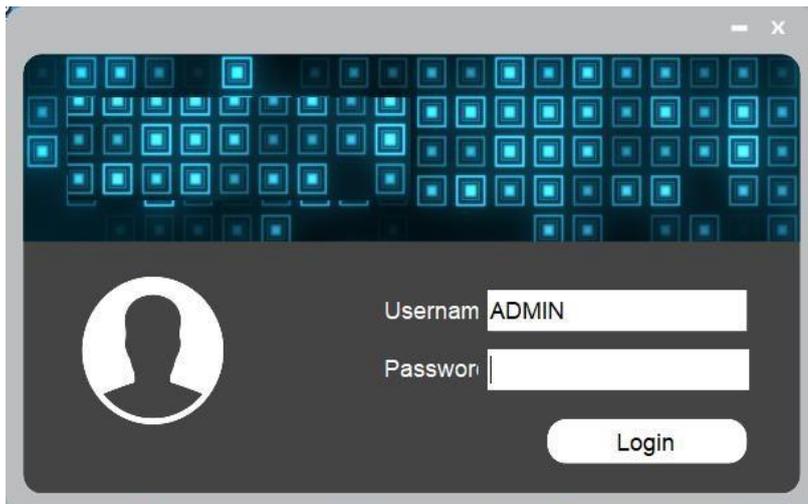


User name:ADMIN

Password: admin

4.Click 'Connect' to connection.

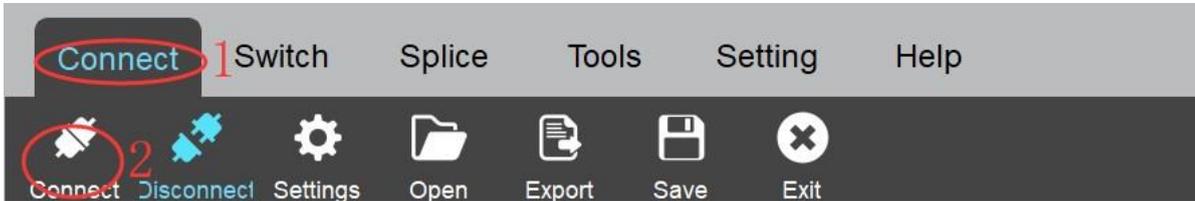


Connection status will display on the top bar

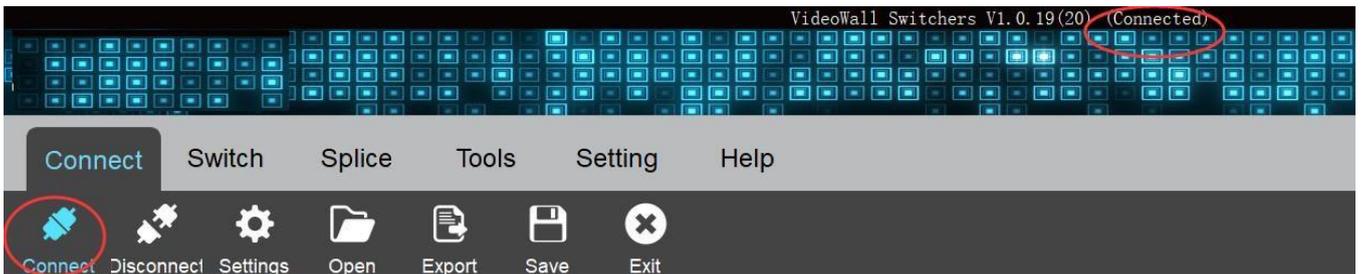


5.2 Interface introduction


Click 'Splice' menu and select the 'Wall 1' as bellowing picture

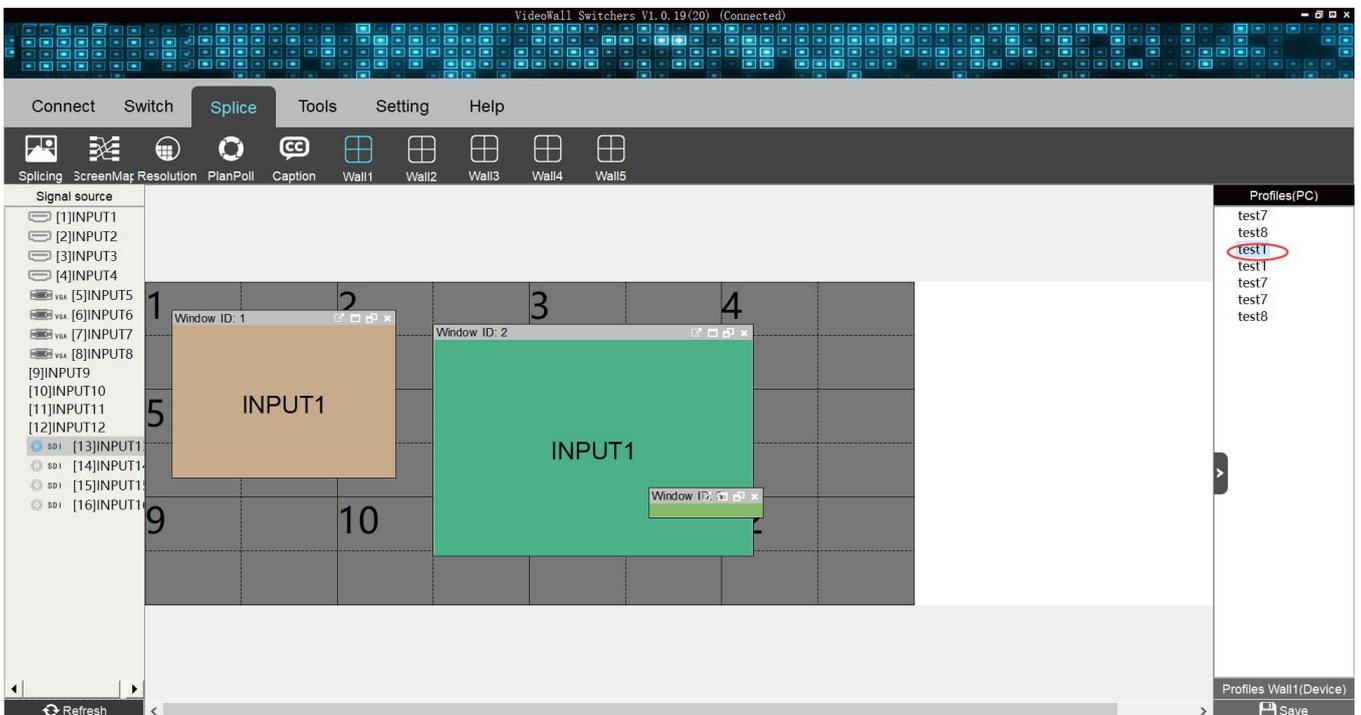


Overview

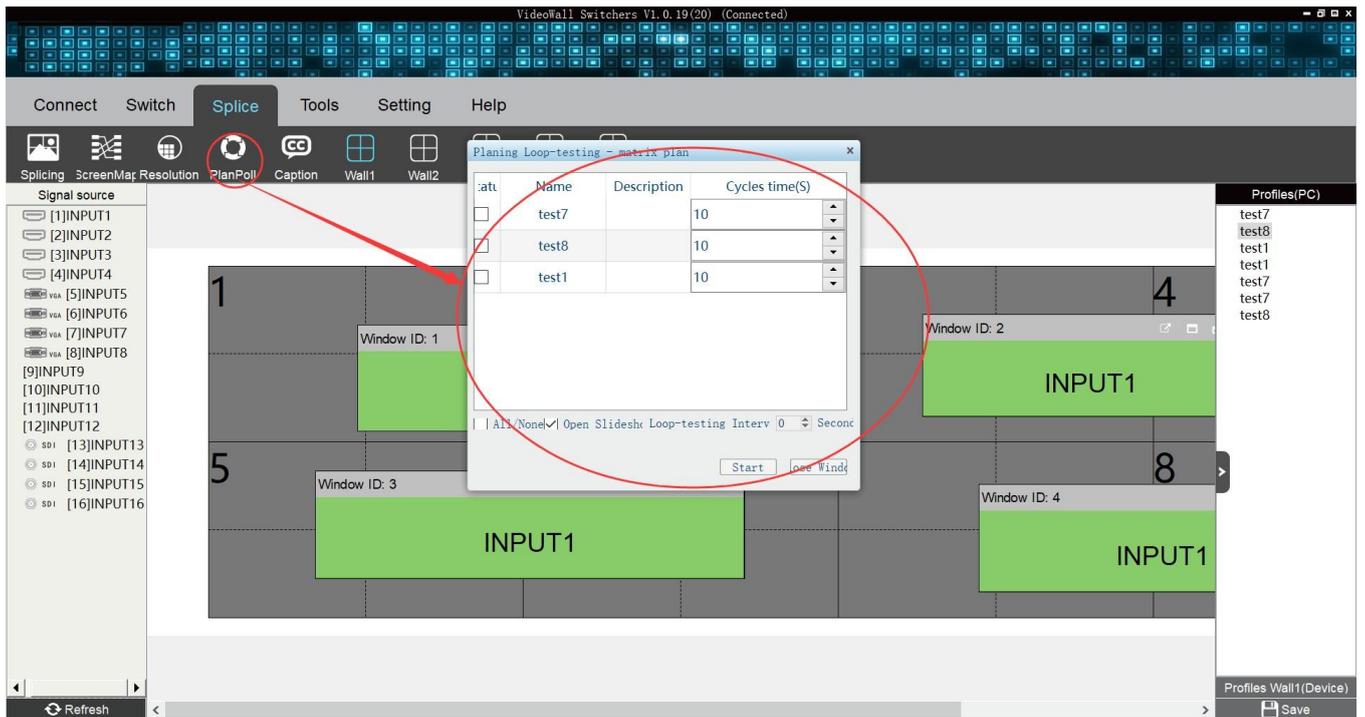


Splicing to set the panel quantity for row and column

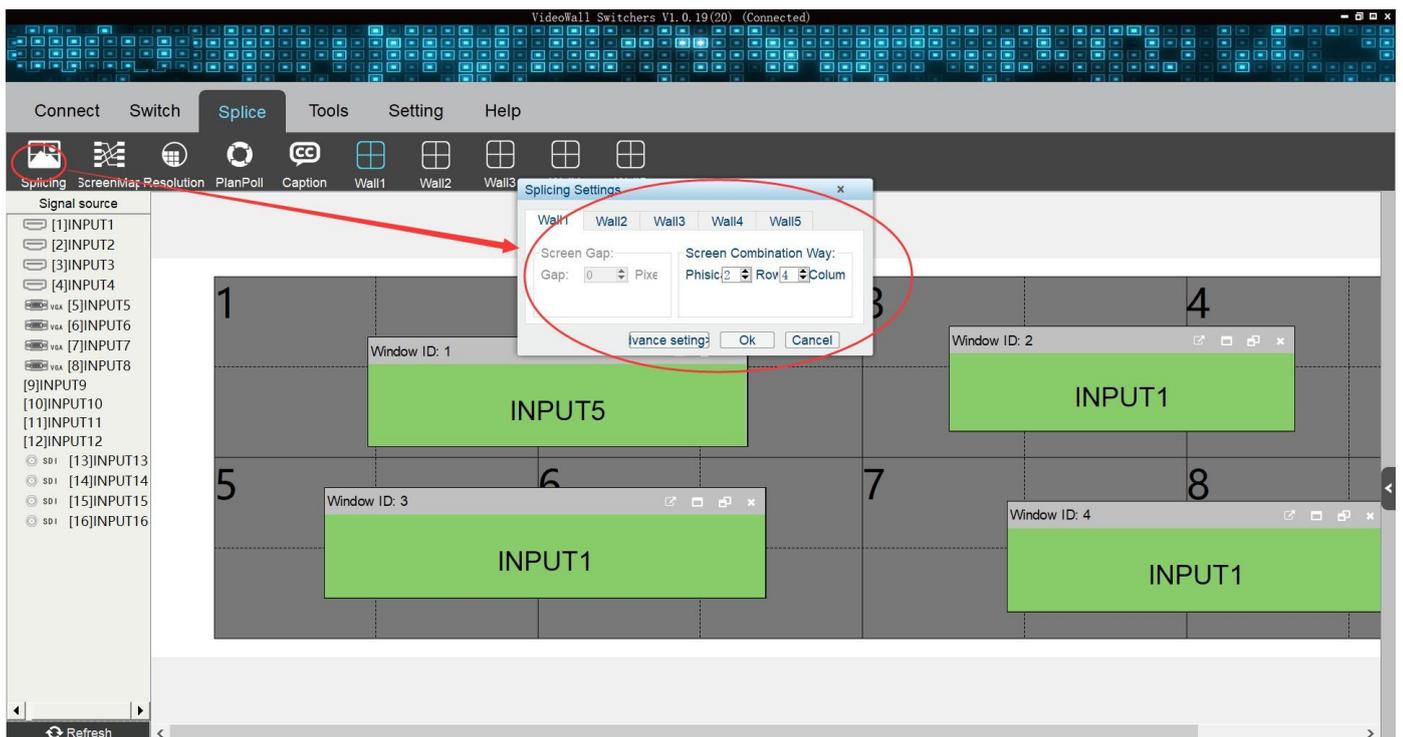


Need to set screen map first

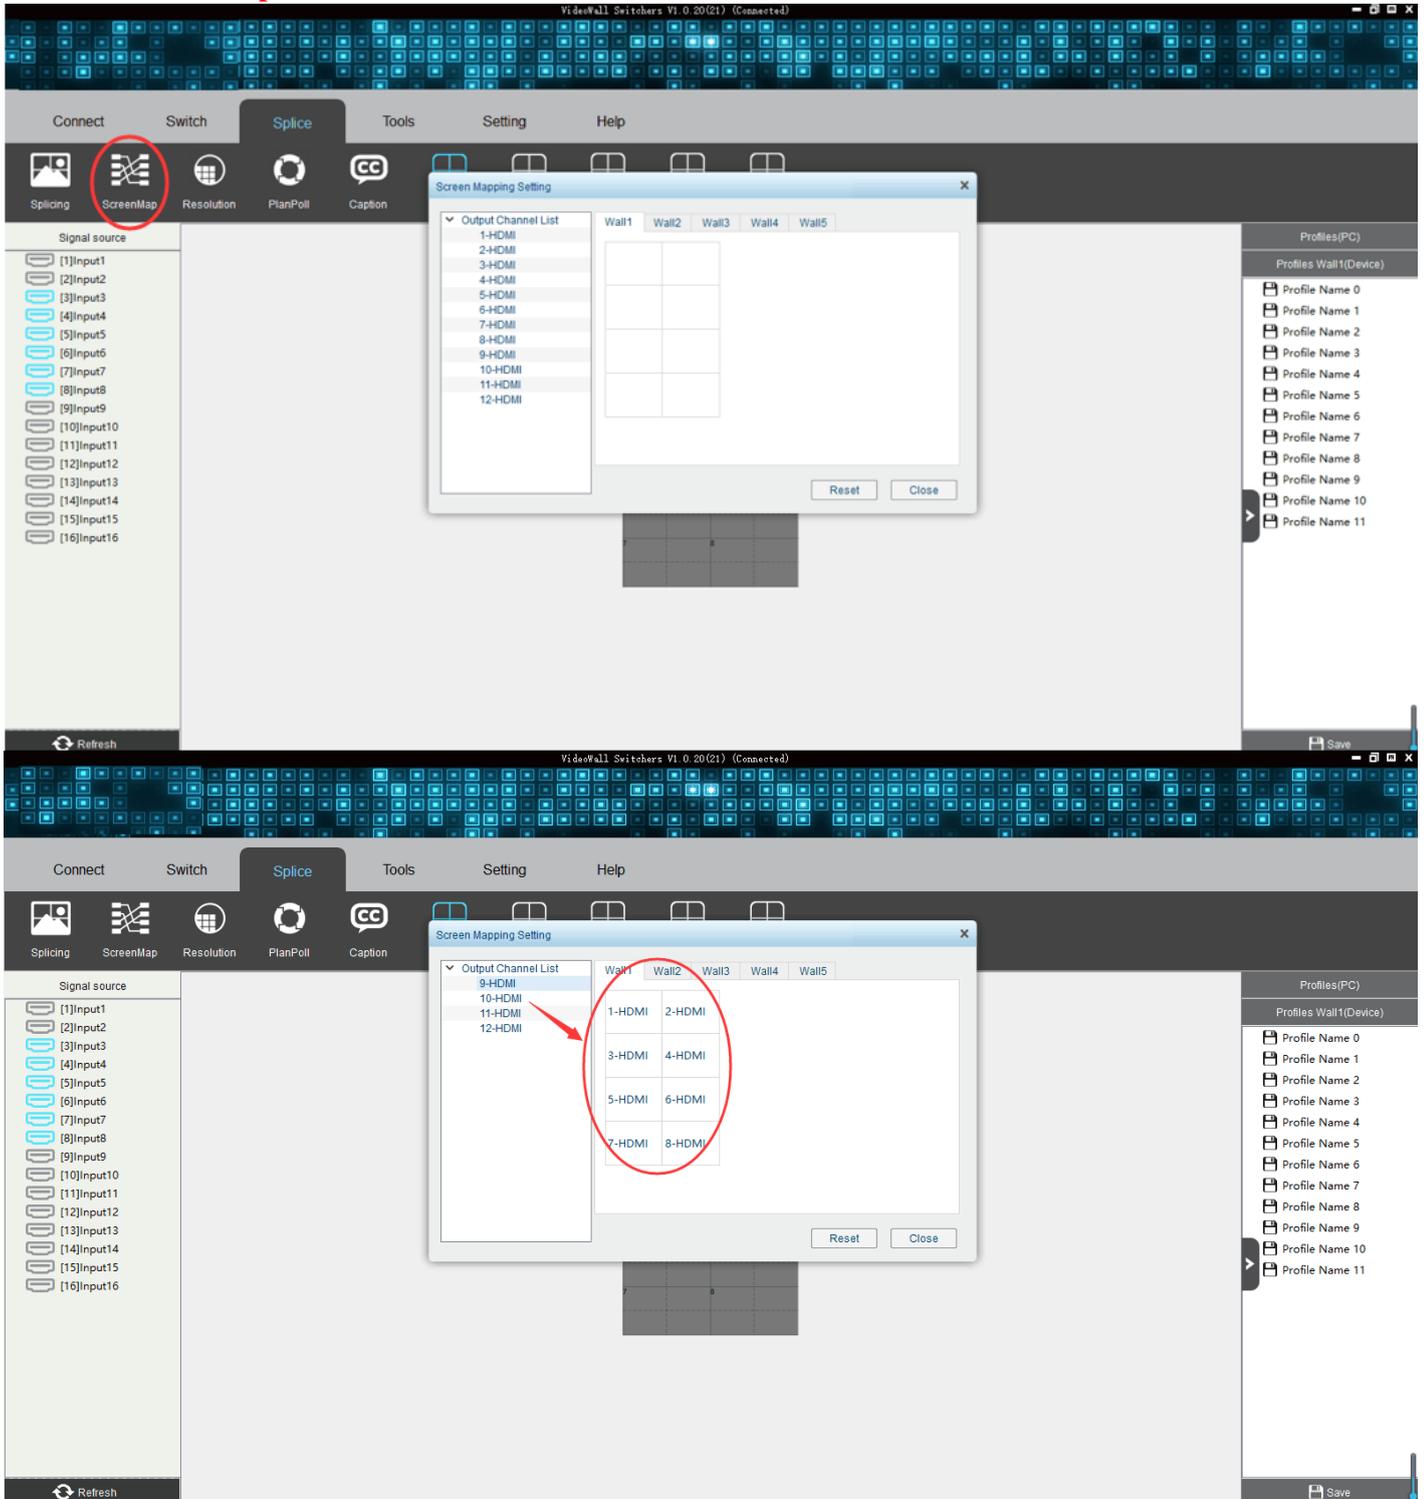


Resolution to set the display resolution for the panel

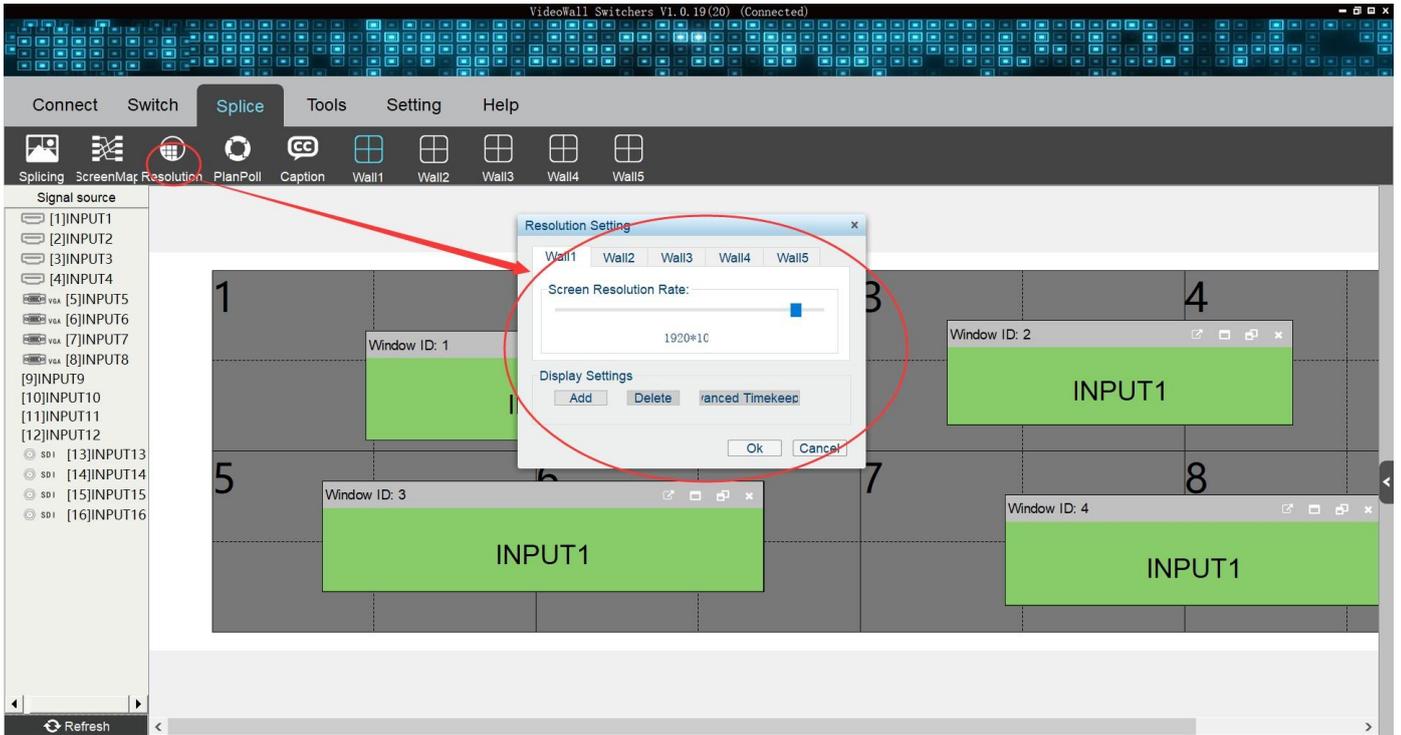

PlanRoll for switching profiles automatically

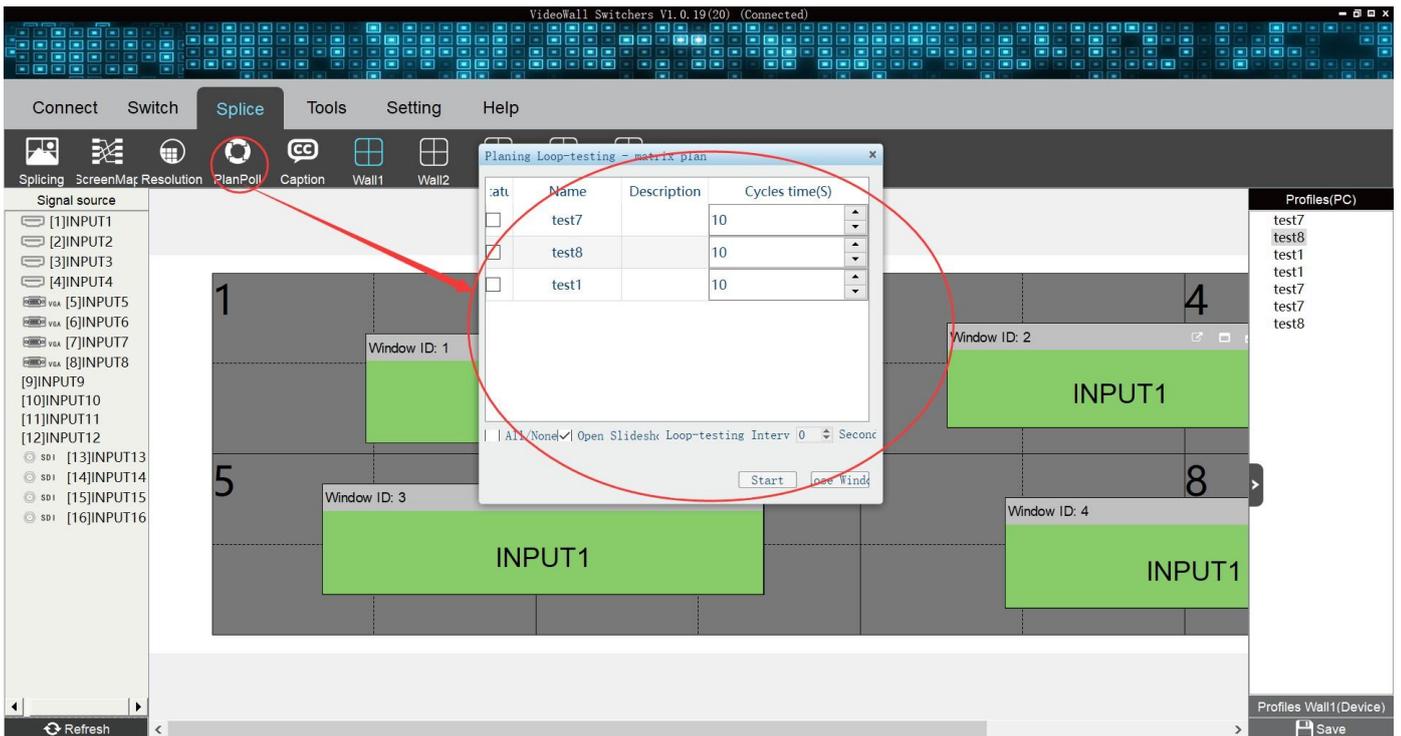


5.3 Drag &Drop to change the video source

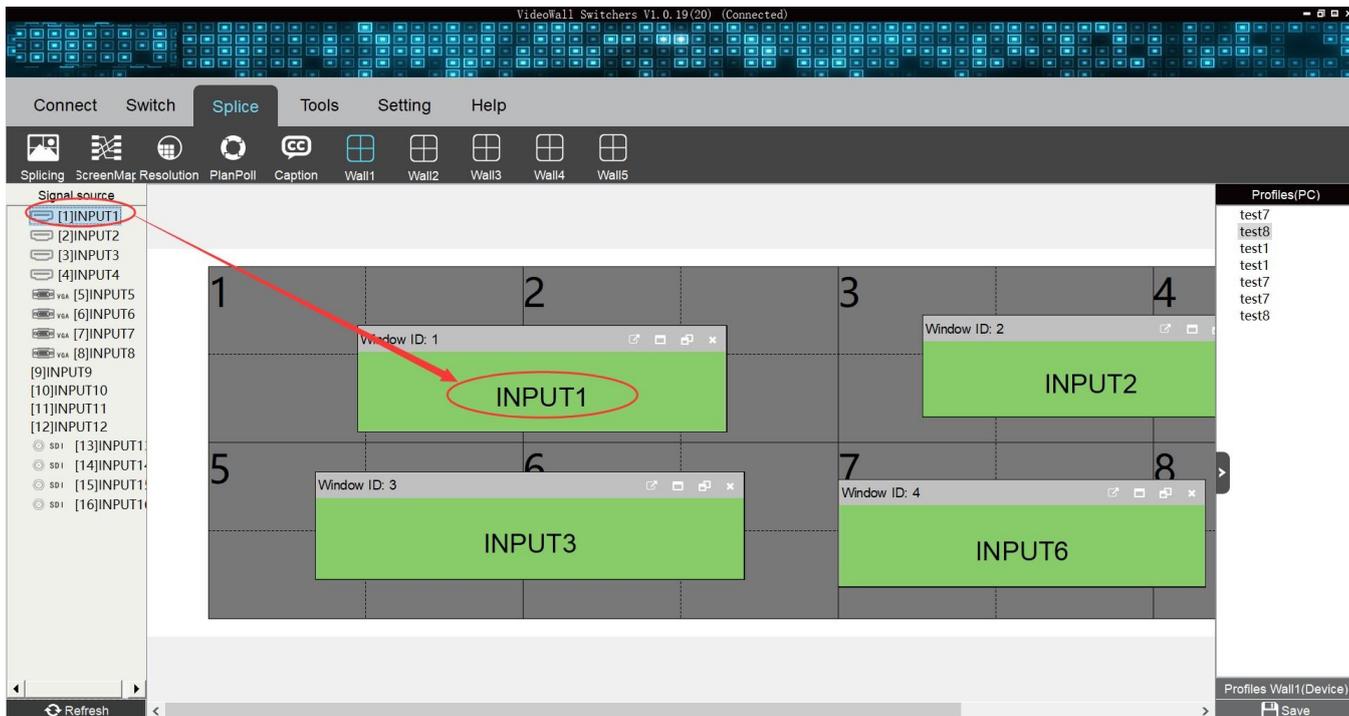


5.4 Change the output window size

The window can be freely moved and resize as you want.

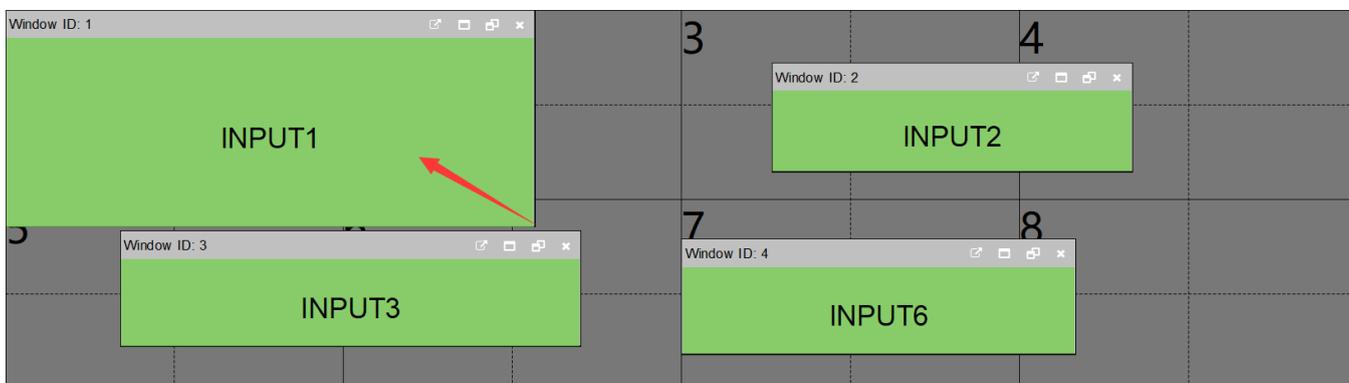


5.5 Save and Call the profile

Click the Save button to save the current status as profile on the PC or Device.

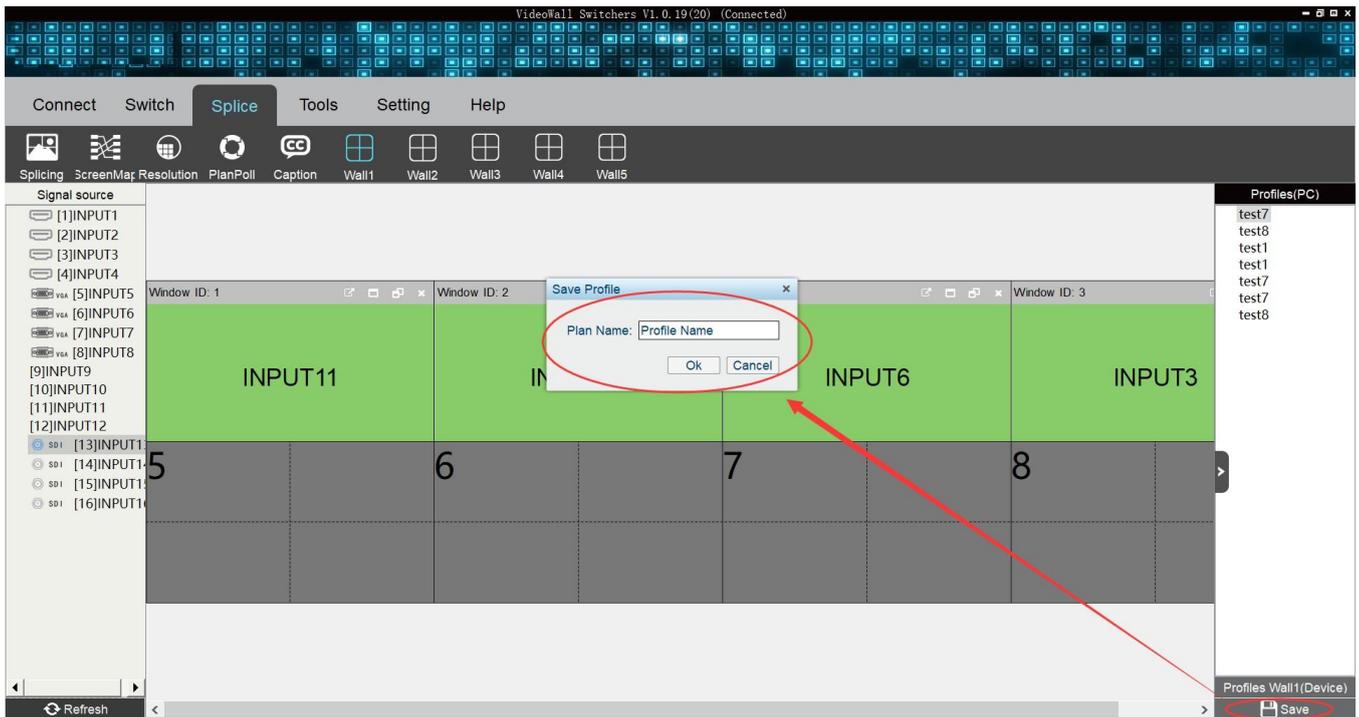

Double-click the profile to call the profile as current status.

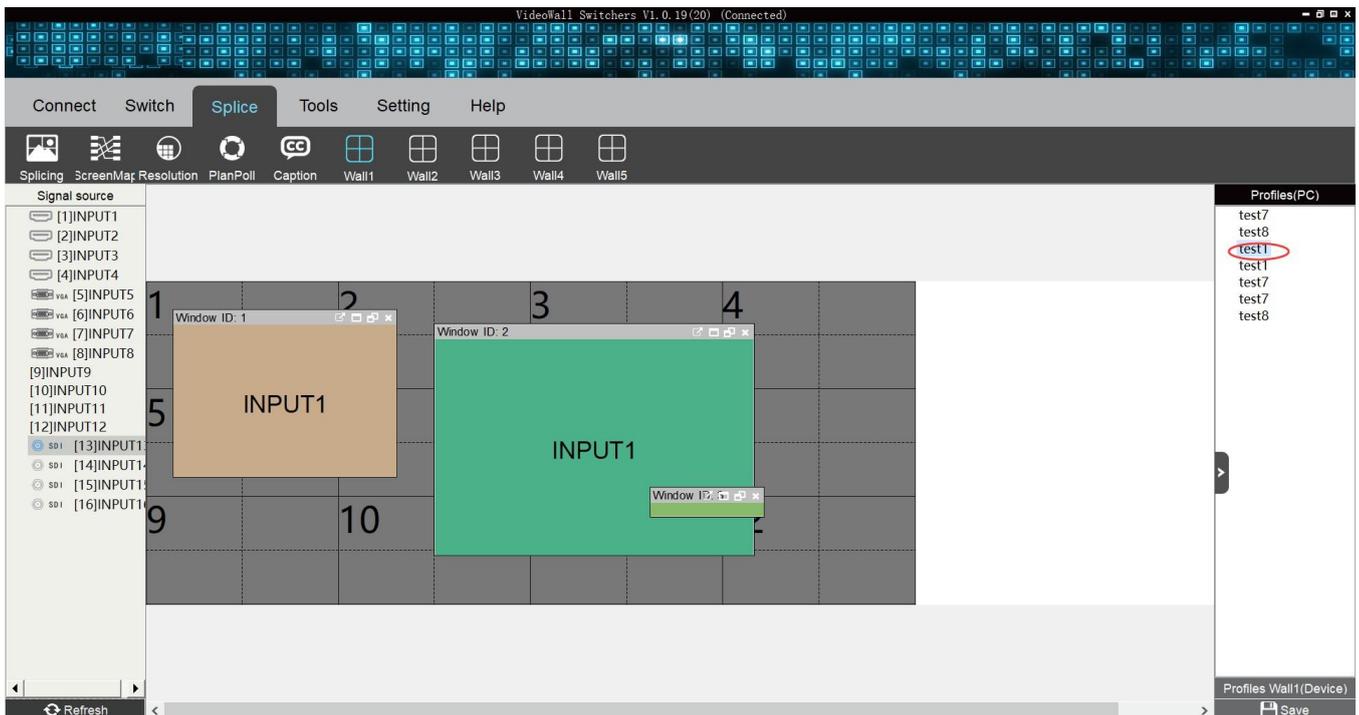

5.6 Matrix switching control(Seamless output card is needed)

